

HIGH/LOW SELECTOR SGH INSTRUCTION MANUAL



Shinho

Preface

Thank you for purchasing our SGH, High/Low Selector. This manual contains instructions for the mounting, functions, operations and notes when operating the SGH. To prevent accidents arising from the misuse of this instrument, please ensure the operator receives this manual.

Notes

- This instrument should be used in accordance with the specifications described in the manual. If it is not used according to the specifications, it may malfunction or cause a fire.
- Be sure to follow the warnings, cautions and notices. If they are not observed, serious injury or malfunction may occur.
- The contents of this instruction manual are subject to change without notice.
- Care has been taken to ensure that the contents of this instruction manual are correct, but if there are any doubts, mistakes or questions, please inform our sales department.
- This instrument is designed to be installed on a DIN rail within a control panel. If it is not, measures must be taken to ensure that the operator does not touch power terminals or other high voltage sections.
- Any unauthorized transfer or copying of this document, in part or in whole, is prohibited.
- Shinko Technos Co., Ltd. is not liable for any damage or secondary damage(s) incurred as a result of using this product, including any indirect damage.

SAFETY PRECAUTIONS (Be sure to read these precautions before using our products.)

The safety precautions are classified into categories: "Warning" and "Caution".

Depending on circumstances, procedures indicated by  Caution may result in serious consequences, so be sure to follow the directions for usage.



Warning

Procedures which may lead to dangerous conditions and cause death or serious injury, if not carried out properly.



Caution

Procedures which may lead to dangerous conditions and cause superficial to medium injury or physical damage or may degrade or damage the product, if not carried out properly.



Warning

- To prevent an electrical shock or fire, only Shinko or qualified service personnel may handle the inner assembly.
- To prevent an electrical shock, fire, or damage to instrument, parts replacement may only be undertaken by Shinko or qualified service personnel.



Safety Precautions

- To ensure safe and correct use, thoroughly read and understand this manual before using this instrument.
- This instrument is intended to be used for industrial machinery, machine tools and measuring equipment. Verify correct usage after purpose-of-use consultation with our agency or main office. (Never use this instrument for medical purposes with which human lives are involved.)
- External protection devices such as protective equipment against excessive temperature rise, etc. must be installed, as malfunction of this product could result in serious damage to the system or injury to personnel. Proper periodic maintenance is also required.
- This instrument must be used under the conditions and environment described in this manual. Shinko Technos Co., Ltd. does not accept liability for any injury, loss of life or damage occurring due to the instrument being used under conditions not otherwise stated in this manual.



Caution with Respect to Export Trade Control Ordinance

To avoid this instrument from being used as a component in, or as being utilized in the manufacture of weapons of mass destruction (i.e. military applications, military equipment, etc.), please investigate the end users and the final use of this instrument. In the case of resale, ensure that this instrument is not illegally exported.

■ Installation Precautions



Caution

This instrument is intended to be used under the following environmental conditions (IEC61010-1): Overvoltage category II, Pollution degree 2

Ensure the mounting location corresponds to the following conditions:

- A minimum of dust, and an absence of corrosive gases
- No flammable, explosive gases
- No mechanical vibrations or shocks
- No exposure to direct sunlight, an ambient temperature of -10 to 55°C (14 to 131°F) that does not change rapidly, and no icing
- An ambient non-condensing humidity of 35 to 85 %RH
- No large capacity electromagnetic switches or cables through which large current is flowing
- No water, oil, chemicals or the vapors of these substances can come into direct contact with the unit.
- When installing this unit within a control panel, please note that ambient temperature of this unit – not the ambient temperature of the control panel – must not exceed 55°C (131°F). Otherwise the life of electronic components (especially electrolytic capacitor) may be shortened.

Note: Avoid setting this instrument directly on or near flammable material even though the case of this instrument is made of flame-resistant resin.

■ Wiring Precautions



Caution

- Do not leave bits of wire in the instrument, because they could cause a fire and malfunction.
- When wiring, use a crimping pliers and a solderless terminal with an insulation sleeve in which an M3 screw fits.
- Tighten the terminal screw using the specified torque. If excessive force is applied to the screw when tightening, the screw or case may be damaged.
- This instrument does not have a built-in power switch, circuit breaker and fuse. It is necessary to install a power switch, circuit breaker and fuse near the instrument. (Recommended fuse: Time-lag fuse, rated voltage 250 V AC, rated current 2 A)
- For wiring of the AC power source, be sure to use terminals as described in this manual. If the AC power source is connected to incorrect terminals, the unit will be burnt out.
- Do not apply a commercial power source to the sensor which is connected to the input terminal nor allow the power source to come into contact with the sensor.
- When using DC voltage and current input, do not confuse polarity when wiring.
- Keep the input/output wires and power lines separate.

■ Operation and Maintenance Precautions



Caution

- Do not touch live terminals. This may cause an electrical shock or problems in operation.
- Turn the power supply to the instrument OFF when retightening the terminal or cleaning. Working on or touching the terminal with the power switched ON may result in severe injury or death due to electrical shock.
- Use a soft, dry cloth when cleaning the instrument. (Alcohol based substances may tarnish or deface the unit.)
- As the display section is vulnerable, be careful not to put pressure on, scratch or strike it with a hard object.

Characters used in this manual [X : No character is indicated (unlit).]


Indication	1	0	1	2	3	4	5	6	7	8	9	℃	℉
Number, °C/°F	-1	0	1	2	3	4	5	6	7	8	9	°C	°F
Indication	A	b	C	d	E	F	G	H	I	J	K	L	M
Alphabet	A	B	C	D	E	F	G	H	I	J	K	L	M
Indication	N	o	P	Q	R	S	T	U	V	W	X	Y	Z
Alphabet	N	O	P	Q	R	S	T	U	V	W	X	Y	Z

CONTENTS

	Page
1. Model	5
1.1 Model	5
1.2 How to Read the Model Label	6
2. Name and Functions	7
2.1 Front Panel	7
2.2 Display Section	8
3. Mounting	9
3.1 External Dimensions (Scale: mm)	9
3.2 Mounting to, and Removal from the DIN Rail	10
4. Wiring	11
4.1 Lead Wire Solderless Terminal	11
4.2 Circuit Configuration	11
4.3 Terminal Arrangement	12
4.4 Wiring	12
5. Display Mode	13
6. Setting Mode	15
6.1 Display Transition in Setting Mode	15
6.2 Input Setting Mode	17
6.3 Output Setting Mode	19
6.4 Instrument Setting Mode	21
6.5 Custom Display Setting Mode	23
6.6 Manual Mode	23
7. Adjustment	24
7.1 Basic Operation of Adjustment	24
7.2 Adjustment	24
7.2.1 Output Adjustment	24
8. Operation	25
8.1 Indication after Power-on	25
8.2 Operation	25
8.2.1 Input Indication Range	25
8.2.2 Output Indication Range	25
8.2.3 Input Disconnection Status	25
8.2.4 Indication Time Setting	26
9. Specifications	27
10. Troubleshooting	29
10.1 Indication	29
10.2 Key Operation	29
10.3 Operation	29
11. Character Table	30

1. Model

1.1 Model

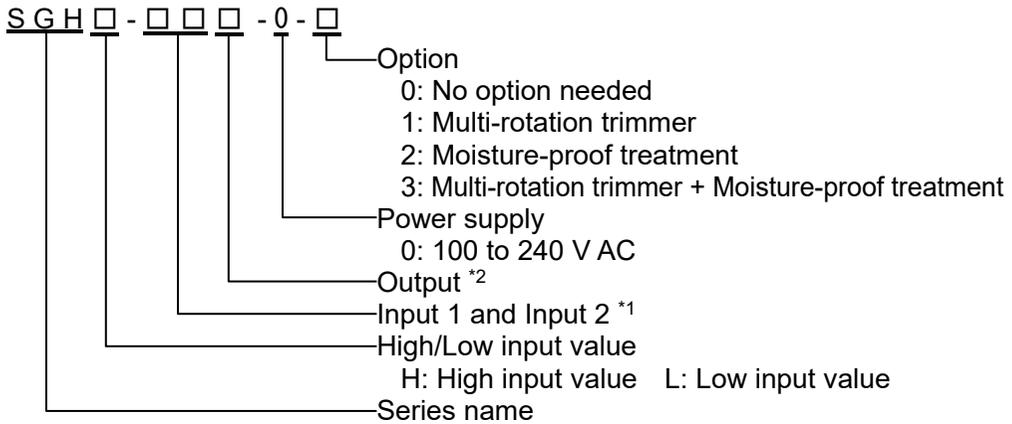

*1: Input (Input 1 and Input 2 are the same type.)


Code	Input Type		Code	Input Type	
A0	Direct current	4 to 20 mA (Built-in 50 Ω shunt resistor)	V0	DC voltage	0 to 10 mV (1 MΩ input resistance)
A1		4 to 20 mA (250 Ω shunt resistor)	V1		0 to 50 mV (1 MΩ input resistance)
A2		4 to 20 mA (50 Ω shunt resistor)	V2		0 to 60 mV (1 MΩ input resistance)
A3		0 to 20 mA (250 Ω shunt resistor)	V3		0 to 100 mV (1 MΩ input resistance)
A4		0 to 16 mA (62.5 Ω shunt resistor)	V4		0 to 1 V (1 MΩ input resistance)
A5		2 to 10 mA (250 Ω shunt resistor)	V5		0 to 5 V (1 MΩ input resistance)
A6		0 to 10 mA (100 Ω shunt resistor)	V6		1 to 5 V (1 MΩ input resistance)
A7		1 to 5 mA (100 Ω shunt resistor)	V7		-5 to 5 V (1 MΩ input resistance)
A8		0 to 1 mA (1000 Ω shunt resistor)	V8		0 to 10 V (1 MΩ input resistance)
A9		10 to 50 mA (10 Ω shunt resistor)	V9		-10 to 10 V (1 MΩ input resistance)

*2: Output

Code	Output Type		Code	Output Type	
1	Current output	4 to 20 mA	A	Voltage output	0 to 10 mV
2		0 to 20 mA	B		0 to 100 mV
3		0 to 16 mA	C		0 to 1 V
4		2 to 10 mA	D		0 to 5 V
5		0 to 10 mA	E		1 to 5 V
			F		0 to 10 V
			G		-5 to 5 V

1.2 How to Read the Model Label


The model label is attached to the left side of the case.

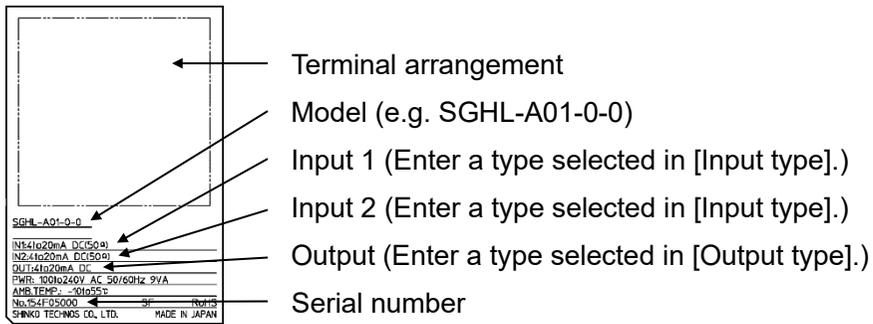

(Fig. 1.2-1)

2. Name and Functions


2.1 Front Panel

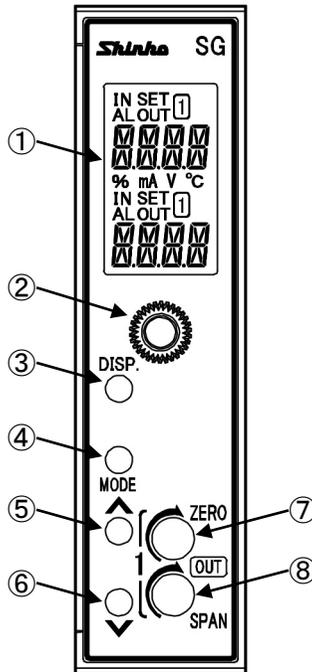

(Fig. 2.1-1)

①	Display section	Indicates setting contents, input value, output value, etc.
②	Mounting screw	Used for fixing the instrument to the socket or removal from it.
③	DISP key	Switches the displays, and moves to the next setting item. Releases the lock status of the DISP key by pressing for 3 seconds.
④	MODE key	Selects either a setting mode or a display mode. Shifts the digit for the Custom Display. Enters the setting mode by pressing and holding for 5 seconds.
⑤	UP key	Increases the numerical value. Contents of Multi-Display A and B can be changed alternately when Default Display is RUN display mode 1, 2, 3, 4, 5 and 6.
⑥	DOWN key	Decreases the numerical value. Enters Manual mode by pressing for 3 seconds.
⑦	Output Zero	Adjusts the value of Output Zero.
⑧	Output Span	Adjusts the value of Output Span.

2.2 Display Section

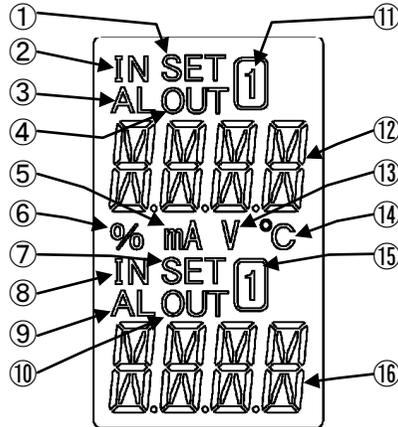


(Fig. 2.2-1)

①	Setting display indicator A	Lights up in Manual mode.
②	Input indicator A	Lights up when Multi-Display A indicates an input value.
③	Alarm indicator A	Lights up if an input error or input disconnection occurs while Multi-Display A indicates an input value.
④	Output indicator A	Lights up when Multi-Display A indicates an output value.
⑤	mA indicator	Lights up when mA is selected in [Indication unit].
⑥	% indicator	Lights up when % is selected in [Indication unit].
⑦	Setting display indicator B	Lights up for the setting display.
⑧	Input indicator B	Lights up when Multi-Display B indicates an input value.
⑨	Alarm indicator B	Lights up if an input error or input disconnection occurs while Multi-Display B indicates an input value.
⑩	Output indicator B	Lights up when Multi-Display B indicates an output value.
⑪	1 indicator A	Lights up when Multi-Display A indicates an input value, output value, Input setting display or Output setting display. Is turned OFF when Multi-Display A indicates custom characters.
⑫	Multi-Display A	Indicates the following in accordance with the display indication: Input value, output value, custom characters, setting item
⑬	V indicator	Lights up when V is selected in [Indication unit].
⑭	°C indicator	Lights up when °C is selected in [Indication unit].
⑮	1 indicator B	Lights up when Multi-Display B indicates an input value, output value, Input setting display or Output setting display. Is turned OFF when Multi-Display B indicates custom characters.
⑯	Multi-Display B	Indicates the following in accordance with the display indication: Input value, output value, custom characters, setting value


Output indicators A and B, Alarm indicators A and B: Red
Other indicators: White

3. Mounting

3.1 External Dimensions (Scale: mm)

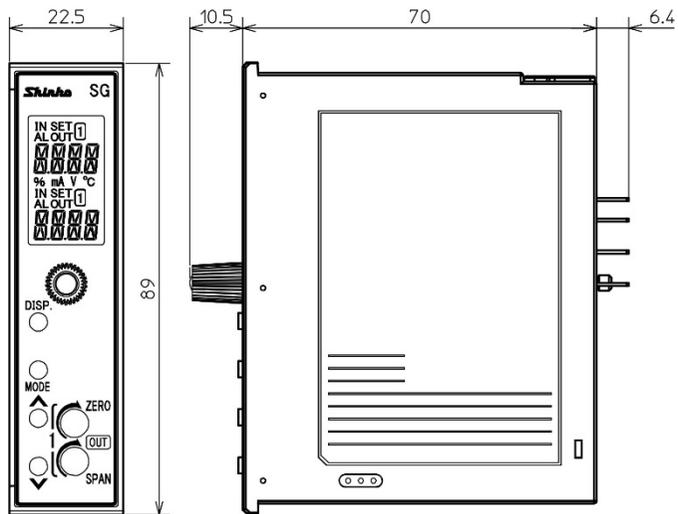

8P socket

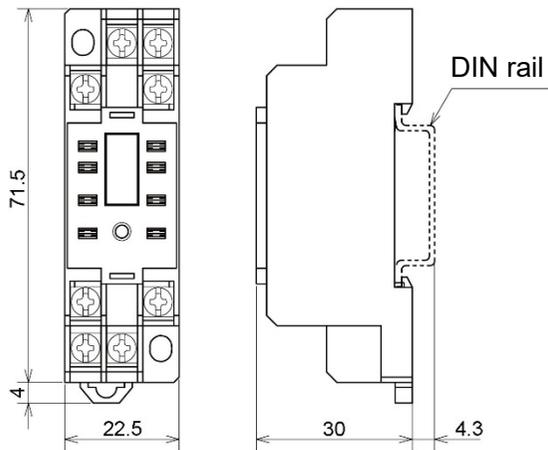

(Fig. 3.1-1)

3.2 Mounting to, and Removal from the DIN Rail



Caution

- Mount the DIN rail horizontally.
- To remove the socket, a flat blade screwdriver is required.
Never turn the screwdriver when inserting it into the Lock lever. If excessive power is applied to the lever, it may break.
- If the instrument is mounted in a position susceptible to vibration or shock, mount commercially available fastening plates at both ends of the instrument.

Recommended Fastening Plate

Manufacturer	Model
Omron Corporation	End plate PFP-M
IDEC Corporation	Fastening plate BNL6
Panasonic Electric Works Co., Ltd.	Fastening plate ATA4806

Mounting to the DIN rail (Fig. 3.2-1)

- ① Separate the instrument from the socket by loosening the mounting screw on the front panel.
- ② Make sure the lock lever of the socket is located in the lower part of the socket.
Hook the upper side of the socket onto the DIN rail, then fit the lower part of the socket onto the DIN rail (A clicking sound should be heard when done properly).




Caution

- Before inserting the instrument to the socket, make sure the cable is wired properly. (Refer to “4. Wiring”.)
- When inserting or removing the socket, make sure the socket is oriented vertically. If force is applied in any other direction than vertically, a malfunction may occur.
- If the mounting screw is fastened too tightly, a malfunction may occur.


- ③ Insert the SGH into the socket.
- ④ Fasten the mounting screw by turning it clockwise, to secure the SGH onto the socket. Tighten the screw lightly.

Removal from the DIN rail (Fig. 3.2-2)

- ① Turn the power to the instrument OFF.
- ② Separate the instrument from the socket by loosening the mounting screw on the front panel.
- ③ Insert a flat blade screwdriver into the Lock lever (lower part of the socket), and remove the socket from the DIN rail while pulling the lever down.

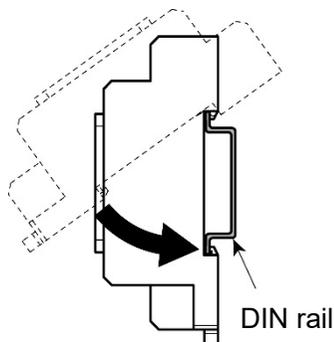

(Fig. 3.2-1)

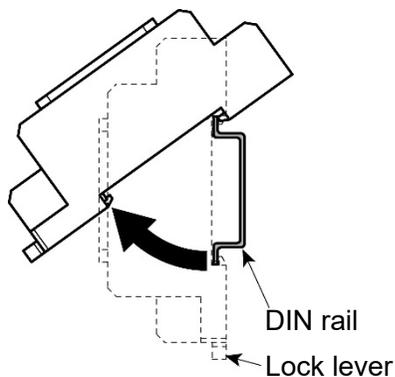

(Fig. 3.2-2)

4. Wiring



Warning


Turn the power supply to the instrument off before wiring or checking. Working on or touching the terminal with the power switched on may result in severe injury or death due to electrical shock.

4.1 Lead Wire Solderless Terminal

Use a solderless terminal with an insulation sleeve in which an M3 screw fits as shown below. The torque should be 0.63 N•m.


Solderless Terminal	Manufacturer	Model
Y-type	Nichifu Terminal Industries Co., Ltd.	TMEV1.25Y-3
	Japan Solderless Terminal MFG Co., Ltd.	VD1.25-B3A
Ring-type	Nichifu Terminal Industries Co., Ltd.	TMEV1.25-3
	Japan Solderless Terminal MFG Co., Ltd.	V1.25-3

Y-type(Scale: mm)

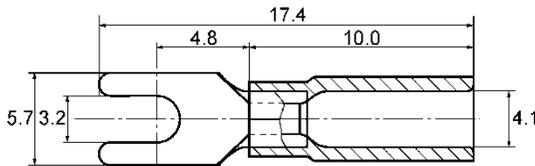


(Fig. 4.1-1)

Ring-type(Scale: mm)

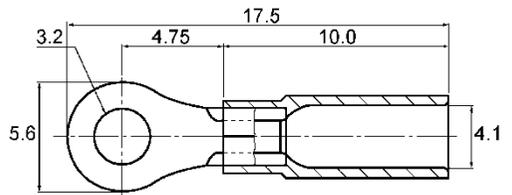


(Fig. 4.1-2)

4.2 Circuit Configuration

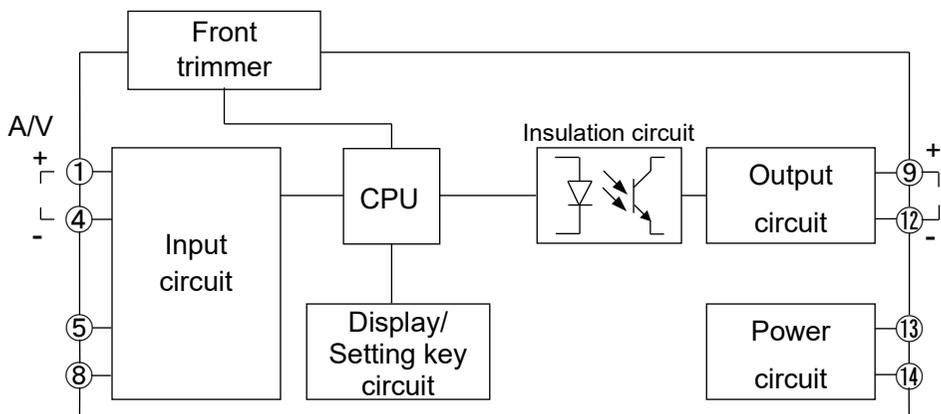

(Fig. 4.2-1)

4.3 Terminal Arrangement

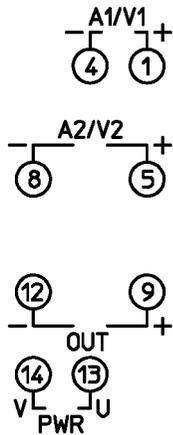

(Fig. 4.3-1)

PWR	Power supply voltage 100 to 240 V AC
OUT	Output
A1, A2	Direct current input
V1, V2	DC voltage input

4.4 Wiring



Warning

- If the AC power source is connected to incorrect terminals, the instrument will be burnt out.

(1) Power Source Wiring

Use terminals ⑬, ⑭ for the power supply to the instrument.


(2) Output Wiring

Use terminals ⑨(+), ⑫(-) for the output wiring.

(3) Input Wiring

Use terminals ①, ④, ⑤, ⑧ for input wiring.

5. Display Mode

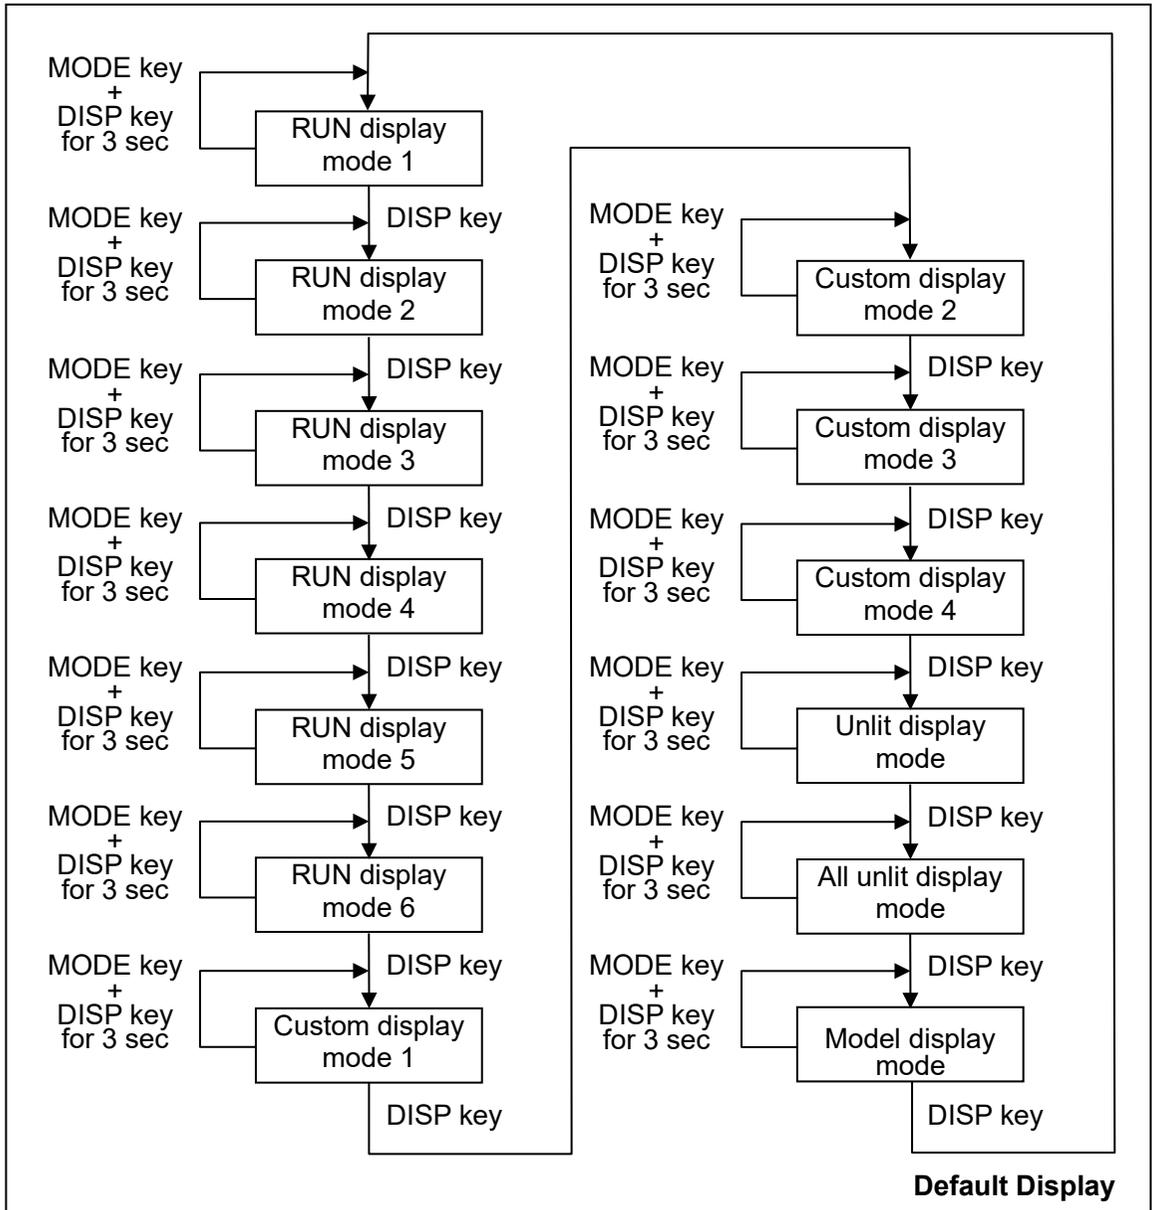

Default Display:

If the MODE and DISP keys (in that order) are pressed together for approx. 3 seconds in any display mode, the display mode will become the Default Display.

Once the Default Display is set, the DISP key will be in lock status.

If the DISP key is pressed for approx. 3 seconds on the Default Display, the key lock status will be cancelled.


If the DISP key is pressed while the DISP key is in lock status, Multi-Display A indicates **LOCK**.


RUN display mode 1:	Multi-Display A indicates Input 1 value, and Multi-Display B indicates Output value.
RUN display mode 2:	Multi-Display A indicates Input 2 value, and Multi-Display B indicates Output value.
RUN display mode 3:	Multi-Display A indicates Input 1 value, and Multi-Display B indicates Input 2 value.
RUN display mode 4:	Multi-Display A indicates Input 1 value, and Multi-Display B is unlit.
RUN display mode 5:	Multi-Display A indicates Input 2 value, and Multi-Display B is unlit.
RUN display mode 6:	Multi-Display A is unlit, and Multi-Display B indicates Output value.
Custom display mode 1:	Multi-Display A indicates characters set in [Multi-Display A]. Multi-Display B indicates characters set in [Multi-Display B].
Custom display mode 2:	Multi-Display A indicates Input 1 value, and Multi-Display B indicates characters set in [Multi-Display B].
Custom display mode 3:	Multi-Display A indicates input 2 value, and Multi-Display B indicates characters set in [Multi-Display B].
Custom display mode 4:	Multi-Display A indicates the Output value, and Multi-Display B indicates characters set in [Multi-Display B].
Unlit display mode:	Multi-Display A and B are unlit, and the Input indicator A lights up. Alarm indicator A and B light up if they are under the conditions of lighting.
All unlit display mode:	All displays and indicators are unlit. Alarm indicator A and B do not light up even if they are under the conditions of lighting.
Model display mode:	Multi-Display A indicates a model name, and Multi-Display B indicates an input code and output code.

6. Setting Mode

6.1 Display Transition in Setting Mode

- If the MODE key is pressed and held down for approx. 5 seconds in each setting mode, the unit will move to the Default Display.

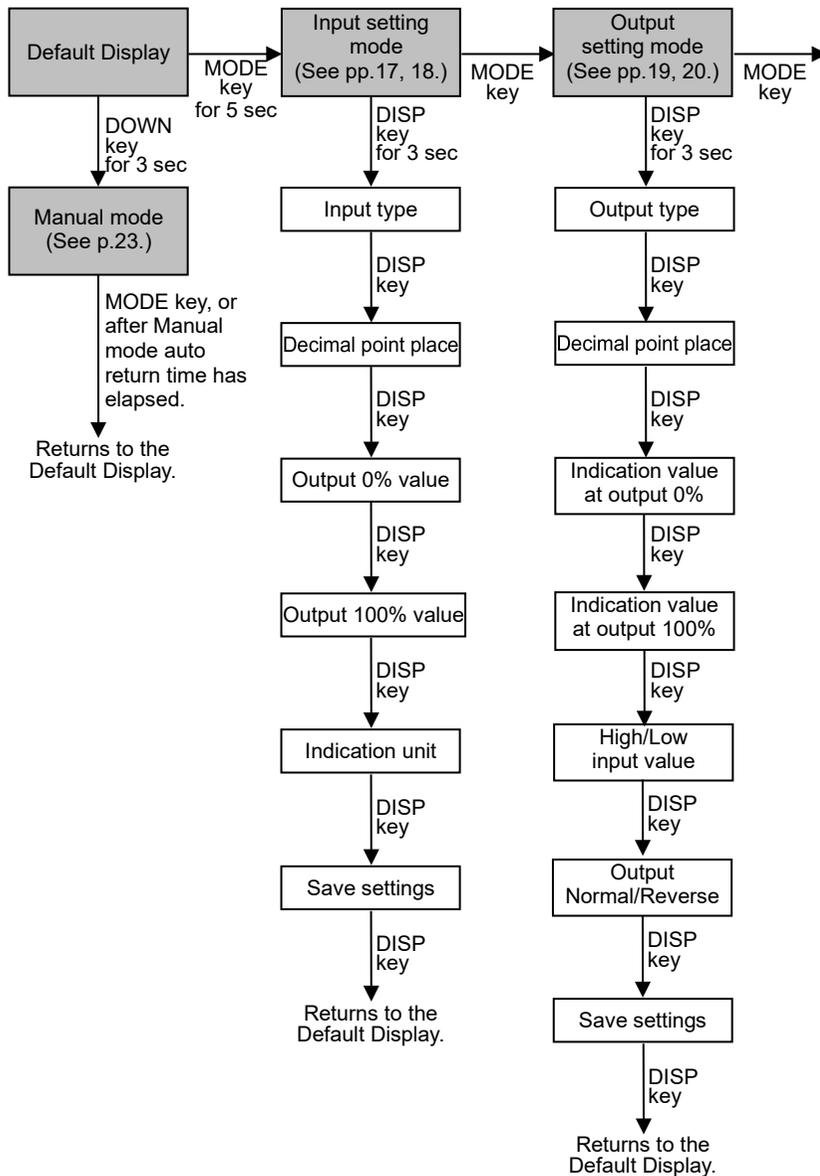

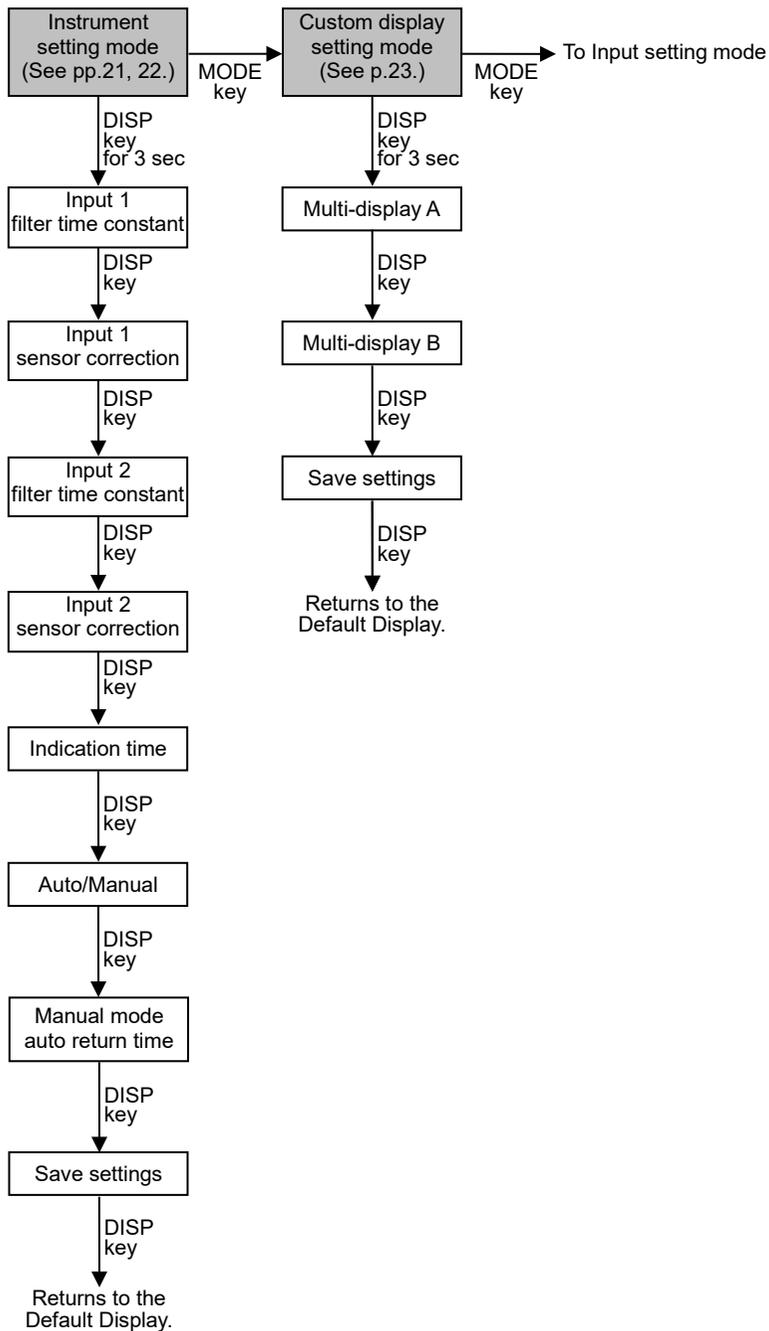

6.2 Input Setting Mode

Input Type

Selects an input type.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
4 to 20 mA Built-in 50 Ω shunt resistor	SENE	420A	4 to 20 mA Built-in 50 Ω shunt resistor 420A
4 to 20 mA Externally mounted 250 Ω shunt resistor		420V	
4 to 20 mA Externally mounted 50 Ω shunt resistor		420E	
0 to 20 mA		020A	
0 to 16 mA		0N6A	
2 to 10 mA		2N0A	
0 to 10 mA		0N0A	
1 to 5 mA		1NSA	
0 to 1 mA		0N1A	
10 to 50 mA		10S0	
0 to 10 mV		0N1M	
0 to 50 mV		0S5M	
0 to 60 mV		0S6M	
0 to 100 mV		001N	
0 to 1 V		0N1V	
0 to 5 V		0NSV	
1 to 5 V		1NSV	
-5 to 5 V		NS5V	
0 to 10 V		0N0V	
-10 to 10 V		N00V	

Decimal Point Place

Selects a decimal point place.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No decimal point	.A000	.0000	2 digits after decimal point .A000 .0000
1 digit after decimal point		.0000	
2 digits after decimal point		.0000	
3 digits after decimal point		.0000	

Output 0% Value

Sets an input value (indicated on the display) at the time of output 0%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Low limit of each input type to Output 100% value	0.00	Set value	4.00 0.00 4.00

Output 100% Value

Sets an input value (indicated on the display) at the time of output 100%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Output 0% value to High limit of each input type	20.00	Set value	20.00 0.00 20.00

Indication Unit

Selects the unit for indication.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No unit	NONE	NONE	No unit NONE NONE
%		PER	
mA		MA	
V		VOL	
°C		DEG	

Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save	SAVE	YES	Save SAVE YES
Not save		NO	

6.3 Output Setting Mode

Output Type

Selects an output type.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
4 to 20 mA	0000	4000	4 to 20 mA 0000 4000
0 to 20 mA		0000	
0 to 16 mA		0000	
2 to 10 mA		2000	
0 to 10 mA		0000	
0 to 10 mV		0000	
0 to 100 mV		0000	
0 to 1 V		0000	
0 to 5 V		0000	
1 to 5 V		0000	
0 to 10 V	0000	0000	

Decimal Point Place

Selects decimal point place.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No decimal point	0000	0000	2 digits after decimal point 0000 0000
1 digit after decimal point		0000	
2 digits after decimal point		0000	
3 digits after decimal point		0000	

Indication Value at Output 0%

Sets an indication value at the time of output 0%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1999 to 9999	0000	Set value	4.00 0000 4000

Indication Value at Output 100%

Sets an indication value at the time of output 100%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1999 to 9999	0000	Set value	20.00 0000 2000

High/Low Input Value

Selects either high input value or low input value to produce an output value.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
High input value	HIGH	HIGH	High input value HIGH
Low input value		LOW	

Output Normal/Reverse

Selects either Normal mode or Reverse mode for Output status.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Normal	NORM	NORM	Normal NORM
Reverse		REVS	

Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save	SAVE	YES	Save SAVE YES
Not save		NO	

6.4 Instrument Setting Mode

Input 1 Filter Time Constant

Sets the filter time constant for Input 1.

Input fluctuation due to noise can be decreased.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0.0 to 10.0 seconds		Set value	0.0 seconds 

Input 1 Sensor Correction

Sets the sensor correction value for Input 1.

Input value = Current input value + (Sensor correction value)

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1000 to 1000 *		Set value	0 

* The placement of the decimal point follows the selection.

Input 2 Filter Time Constant

Sets the filter time constant for Input 2.

Input fluctuation due to noise can be decreased.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0.0 to 10.0 seconds		Set value	0.0 seconds 

Input 2 Sensor Correction

Sets the sensor correction value for Input 2.

Input value = Current input value + (Sensor correction value)

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1000 to 1000 *		Set value	0 

* The placement of the decimal point follows the selection.

Indication Time

Sets duration from no operation until indication (of Multi-Display A, Multi-Display B, and each action indicator) turns off.

When set to 00.00, they remain lit.

After indication time has elapsed, if any key is pressed while they are unlit, they will light up again.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
00 : 00 to 60 : 00 (Minutes : Seconds) 00 : 00 Continuous 00 : 01 to 60 : 00 .. Indication time		Set value	30 : 00 (Minutes : Seconds)  

Auto/Manual

If AUTO is selected, the output value will be output corresponding to the input value.

When MANUAL is selected, the unit can enter Manual mode. The output value set in Manual mode will be output.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Auto			Manual  
Manual			

Manual Mode Auto Return Time

Sets duration from manual mode until the unit automatically returns to Default Display.

If set to 0 (zero), auto return will not occur.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0 to 60 minutes		Set value	30 minutes  

Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save			Save  
Not save			

6.5 Custom Display Setting Mode

Customizes characters to be indicated on the Multi-Display A and B (*).
Use alphanumeric characters and symbols.

(e.g.) FLOW, TEMP, No.1, No.2

(*) Number of characters which can be indicated differs depending on the display mode.

Refer to Section 5. Display Mode. (pp.13, 14)

- If Custom display mode 1 is selected:
Up to 8 characters can be displayed in total for both Multi-Display A and B.
- If any of Custom display mode 2 to 4 is selected:
Up to 4 characters can be displayed on the Multi-Display B.

Can be set from the thousands digit of the display.

Digits can be selected with the MODE key.

Multi-Display A

Characters for the Multi-Display A can be customized.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
A to Z, 0 to 9, /, -, ., (Blank)		Set value	


Multi-Display B

Characters for the Multi-Display B can be customized.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
A to Z, 0 to 9, /, -, ., (Blank)		Set value	

Save Settings

 Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save			
Not save			

6.6 Manual Mode

If MANUAL is selected in [Auto/Manual] in Instrument setting mode, press the DOWN key for 3 seconds. The unit will enter the Manual mode.

At this time, Multi-Display A flashes an output value. The output value can be set by the UP or DOWN key. The output value is lit while setting.

By pressing the MODE key in Manual mode, or after Manual mode auto return time has elapsed, the unit returns to the Default Display, and outputs the value corresponding to the input value.

7. Adjustment

Performs the output zero and span adjustments.

For this instrument, the output adjustment has already been completed when shipped.

If the instrument is used with the ordered Input/Output spec, the adjustment is not required.

However, for calibration, or for the fine adjustment of the SGH to which any equipment is connected, perform the adjustment.

Connect an mV generator or Dial resistor to the input terminals of this instrument.

Connect a digital multimeter to the output terminals.

7.1 Basic Operation of Adjustment

For adjustment, use the following trimmers on the front panel.

Output Zero: Adjusts the value of Output Zero.

Output Span: Adjusts the value of Output Span.

7.2 Adjustment

Perform adjustment as follows.

7.2.1 Output Adjustment

The following outlines the procedure for Output adjustment.

- ① Enter the value corresponding to 0% output, and adjust the value using the 'Output Zero' trimmer while viewing the output value (on the digital multimeter).
- ② Enter the value corresponding to 100% output, and adjust the value using the 'Output Span' trimmer while viewing the output value (on the digital multimeter).
- ③ Enter the value corresponding to 0% output again, and confirm the output value (on the digital multimeter).
- ④ If the value corresponding to 0% output is not at 0%, repeat steps ① to ③ again.

8. Operation

8.1 Indication after Power-on

After the power is turned on, the instrument is switched to warm-up status for 3 seconds. Multi-Display A indicates a model name, and Multi-Display B indicates the input code and output code.

(e.g.) SGHL-A01-0-0

Multi-Display A: 

Multi-Display B: 

A value corresponding to input 0% will be output.

8.2 Operation

After warm-up status, the unit enters display mode.

The input signal selected in [Input type] will be converted to the output selected in [Output type].

8.2.1 Input Indication Range

The measured value is indicated within the following range:

[Output 0% value – (Output 100% value – Output 0% value) ×10%] to
[Output 100% value + (Output 100% value – Output 0% value) ×10%]

For a value lower than (and including) -2000, the input value and the minus (-) sign are indicated alternately. For a value higher than (and including) 10000, the lower 4 digits of input value will flash. (The placement of the decimal point follows the selection.)

If the measured value exceeds the indication range:  will flash.

If the measured value drops below the indication range:  will flash.

8.2.2 Output Indication Range

The output value is indicated within the following range:

[Indication value at 0% output – (Indication value at 100% output – Indication value at 0% output) ×10%] to
[Indication value at 100% output +(Indication value at 100% output – Indication value at 0% output) ×10%]

However, the high limit value is 9999, and the low limit value is -1999. (The placement of the decimal point follows the selection.)

8.2.3 Input Disconnection Status

If input is disconnected, the input status will become as follows.

Input Range	Input Status
4 to 20 mA Built-in 50 Ω shunt resistor	Equals 0 mA input.
4 to 20 mA Externally mounted 250 Ω shunt resistor	Equals 0 mA input.
4 to 20 mA Externally mounted 50 Ω shunt resistor	Equals 0 mA input.
0 to 20 mA	Equals 0 mA input.

0 to 16 mA	Equals 0 mA input.
2 to 10 mA	Equals 0 mA input.
0 to 10 mA	Equals 0 mA input.
1 to 5 mA	Equals 0 mA input.
0 to 1 mA	Equals 0 mA input.
10 to 50 mA	Equals 0 mA input.
0 to 10 mV	Overscale *
0 to 50 mV	Overscale *
0 to 60 mV	Overscale *
0 to 100 mV	Overscale *
0 to 1 V	Overscale *
0 to 5 V	Equals 0 V input.
1 to 5 V	Equals 0 V input.
-5 to 5 V	Equals 0 V input.
0 to 10 V	Equals 0 V input.
-10 to 10 V	Equals 0 V input.

* For the overscale status, the Alarm indicator lights up, and  flashes as an input value.

8.2.4 Indication Time Setting

After preset indication time has elapsed, Multi-Display A, Multi-Display B and each action indicator are turned OFF.

They light up again if any key is pressed.

They remain lit during setting mode, or in the event of an input error or input disconnection.

If the indication time is set to 00:00, they remain lit.

9. Specifications

Input Specifications

Direct current input	Input Range	Shunt Resistor	Indication Resolution
	4 to 20 mA DC	50 Ω *	1
		250 Ω	1
		50 Ω	1
	0 to 20 mA DC	250 Ω	1
	0 to 16 mA DC	62.5 Ω	1
	2 to 10 mA DC	250 Ω	1
	0 to 10 mA DC	100 Ω	1
	1 to 5 mA DC	100 Ω	1
	0 to 1 mA DC	1000 Ω	1
10 to 50 mA DC	10 Ω	1	
* Built-in shunt resistor			
DC voltage input	Input Range	Input Resistance	Indication Resolution
	0 to 10 mV	1 M Ω	1
	0 to 50 mV		1
	0 to 60 mV		1
	0 to 100 mV		1
	0 to 1 V		1
	0 to 5 V		1
	1 to 5 V		1
	-5 to 5 V		1
	0 to 10 V		1
	-10 to 10 V		1

Output Specifications

Direct current	Output Range	Allowable Load Resistance	Zero Adjustment Range	Span Adjustment Range
	4 to 20 mA	750 Ω max.	-5 to 5%	95 to 105%
	0 to 20 mA *	750 Ω max.		
	0 to 16 mA *	900 Ω max.		
	2 to 10 mA	1500 Ω max.		
	0 to 10 mA *	1500 Ω max.		
* 0 mA or less: Out of base accuracy				
DC voltage	Output Range	Allowable Load Resistance	Zero Adjustment Range	Span Adjustment Range
	0 to 10 mV *	10 k Ω min.	-5 to 5%	95 to 105%
	0 to 100 mV *	100 k Ω min.		
	0 to 1 V *	1000 Ω min.		
	0 to 5 V *	5000 Ω min.		
	1 to 5 V	5000 Ω min.		
	0 to 10 V *	10 k Ω min.		
-5 to 5 V	10 k Ω min.			
* 0 V or less: Out of base accuracy				

Performance

Base accuracy (at 25°C)	±0.1% of each input span
Cold junction compensation accuracy	±0.5°C (1.0°F) at 20±10°C
Temperature coefficient	±0.015 %/°C 0 to 10 mV output: 0.02 %/°C
Response time	500 ms max. (0→90%)
Indication update cycle	125 ms
Insulation resistance	100 MΩ minimum, at 500 V DC
Dielectric strength	2.0 kV AC for 1 minute

General Structure

Dimensions	22.5 x 89 x 70 mm (W x H x D)
Weight	Approx. 77 g
Mounting	DIN rail
Case	Flame-resistant resin, Color: Black
Front panel	Polycarbonate

Installation Specifications

Power supply	100 to 240 V AC 50/60 Hz
Allowable voltage range	85 to 264 V AC
Power consumption	Approx. 9 VA max.
Ambient temperature	-10 to 55°C (Non-condensing, no icing)
Ambient humidity	35 to 85 %RH (Non-condensing)

Standard Function

Power failure countermeasure	The setting data is backed up in the non-volatile IC memory.
Self-diagnosis	The CPU is monitored by a watchdog timer, and if an abnormal status occurs, the instrument is switched to warm-up status, turning all outputs OFF.

10. Troubleshooting

10.1 Indication

Problem	Possible Cause	Solution
Multi-Display A or B flashes  or  when it indicates an input value.	The sensor may be disconnected.	Replace with a new sensor.
	Check whether the sensor is securely mounted to the input terminals of this instrument.	Connect the sensor terminals to the instrument input terminals securely.
	Check the input signal source.	Ensure that the input signal source works normally.
Multi-Display A or B is irregular or unstable when it indicates an input value.	Check whether sensor input is correct.	Select the same sensor type as that of currently used sensor.
	Sensor correction value is unsuitable.	Set it to a suitable value.
	AC leaks into the sensor circuit.	Use an ungrounded type sensor.
	There may be equipment that interferes with or makes noise near the instrument.	Keep the instrument clear of any potentially disruptive equipment.
Displays and indicators are unlit. If any key is pressed, they will light up.	The Indication Time (p.22) is set to any value other than 00 : 00. (Factory default is 30 : 00.)	To indicate continuously, set the Indication Time (p.22) to "00 : 00".

10.2 Key Operation

Problem	Possible Cause	Solution
If the DISP key is pressed, Multi-Display A shows  , and the display mode cannot be switched.	The DISP key is in locked status.	Press the DISP key for approx. 3 seconds to release the key lock.

10.3 Operation

Problem	Possible Cause	Solution
When Multi-Display A or B indicates an input value, the input value does not change.	The sensor may be out of order.	Replace with the new sensor.
	Check whether input and output wires are securely connected to the I/O terminals of the instrument.	Ensure that input and output wires are securely connected to the I/O terminals of the instrument.
	Check whether the wiring of input and output are correct.	Wire them correctly.
Output is not turned ON.	Selections in [Output type (p.19)] or [Output Normal/Reverse (p.20)] may be incorrect.	Make a correct selection in [Output type (p.19)] or [Output Normal/Reverse (p.20)].

11. Character Table

Please use the following factory default values for your reference.

Display mode

Setting Item	Multi-Display A	Multi-Display B	Data
Default Display mode	Follows currently indicated display mode.		
RUN display mode 1	Input value 1	Output value	
RUN display mode 2	Input value 2	Output value	
RUN display mode 3	Input value 1	Input value 2	
RUN display mode 4	Input value 1	Unlit	
RUN display mode 5	Input value 2	Unlit	
RUN display mode 6	Unlit	Output value	
Custom display mode 1	AAAA	AAAA	
Custom display mode 2	Input value 1	AAAA	
Custom display mode 3	Input value 2	AAAA	
Custom display mode 4	Output value	AAAA	
Model display mode	Model	Input, Output codes	

Setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Input setting mode	INNI	Unlit	
Output setting mode	OUTI	Unlit	
Instrument setting mode	INNI	Unlit	
Custom display setting mode	DISI	Unlit	

Input setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Input type	SENS	42MA	
Decimal point place	2PM	000	
Output 0% value	0.00	0.00	
Output 100% value	0.00	0.00	
Indication unit	UNNE	NONE	
Save settings	SAVE	YES	

Output setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Output type	0.00V	4.00V	
Decimal point place	0.00V	0.00V	
Indication value at output 0%	0.00V	0.00V	
Indication value at output 100%	0.00V	2.00V	
High/Low input value	0.00V	HIGH	
Output Normal/Reverse	0.00V	NORM	
Save settings	SAVE	YES	

Instrument setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Input 1 filter time constant	0.00V	0.00V	
Input 1 sensor correction	0.00V	0.00V	
Input 2 filter time constant	0.00V	0.00V	
Input 2 sensor correction	0.00V	0.00V	
Indication time	0.00V	0.00V	
Auto/Manual	MARS	MANU	
Manual mode auto return time	0.00V	0.00V	
Save settings	SAVE	YES	

Custom display setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Multi-Display A	0.00V	0.00V	
Multi-Display B	0.00V	0.00V	
Save settings	SAVE	YES	

***** Inquiries *****

For any inquiries about this unit, please contact our agency or the vendor where you purchased the unit after checking the following.

[Example]

- Model ----- SGHL-A01-0-0
- Serial number ----- 154F05000

In addition to the above, please let us know the details of the malfunction, or discrepancy, and the operating conditions.

SHINKO TECHNOS CO., LTD.
OVERSEAS DIVISION

Head Office: 2-5-1, Senbahigashi, Minoo, Osaka, 562-0035, Japan

[URL] <https://shinko-technos.co.jp/e/>

Tel: +81-72-727-6100

[E-mail] overseas@shinko-technos.co.jp

Fax: +81-72-727-7006