


RATIO TRANSMITTER

SGB

SGBW

SGBL

INSTRUCTION MANUAL

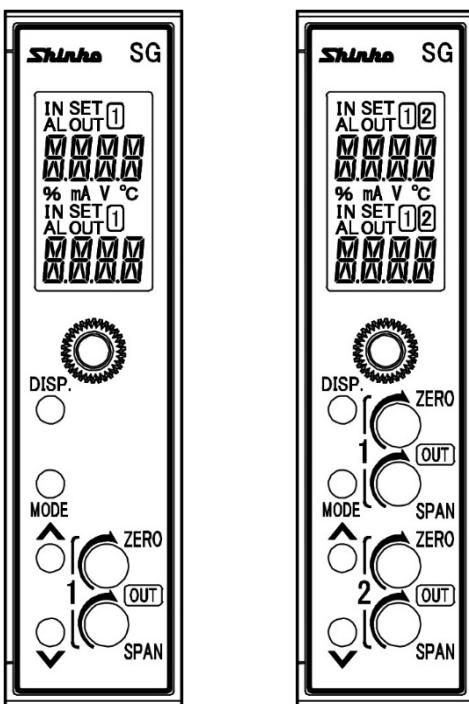

Shinko

Preface

Thank you for purchasing our SGB, SGBW or SGBL, Ratio Transmitter. This manual contains instructions for the mounting, functions, operations and notes when operating the SGB, SGBW or SGBL. To prevent accidents arising from the misuse of this instrument, please ensure the operator receives this manual.

Notes

- This instrument should be used in accordance with the specifications described in the manual. If it is not used according to the specifications, it may malfunction or cause a fire.
- Be sure to follow the warnings, cautions and notices. If they are not observed, serious injury or malfunction may occur.
- The contents of this instruction manual are subject to change without notice.
- Care has been taken to ensure that the contents of this instruction manual are correct, but if there are any doubts, mistakes or questions, please inform our sales department.
- This instrument is designed to be installed on a DIN rail within a control panel. If it is not, measures must be taken to ensure that the operator does not touch power terminals or other high voltage sections.
- Any unauthorized transfer or copying of this document, in part or in whole, is prohibited.
- Shinko Technos CO., LTD. is not liable for any damage or secondary damage(s) incurred as a result of using this product, including any indirect damage.

SAFETY PRECAUTIONS (Be sure to read these precautions before using our products.)

The safety precautions are classified into categories: "Warning" and "Caution".

Depending on circumstances, procedures indicated by  Caution may result in serious consequences, so be sure to follow the directions for usage.

Warning

Procedures which may lead to dangerous conditions and cause death or serious injury, if not carried out properly.

Caution

Procedures which may lead to dangerous conditions and cause superficial to medium injury or physical damage or may degrade or damage the product, if not carried out properly.

Warning

- To prevent an electrical shock or fire, only Shinko or qualified service personnel may handle the inner assembly.
- To prevent an electrical shock, fire, or damage to instrument, parts replacement may only be undertaken by Shinko or qualified service personnel.

Safety Precautions

- To ensure safe and correct use, thoroughly read and understand this manual before using this instrument.
- This instrument is intended to be used for industrial machinery, machine tools and measuring equipment. Verify correct usage after purpose-of-use consultation with our agency or main office. (Never use this instrument for medical purposes with which human lives are involved.)
- External protection devices such as protection equipment against excessive temperature rise, etc. must be installed, as malfunction of this product could result in serious damage to the system or injury to personnel. Proper periodic maintenance is also required.
- This instrument must be used under the conditions and environment described in this manual. Shinko Technos Co., Ltd. does not accept liability for any injury, loss of life or damage occurring due to the instrument being used under conditions not otherwise stated in this manual.

Caution with Respect to Export Trade Control Ordinance

To avoid this instrument from being used as a component in, or as being utilized in the manufacture of weapons of mass destruction (i.e. military applications, military equipment, etc.), please investigate the end users and the final use of this instrument. In the case of resale, ensure that this instrument is not illegally exported.

■ Installation Precautions



Caution

This instrument is intended to be used under the following environmental conditions (IEC61010-1): Overvoltage category II, Pollution degree 2

Ensure the mounting location corresponds to the following conditions:

- A minimum of dust, and an absence of corrosive gases
- No flammable, explosive gases
- No mechanical vibrations or shocks
- No exposure to direct sunlight, an ambient temperature of -10 to 55°C (14 to 131°F) that does not change rapidly, and no icing
- An ambient non-condensing humidity of 35 to 85 %RH
- No large capacity electromagnetic switches or cables through which large current is flowing
- No water, oil or chemicals or the vapors of these substances can come into direct contact with the unit.
- When installing this unit within a control panel, please note that ambient temperature of this unit – not the ambient temperature of the control panel – must not exceed 55°C (131°F). Otherwise the life of electronic components (especially electrolytic capacitor) may be shortened.

Note: Avoid setting this instrument directly on or near flammable material even though the case of this instrument is made of flame-resistant resin.

■ Wiring Precautions



Caution

- Do not leave bits of wire in the instrument, because they could cause a fire and malfunction.
- When wiring, use a crimping pliers and a solderless terminal with an insulation sleeve in which an M3 screw fits.
- Tighten the terminal screw using the specified torque. If excessive force is applied to the screw when tightening, the screw or case may be damaged.
- This instrument does not have a built-in power switch, circuit breaker and fuse. It is necessary to install a power switch, circuit breaker and fuse near the instrument. (Recommended fuse: Time-lag fuse, rated voltage 250 V AC, rated current 2 A)
- For wiring of the AC power source, be sure to use terminals as described in this manual. If the AC power source is connected to incorrect terminals, the unit will be burnt out.
- Do not apply a commercial power source to the sensor which is connected to the input terminal nor allow the power source to come into contact with the sensor.
- When using DC voltage and current input, do not confuse polarity when wiring.
- Keep the input/output wires and power line separate.

■ Operation and Maintenance Precautions



Caution

- Do not touch live terminals. This may cause an electrical shock or problems in operation.
- Turn the power supply to the instrument OFF when retightening the terminal or cleaning. Working on or touching the terminal with the power switched ON may result in severe injury or death due to electrical shock.
- Use a soft, dry cloth when cleaning the instrument. (Alcohol based substances may tarnish or deface the unit.)
- As the display section is vulnerable, be careful not to put pressure on, scratch or strike it with a hard object.

Characters used in this manual [■ : No character is indicated (unlit).]

Indication	1	0	1	2	3	4	5	6	7	8	9	C	F
Number, °C/F	-1	0	1	2	3	4	5	6	7	8	9	°C	°F
Indication	A	b	C	d	E	F	G	H	I	J	K	L	M
Alphabet	A	B	C	D	E	F	G	H	I	J	K	L	M
Indication	N	o	P	Q	R	S	E	U	V	W	X	Y	Z
Alphabet	N	O	P	Q	R	S	T	U	V	W	X	Y	Z

Contents


Page

1. Model	5
1.1 Model.....	5
1.2 How to Read the Model Label	6
2. Name and Functions	7
2.1 Front Panel	7
2.2 Display Section	8
3. Mounting	9
3.1 External Dimensions (Scale: mm)	9
3.2 Mounting to, and Removal from the DIN Rail	10
4. Wiring	11
4.1 Lead Wire Solderless Terminal	11
4.2 Circuit Configuration.....	11
4.3 Terminal Arrangement.....	12
4.4 Wiring	13
5. Display Mode	14
6. Setting Mode	16
6.1 Display Transition in Setting Mode.....	16
6.2 Input Setting Mode	18
6.3 Output 1 Setting Mode	20
6.4 Output 2 Setting Mode	23
6.5 Instrument Setting Mode	26
6.6 Communication Setting Mode.....	28
6.7 Custom Display Setting Mode.....	30
6.8 Manual Mode	30
7. Adjustment.....	31
7.1 Basic Operation of Adjustment.....	31
7.2 Adjustment	31
7.2.1 Output 1 Adjustment	31
7.2.2 Output 2 Adjustment	31
8.1 Indication after Power-on	32
8.2 Operation	32
8.2.1 Input Indication Range.....	32
8.2.2 Indication Range of Output 1 and Output 2	32
8.2.3 Input Disconnection.....	32
8.2.4 Indication Time Setting	33
8.2.5 Ratio and Bias Settings	33
9. Specifications	37
10. Troubleshooting	40
10.1 Indication	40
10.2 Key Operation	40
10.3 Operation	40
11. Character Table.....	41


1. Model

1.1 Model


SGB

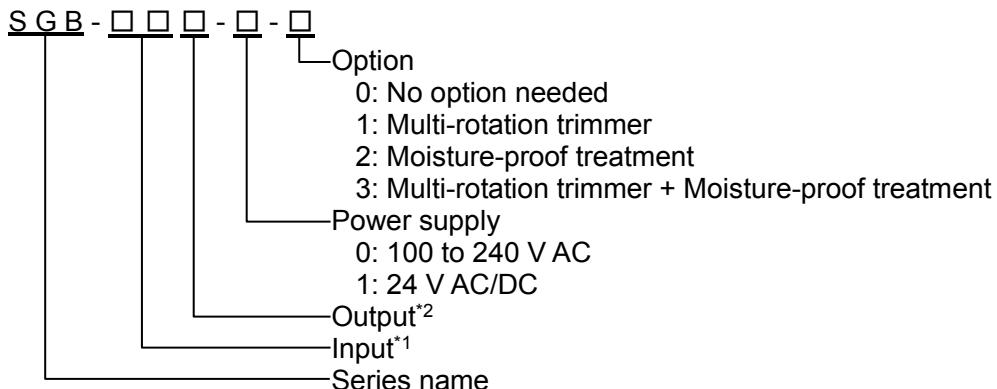

SGBW

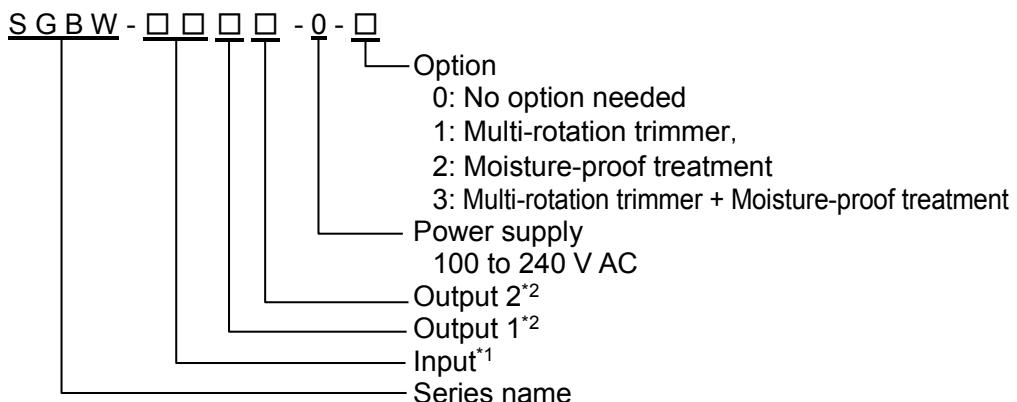

SGBL

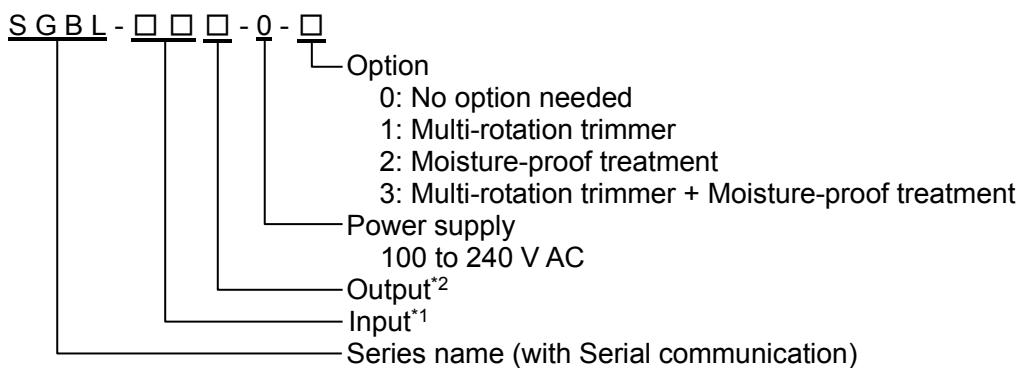

*1: Input

Code	Input Type	Code	Input Type
A0	Direct current	V0	0 to 10 mV (1 MΩ input resistance)
A1		V1	0 to 50 mV (1 MΩ input resistance)
A2		V2	0 to 60 mV (1 MΩ input resistance)
A3		V3	0 to 100 mV (1 MΩ input resistance)
A4		V4	0 to 1 V (1 MΩ input resistance)
A5		V5	0 to 5 V (1 MΩ input resistance)
A6		V6	1 to 5 V (1 MΩ input resistance)
A7		V7	-5 to 5 V (1 MΩ input resistance)
A8		V8	0 to 10 V (1 MΩ input resistance)
A9		V9	-10 to 10 V (1 MΩ input resistance)


*2: Output, Output 1, Output 2

Code	Output Type	Code	Output Type
1	Current output	4 to 20 mA	A 0 to 10 mV
2		0 to 20 mA	B 0 to 100 mV
3		0 to 16 mA	C 0 to 1 V
4		2 to 10 mA	D 0 to 5 V
5		0 to 10 mA	E 1 to 5 V
			F 0 to 10 V
			G -5 to 5 V *

* Not available for SGBW.

1.2 How to Read the Model Label


The model label is attached to the left side of the case.

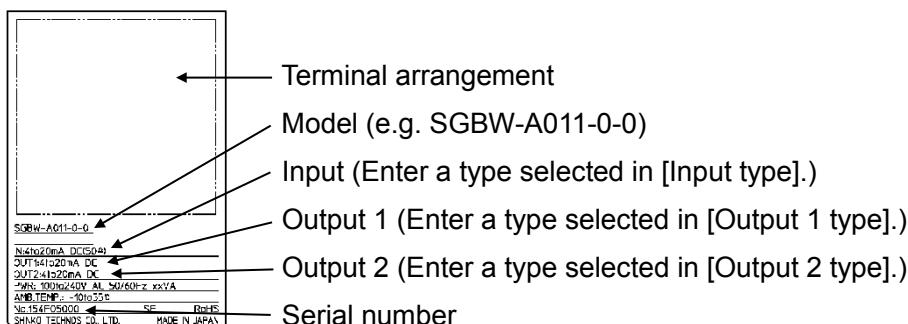

(Fig. 1.2-1)

2. Name and Functions

2.1 Front Panel

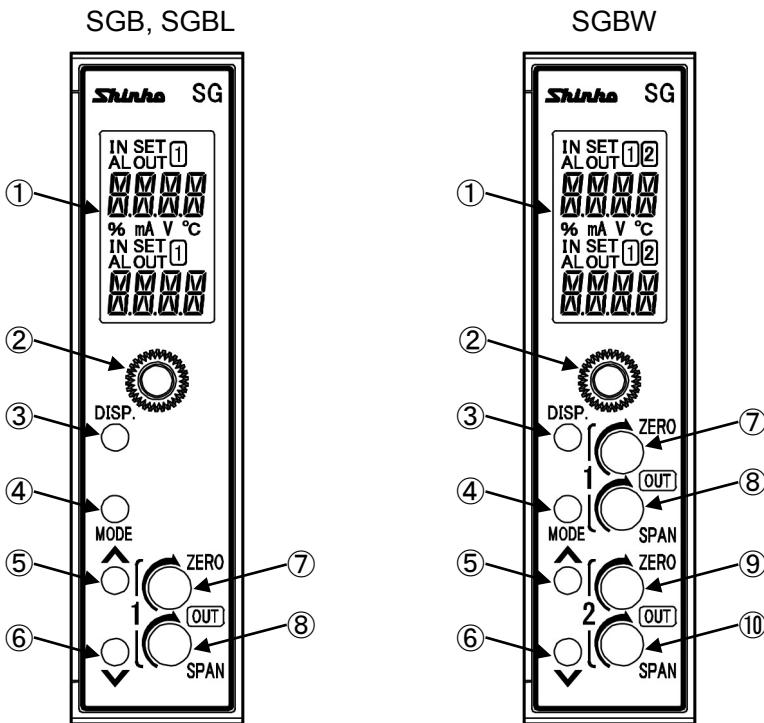


(Fig. 2.1-1)

① Display section	Indicates setting contents, input value, output value, etc.
② Mounting screw	Used for fixing the instrument to the socket or removal from it.
③ DISP key	Switches the displays, and moves to the next setting item. In Manual mode, Output 1 and Output 2 setting can be switched. Releases the lock status of the DISP key by pressing for 3 seconds.
④ MODE key	Selects either a setting mode or a display mode. Shifts the digit for the Custom Display. Enters the setting mode by pressing and holding for 5 seconds.
⑤ UP key	Increases the numerical value. Contents of Multi-Display A and B can be changed alternately when Default Display is RUN display mode 1, 2*, 3, 4*, 5 and 6*.
⑥ DOWN key	Decreases the numerical value. Enters Manual mode by pressing for 3 seconds.
⑦ Output 1 Zero	Adjusts the value of Output 1 Zero.
⑧ Output 1 Span	Adjusts the value of Output 1 Span.
⑨ Output 2 Zero*	Adjusts the value of Output 2 Zero.
⑩ Output 2 Span*	Adjusts the value of Output 2 Span.

* Only for SGBW

2.2 Display Section

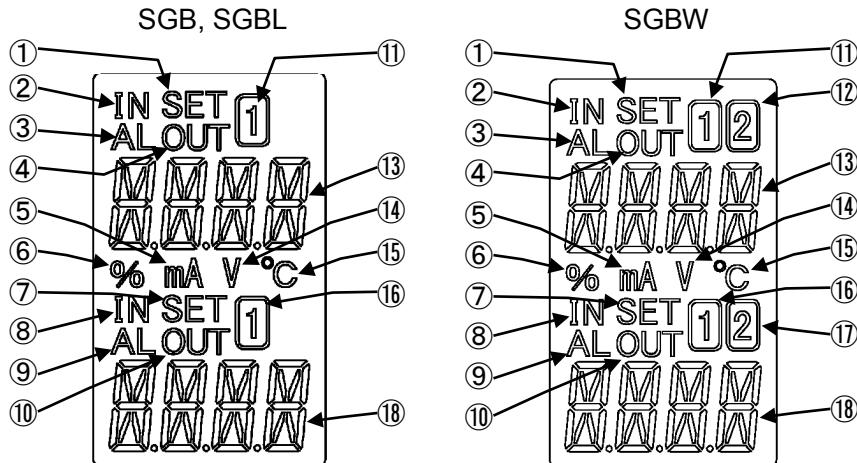

(Fig. 2.2-1)

① Setting display indicator A	Lights up in Manual mode.
② Input indicator A	Lights up when Multi-Display A indicates an input value.
③ Alarm indicator A	Lights up if an input error or input disconnection occurs while Multi-Display A indicates an input value.
④ Output indicator A	Lights up when Multi-Display A indicates an output value.
⑤ mA indicator	Lights up when mA is selected in [Indication unit].
⑥ % indicator	Lights up when % is selected in [Indication unit].
⑦ Setting display indicator B	Lights up for the setting display. For the SGBW, lights up for the setting display or in Manual mode.
⑧ Input indicator B	Lights up when Multi-Display B indicates an input value.
⑨ Alarm indicator B	Lights up if an input error or input disconnection occurs while Multi-Display B indicates an input value.
⑩ Output indicator B	Lights up when Multi-Display B indicates an output value.
⑪ 1 indicator A	Lights up when Multi-Display A indicates an input value, Output 1 output value, Input setting display or Output 1 setting display. Is turned OFF when Multi-Display A indicates custom characters.
⑫ 2 indicator A	Lights up when Multi-Display A indicates Output 2 output value or Output 2 setting display. Is turned OFF when Multi-Display A indicates custom characters.
⑬ Multi-Display A	Indicates the following in accordance with the display indication: Input value, output value, custom characters, setting item
⑭ V indicator	Lights up when V is selected in [Indication unit].
⑮ °C indicator	Lights up when °C is selected in [Indication unit].
⑯ 1 indicator B	Lights up when Multi-Display B indicates an input value, Output 1 output value, Input setting display or Output 1 setting display. Is turned OFF when Multi-Display B indicates custom characters.
⑰ 2 indicator B	Lights up when Multi-Display B indicates Output 2 output value or Output 2 setting display. Is turned OFF when Multi-Display B indicates custom characters.


⑩	Multi-Display B	Indicates the following in accordance with the display indication: Input value, output value, custom characters, setting value
---	------------------------	---

Output indicators A and B, Alarm indicators A and B: Red



Other indicators: White

3. Mounting



3.1 External Dimensions (Scale: mm)

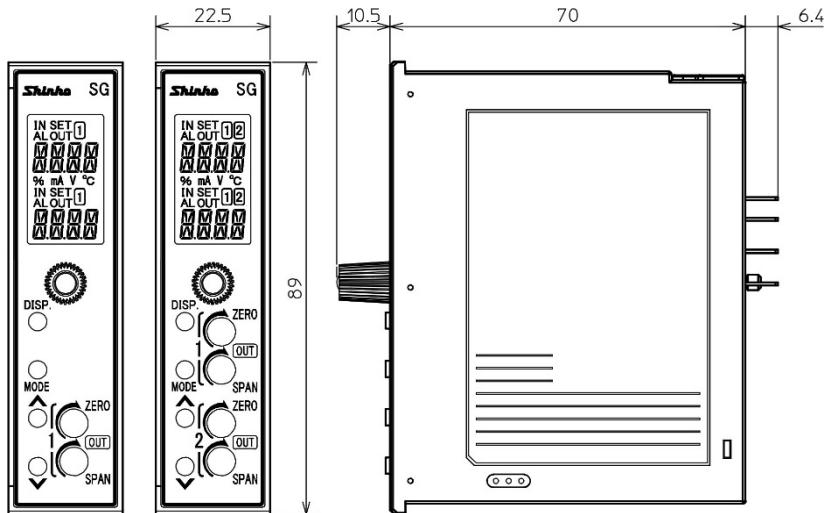

8P socket (SGB, SGBL)

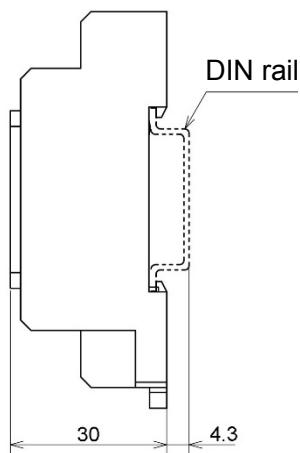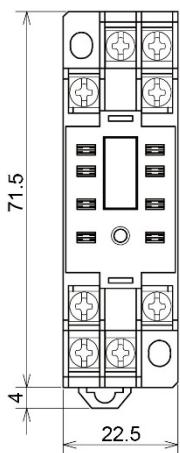

11P socket (SGBW)

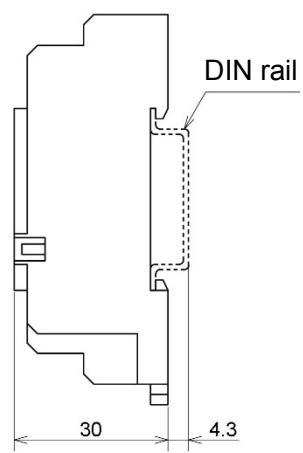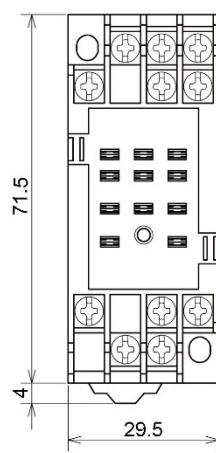

(Fig. 3.1-1)

3.2 Mounting to, and Removal from the DIN Rail



Caution

- Mount the DIN rail horizontally.
- To remove the socket, a flat blade screwdriver is required.
Never turn the screwdriver when inserting it into the Lock lever. If excessive power is applied to the lever, it may break.
- If the instrument is mounted in a position susceptible to vibration or shock, mount commercially available fastening plates at both ends of the instrument.

Recommended Fastening Plate

Manufacturer	Model	
Omron Corporation	End plate	PFP-M
IDEC Corporation	Fastening plate	BNL6
Panasonic Electric Works Co., Ltd.	Fastening plate	ATA4806

Mounting to the DIN rail (Fig. 3.2-1)

- ① Separate the instrument from the socket by loosening the mounting screw on the front panel.
- ② Make sure the lock lever of the socket is located in the lower part of the socket. Hook the upper side of the socket onto the DIN rail, then fit the lower part of the socket onto the DIN rail (A clicking sound should be heard when done properly).




Caution

- Before inserting the instrument to the socket, make sure the cable is wired properly. (Refer to "4. Wiring".)
- When inserting or removing the socket, make sure the socket is oriented vertically. If force is applied in any other direction than vertically, a malfunction may occur.
- If the mounting screw is fastened too tightly, a malfunction may occur.


- ③ Insert the SGB into the socket.
- ④ Fasten the mounting screw by turning it clockwise, to secure the SGB onto the socket. Tighten the screw lightly.

Removal from the DIN rail (Fig. 3.2-2)

- ① Turn the power to the instrument OFF.
- ② Separate the instrument from the socket by loosening the mounting screw on the front panel.
- ③ Insert a flat blade screwdriver into the Lock lever (lower part of the socket), and remove the socket from the DIN rail while pulling the lever down.

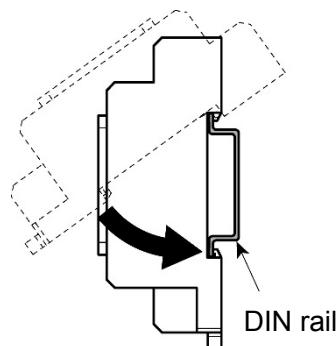

(Fig. 3.2-1)

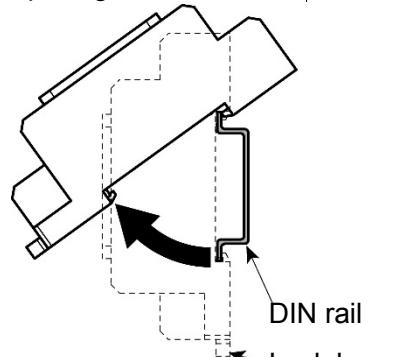

(Fig. 3.2-2)

4. Wiring

⚠ Warning

Turn the power supply to the instrument off before wiring or checking.


Working on or touching the terminal with the power switched on may result in severe injury or death due to electrical shock.

4.1 Lead Wire Solderless Terminal

Use a solderless terminal with an insulation sleeve in which an M3 screw fits as shown below. The torque should be 0.63 N·m.


Solderless Terminal	Manufacturer	Model
Y-type	Nichifu Terminal Industries Co., Ltd.	TMEV1.25Y-3
	Japan Solderless Terminal MFG Co., Ltd.	VD1.25-B3A
Ring-type	Nichifu Terminal Industries Co., Ltd.	TMEV1.25-3
	Japan Solderless Terminal MFG Co., Ltd.	V1.25-3

Y-type(Scale: mm)

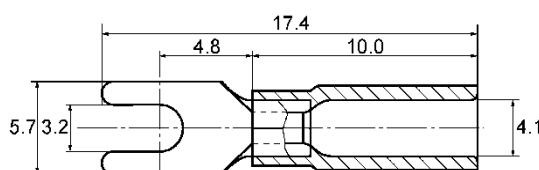

(Fig. 4.1-1)


Ring-type(Scale: mm)

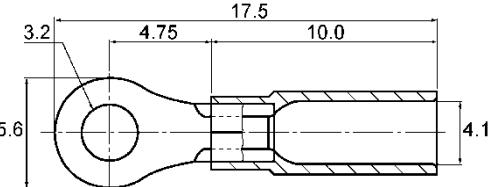

(Fig. 4.1-2)


4.2 Circuit Configuration

SGB, SGBL

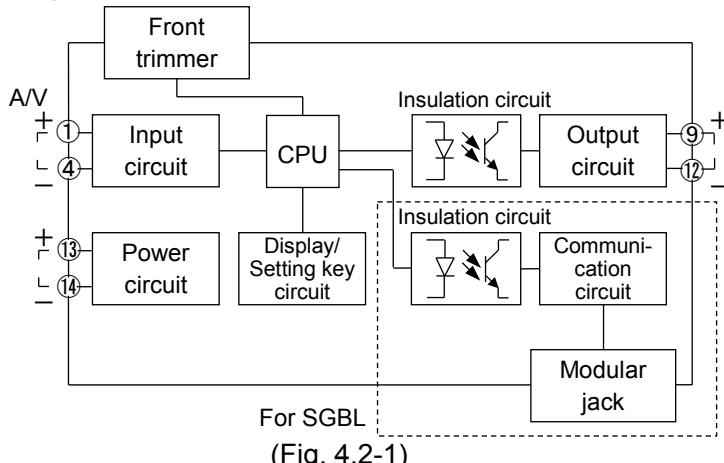

(Fig. 4.2-1)


SGBW

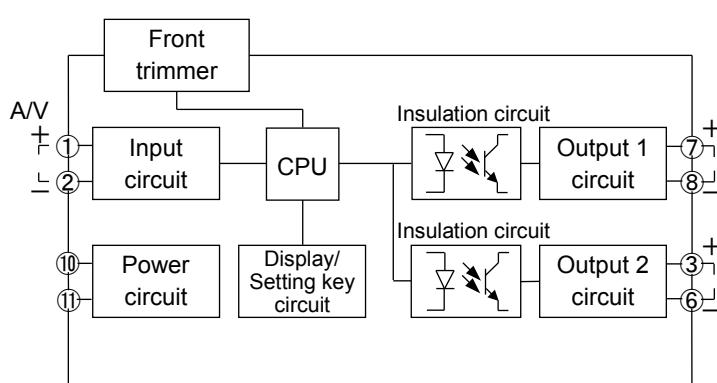

(Fig. 4.2-2)


4.3 Terminal Arrangement

SGB

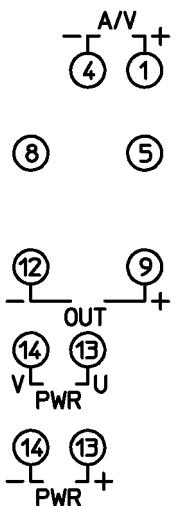


(Fig. 4.3-1)

SGBL

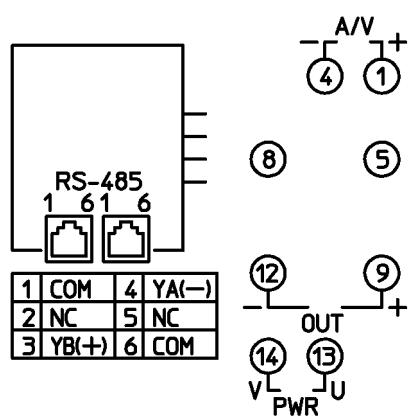

(Fig. 4.3-2)

SGBW

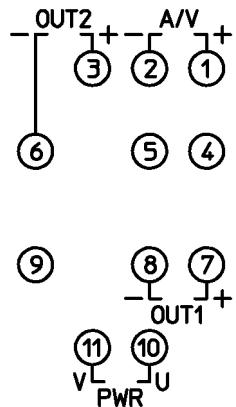

(Fig. 4.3-3)

PWR	Power supply 100 to 240 V AC or 24 V AC/DC (for SGB)
OUT (OUT1)	Output or Output 1 (for SGBW)
OUT2	Output 2 (for SGBW)
A	Direct current input
V	DC voltage input
RS-485	Serial communication (for SGBL)

4.4 Wiring

⚠ Warning

- For 100 to 240 V AC, if the AC power source is connected to incorrect terminals, the instrument will be burnt out.

(1) Power Source Wiring

- SGB: Use terminals ⑬, ⑭ for the power supply to the instrument.
For 24 V DC, use terminals ⑬(+), ⑭(-) for the power supply to the instrument.
- SGBL: Use terminals ⑬, ⑭ for the power supply to the instrument.
- SGBW: Use terminals ⑩, ⑪ for the power supply to the instrument.

(2) Output Wiring


- SGB, SGBL: Use terminals ⑨(+), ⑫(-) for the output wiring.
- SGBW: Output 1: Use terminals ⑦(+), ⑧(-) for Output 1 wiring.
Output 2: Use terminals ③(+), ⑥(-) for Output 2 wiring.

(3) Input Wiring

- SGB, SGBL: Use terminals ①, ④ for the input wiring.
- SGBW: Use terminals ①, ② for the input wiring.


(4) Communication Wiring

For the SGBL, connect the SGBL to SGBL using the provided cable.

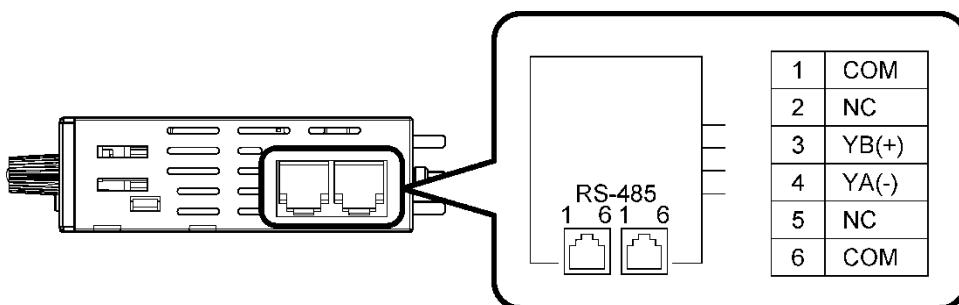

(Fig. 4.4-1)

5. Display Mode

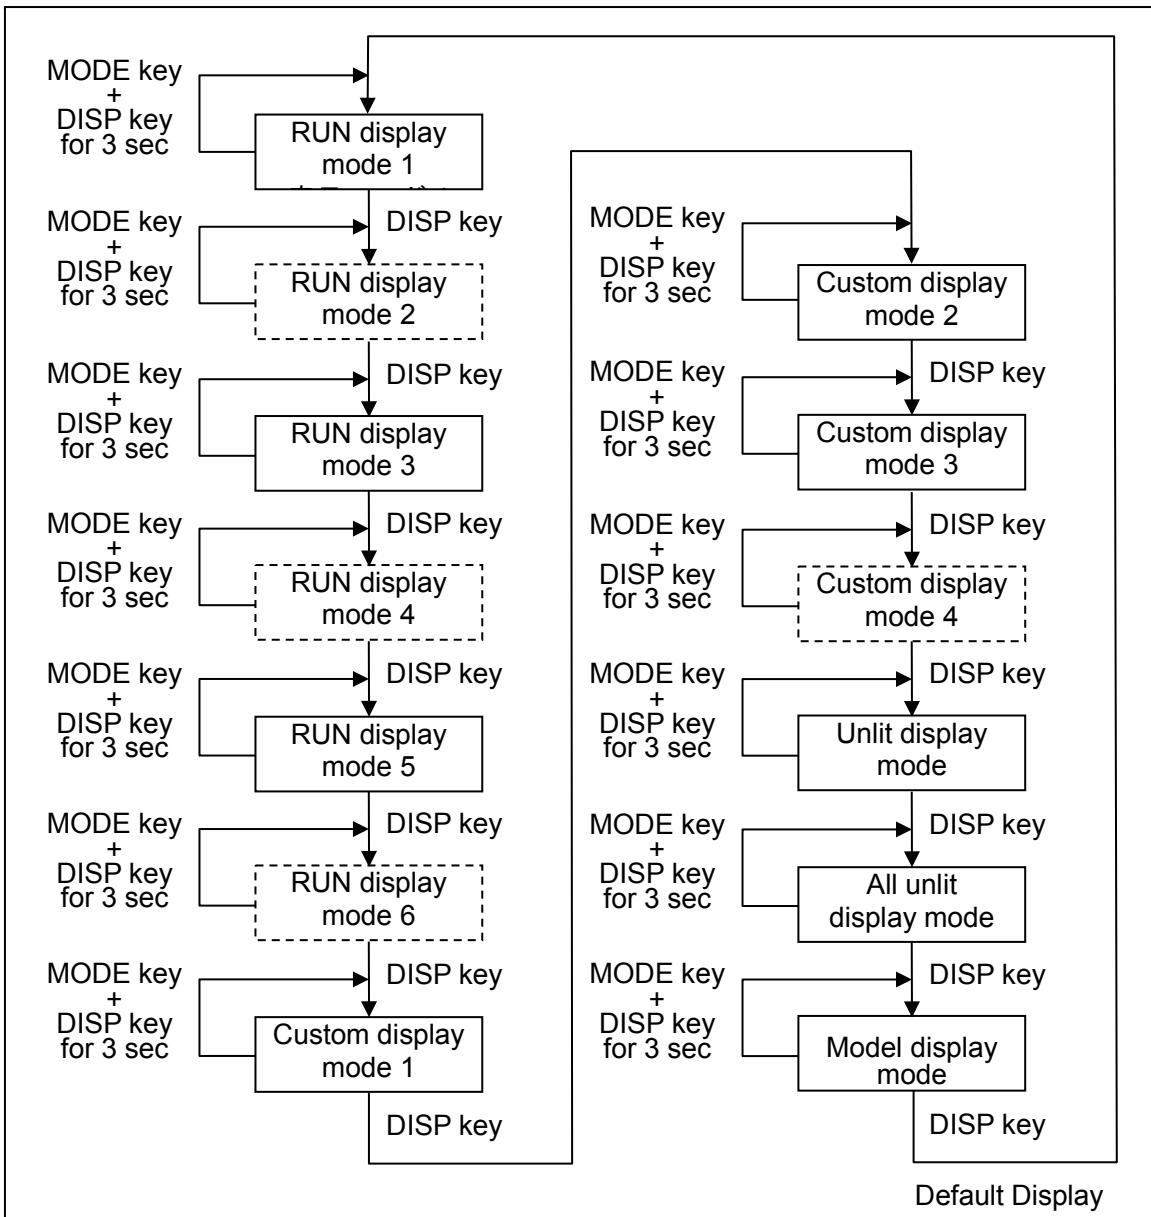

- [] : Available only for the SGBW.

Default Display:

If the MODE and DISP keys (in that order) are pressed together for approx. 3 seconds in any display mode, the display mode will become the Default Display.

Once the Default Display is set, the DISP key will be in lock status.

If the DISP key is pressed for approx. 3 seconds on the Default Display, the key lock status will be cancelled.


If the DISP key is pressed while the DISP key is in lock status, Multi-Display A indicates **LOCK**.


RUN display mode 1:	Multi-Display A indicates an input value, and Multi-Display B indicates Output 1 output value.
RUN display mode 2:	Multi-Display A indicates an input value, and Multi-Display B indicates Output 2 output value.
RUN display mode 3:	Multi-Display A indicates an input value, and Multi-Display B is unlit.
RUN display mode 4:	Multi-Display A indicates Output 1 output value, and Multi-Display B indicates Output 2 output value.
RUN display mode 5:	Multi-Display A is unlit, and Multi-Display B indicates Output 1 output value.
RUN display mode 6:	Multi-Display A is unlit, and Multi-Display B indicates Output 2 output value.
Custom display mode 1:	Multi-Display A indicates characters set in [Multi-Display A]. Multi-Display B indicates characters set in [Multi-Display B].
Custom display mode 2:	Multi-Display A indicates an input value, and Multi-Display B indicates the characters set in [Multi-Display B].
Custom display mode 3:	Multi-Display A indicates an Output 1 output value, and Multi-Display B indicates the characters set in [Multi-Display B].
Custom display mode 4:	Multi-Display A indicates an Output 2 output value, and Multi-Display B indicates the characters set in [Multi-Display B].
Unlit display mode:	Multi-Display A and B are unlit, and the Input indicator A lights up. Alarm indicator A and B light up if they are under the conditions of lighting.
All unlit display mode:	All displays and indicators are unlit. Alarm indicator A and B do not light up even if they are under the conditions of lighting.
Model display mode:	Multi-Display A indicates a model name, and Multi-Display B indicates an input code and output code.

6. Setting Mode

6.1 Display Transition in Setting Mode

- [- - -]: Available only for the SGBW.
- [- - -]: Available only for the SGBL.
- If the MODE key is pressed and held down for approx. 5 seconds in each setting mode, the unit will move to the Default Display.

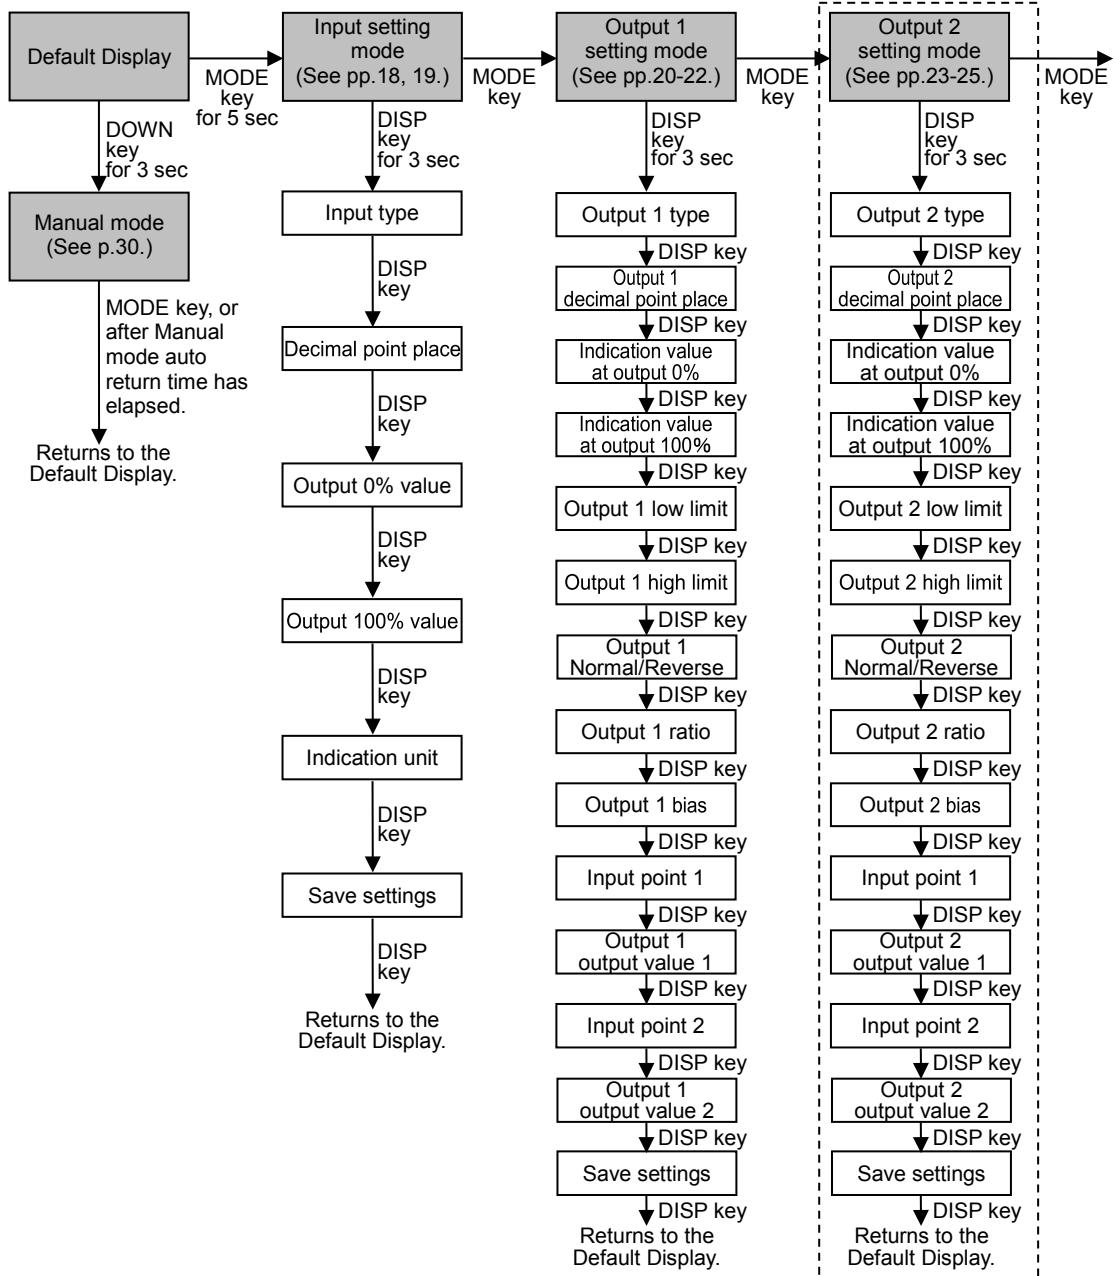

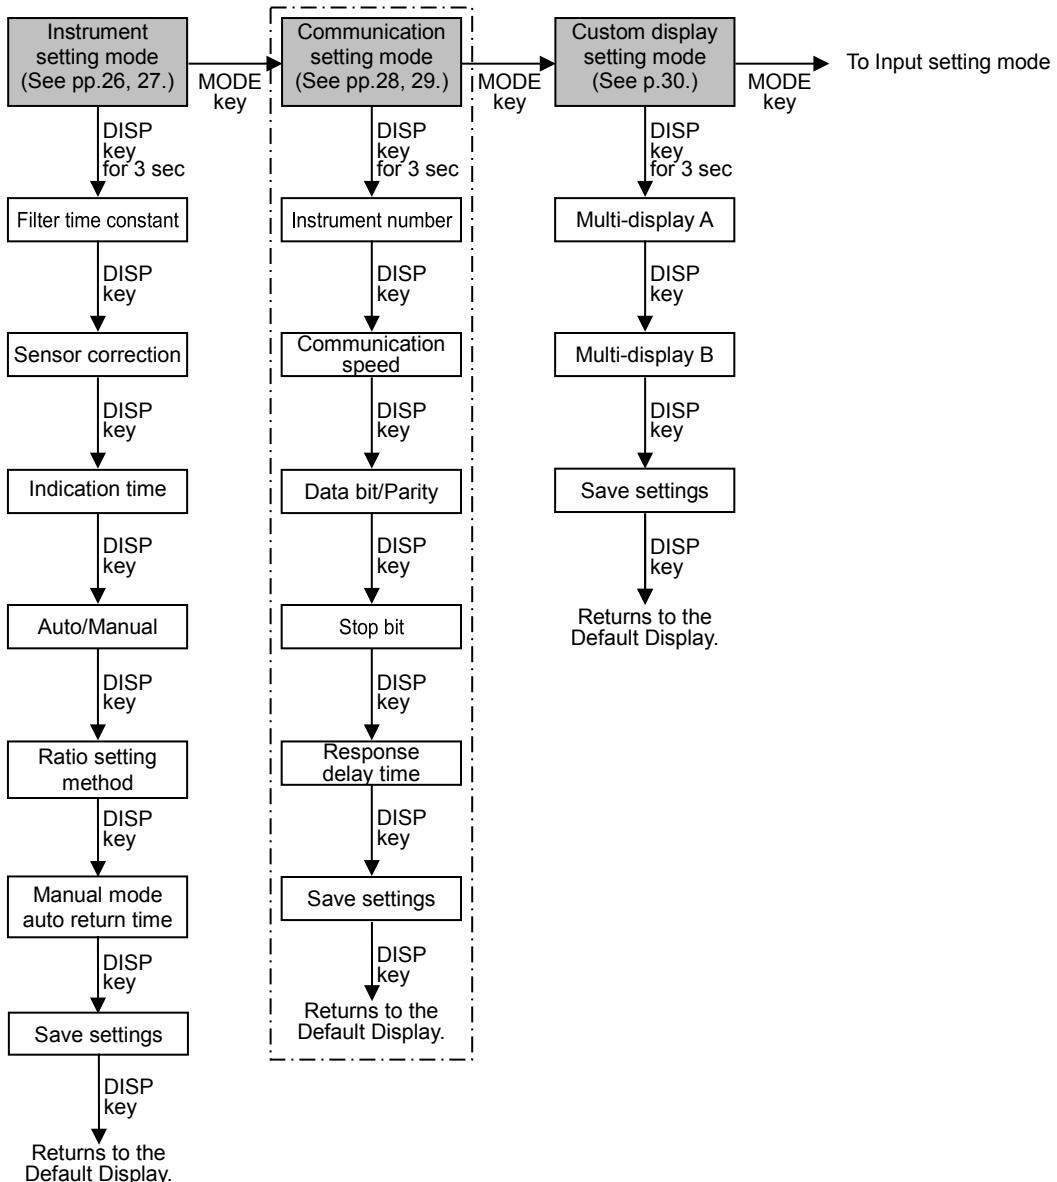

6.2 Input Setting Mode

Input Type

Selects an input type.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
4 to 20 mA Built-in 50 Ω shunt resistor		HEMA	
4 to 20 mA Externally mounted 250 Ω shunt resistor		HEBM	
4 to 20 mA Externally mounted 50 Ω shunt resistor		HEBB	
0 to 20 mA	020A		
0 to 16 mA	016A		
2 to 10 mA	210A		
0 to 10 mA	010A		
1 to 5 mA	105A		
0 to 1 mA	001A		
10 to 50 mA	1050A		
0 to 10 mV	010MV		
0 to 50 mV	050MV		
0 to 60 mV	060MV		
0 to 100 mV	0100MV		
0 to 1 V	0100V		
0 to 5 V	050V		
1 to 5 V	150V		
-5 to 5 V	H55V		
0 to 10 V	0100V		
-10 to 10 V	H100V		

Decimal Point Place

Selects a decimal point place.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No decimal point		XXXX	
1 digit after decimal point	HPXX	XXXX1	
2 digits after decimal point	HPXX	XXXX01	
3 digits after decimal point	HPXX	XXXX001	

Output 0% Value

Sets an input value (indicated on the display) at the time of output 0%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Low limit of each input type to Output 100% value		Set value	4.00

Output 100% Value

Sets an input value (indicated on the display) at the time of output 100%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Output 0% value to High limit of each input type		Set value	20.00

Indication Unit

Selects the unit for indication.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No unit			No unit
%			
mA			
V			
°C			

Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save			Save
Not save			

6.3 Output 1 Setting Mode

Output 1 Type

Selects an output 1 type.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
4 to 20 mA		420A	4 to 20 mA 420A
0 to 20 mA		20A	
0 to 16 mA		16mA	
2 to 10 mA		8mA	
0 to 10 mA		10mA	
0 to 10 mV		10mV	
0 to 100 mV		100mV	
0 to 1 V		1V	
0 to 5 V		5V	
1 to 5 V		1.5V	
0 to 10 V		10V	
-5 to 5 V *		5SV	

* Not available for the SGBW.

Output 1 Decimal Point Place

Selects a decimal point place for Output 1.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No decimal point		XXXX	2 digits after decimal point
1 digit after decimal point		XX.XX	
2 digits after decimal point		XX.XX	
3 digits after decimal point		XX.XXX	

Indication Value at Output 0%

Sets an indication value at the time of output 0%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1999 to 9999		Set value	4.00 400

Indication Value at Output 100%

Sets an indication value at the time of output 100%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1999 to 9999		Set value	20.00 2000

Output 1 Low Limit

Sets low limit of Output 1 output value.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-10.0 to Output 1 high limit		Set value	-10.0%

Output 1 High Limit

Sets high limit of Output 1 output value.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Output 1 low limit to 110.0		Set value	110.0%

Output 1 Normal/Reverse

Selects either Normal mode or Reverse mode for Output 1 status.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Normal			Normal
Reverse			

Output 1 Ratio

Sets the ratio for Output 1 output value.

Available when 'Ratio setting' is selected in [Ratio setting method] in Instrument setting mode.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0.10 to 10.00 times		Set value	1.00 times

Output 1 Bias

Sets the bias value for Output 1 output value.

Available when 'Ratio setting' is selected in [Ratio setting method] in Instrument setting mode.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1000 to 1000%		Set value	0%

Input Point 1

Sets an input point for 'Output 1 output value 1'.

Available when 'Output value setting' is selected in [Ratio setting method] in Instrument setting mode.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Output 0% value to Input point 2		Set value	4.00

Output 1 Output Value 1

Sets a value to output using the input value set in [Input point 1].

Available when 'Output value setting' is selected in [Ratio setting method] in Instrument setting mode.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Output 0% value to Output 1 output value 2		Set value	4.00

Input Point 2

Sets an input point for 'Output 1 output value 2'.

Available when 'Output value setting' is selected in [Ratio setting method] in Instrument setting mode.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Input point 1 to Output 100% value		Set value	20.00

Output 1 Output Value 2

Sets a value to output using the input value set in [Input point 2].

Available when 'Output value setting' is selected in [Ratio setting method] in Instrument setting mode.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Output 1 output value 1 to Output 100% value		Set value	20.00

Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save			Save
Not save			

6.4 Output 2 Setting Mode

Available only for the SGBW.

Output 2 Type

Selects an Output 2 type.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
4 to 20 mA		4200A	4 to 20 mA
0 to 20 mA		0200A	
0 to 16 mA		0160A	
2 to 10 mA		2100A	
0 to 10 mA		0100A	
0 to 10 mV		01MV	
0 to 100 mV		0100M	
0 to 1 V		01V	
0 to 5 V		05V	
1 to 5 V		15V	
0 to 10 V		010V	

Output 2 Decimal Point Place

Selects a decimal point place for Output 2.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No decimal point		11111	2 digits after decimal point
1 digit after decimal point		1111.1	
2 digits after decimal point		1111.11	
3 digits after decimal point		1111.111	

Indication Value at Output 0%

Sets an indication value at the time of output 0%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1999 to 9999		Set value	4.00

Indication Value at Output 100%

Sets an indication value at the time of output 100%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1999 to 9999		Set value	20.00

Output 2 Low Limit

Sets low limit of Output 2 output value.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-10.0 to Output 2 high limit		Set value	-10.0%

Output 2 High Limit

Sets high limit of Output 2 output value.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Output 2 low limit to 110.0		Set value	110.0%

Output 2 Normal/Reverse

Selects either Normal mode or Reverse mode for Output 2 status.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Normal		NAME	Normal
Reverse		REVS	

Output 2 Ratio

Sets the ratio for Output 2 output value.

Available when 'Ratio setting' is selected in [Ratio setting method] in Instrument setting mode.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0.10 to 10.00 times		Set value	1.00 times

Output 2 Bias

Sets the bias value for Output 2 output value.

Available when 'Ratio setting' is selected in [Ratio setting method] in Instrument setting mode.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1000 to 1000%		Set value	0%

Input Point 1

Sets an input point for ‘Output 2 output value 1’.

Available when ‘Output value setting’ is selected in [Ratio setting method] in Instrument setting mode.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Output 0% value to Input point 2		Set value	4.00

Output 2 Output Value 1

Sets a value to output using the input value set in [Input point 1].

Available when ‘Output value setting’ is selected in [Ratio setting method] in Instrument setting mode.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Output 0% value to Output 2 output value 2		Set value	4.00

Input Point 2

Sets an input point for ‘Output 2 output value 2’.

Available when ‘Output value setting’ is selected in [Ratio setting method] in Instrument setting mode.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Input point 1 to Output 100% value		Set value	20.00

Output 2 Output Value 2

Sets a value to output using the input value set in [Input point 2].

Available when ‘Output value setting’ is selected in [Ratio setting method] in Instrument setting mode.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Output 2 output value 1 to Output 100% value		Set value	20.00

Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save			Save
Not save			

6.5 Instrument Setting Mode

Filter Time Constant

Sets the input filter time constant.

Input fluctuation due to noise can be decreased.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0.0 to 10.0 seconds		Set value	0.0 sec

Sensor Correction

Sets sensor correction value.

Input value = Current input value + (Sensor correction value)

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1000 to 1000 *		Set value	0

* The placement of the decimal point follows the selection.

Indication Time

Sets duration from no operation until Multi-Display A, Multi-Display B and each action indicator are turned off.

When set to 00.00, they remain lit.

After indication time has elapsed, if any key is pressed while they are unlit, they will light up again.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
00 : 00 to 60 : 00 (Minutes : Seconds) 00 : 00.....Continuous 00 : 01 to 60 : 00 ... Indication time		Set value	30 : 00 (Minutes : Seconds)

Auto/Manual

If AUTO is selected, the value will be output corresponding to the input value.

When MANUAL is selected, the unit can enter Manual mode. The output value set in Manual mode will be output.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Auto			Manual
Manual			

Ratio Setting Method

The ratio and bias value can be set by selecting 'Ratio setting'.

'Output value setting' is used to determine input and output characteristics by setting 2 pairs of input point and output value.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Ratio setting	RATIO	RATE	Ratio RATIO RATE
Output value setting		OUT	

Manual Mode Auto Return Time

Sets duration from manual mode until the unit automatically returns to Default Display. If set to 0 (zero), auto return will not occur.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0 to 60 minutes	MORE	Set value	30 minutes MORE ZERO

Save Settings

Selects whether the set contents are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save	SAVE	YES	Save SAVE YES
Not save		NO	

6.6 Communication Setting Mode

Available only for the communication specifications.

Instrument Number

Sets an instrument number.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
1 to 247	 MN1	Set value	1  MN1

Communication Speed

Selects the communication speed.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
9600 bps	 M96	 96	38400 bps  M384
19200 bps		 192	
38400 bps		 384	

Data bit/Parity

Selects data bit and parity.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
8 bits/No parity	 MN8N	 8N8N	8 bits/Odd  M8ODD
8 bits/Even		 8EVEN	
8 bits/Odd		 8P8D	

Stop Bit

Selects stop bit.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
1 bit	 MN1	 11111	1 bit  M2BIT
2 bits		 11111	

Response Delay Time

Response from the instrument can be delayed after receiving command from the host computer.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0 to 1000 ms	 MN01000	Set value	10 ms  MN10

Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save			Save
Not save			

6.7 Custom Display Setting Mode

Customizes characters to be indicated on the Multi-Display A and B*.

Use alphanumeric characters and symbols.

(e.g.) FLOW, TEMP, No.1, No.2

* Number of characters which can be indicated differs depending on the display mode.

Refer to Section '5. Display Mode' (pp.14, 15).

- If Custom display mode 1 is selected:

Up to 8 characters can be displayed in total for both Multi-Display A and B.

- If any of Custom display mode 2 to 4 is selected:

Up to 4 characters can be displayed on the Multi-Display B.

Can be set from the thousands digit of the display.

Digits can be selected with the MODE key.

Multi-Display A

Characters for the Multi-Display A can be customized.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
A to Z, 0 to 9, /, –, ., (Blank)		Set value	

Multi-Display B

Characters for the Multi-Display B can be customized.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
A to Z, 0 to 9, /, –, ., (Blank)		Set value	

Save Settings

Selects whether the set contents are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save			Save
Not save			

6.8 Manual Mode

If MANUAL is selected in [Auto/Manual] in Instrument setting mode, press the DOWN key for 3 seconds on the Default Display. Then the unit will enter Manual mode.

At this time, Multi-Display A indicates Output 1 output value, and Multi-Display B indicates Output 2 output value.

The output value can be set by the UP or DOWN key. The output value is lit while setting. Pressing the DISP key switches the output to be set. The output to be set flashes.

By pressing the MODE key in Manual mode, or after Manual mode auto return time has elapsed, the unit returns to the Default Display, and outputs the value corresponding to the input value.

7. Adjustment

Performs the output zero and span adjustments.

For this instrument, the output adjustment has already been completed when shipped.

If the instrument is used with the ordered Input/Output spec, the adjustment is not required.

However, for calibration, or for the fine adjustment of the SGB to which any equipment is connected, perform the adjustment.

Connect an mV generator or Dial resistor to the input terminals of this instrument.

Connect a digital multimeter to the output terminals.

7.1 Basic Operation of Adjustment

Use the following trimmers on the front panel for adjustment.

Output 1 Zero: Adjusts the value of Output 1 Zero.

Output 1 Span: Adjusts the value of Output 1 Span.

Output 2 Zero: Adjusts the value of Output 2 Zero. (for SGBW only)

Output 2 Span: Adjusts the value of Output 2 Span. (for SGBW only)

7.2 Adjustment

All adjustment items are shown below.

Perform adjustment as follows.

7.2.1 Output 1 Adjustment

The following outlines the procedure for Output 1 adjustment.

- ① Enter the value corresponding to output 0%, and adjust the value using the 'Output 1 Zero' trimmer while viewing the output value (on the digital multimeter).
- ② Enter the value corresponding to output 100%, and adjust the value using the 'Output 1 Span' trimmer while viewing the output value (on the digital multimeter).
- ③ Enter the value corresponding to output 0% again, and confirm the output value (on the digital multimeter).
- ④ If the value corresponding to output 0% is not at 0%, repeat steps ① to ③ again.

7.2.2 Output 2 Adjustment

The procedure for Output 2 adjustment is the same as that of Output 1 adjustment.

Use Output 2 Zero and Span trimmers for adjustment.

8. Operation

8.1 Indication after Power-on

After the power is turned on, the instrument is switched to warm-up status for 3 seconds. Multi-Display A indicates a model name, and Multi-Display B indicates the input code and output code.

(e.g.) SGB-A01-0-0

Multi-Display A: 

Multi-Display B: 

A value corresponding to input 0% will be output for Output 1 and Output 2.

8.2 Operation

After warm-up status, the unit enters display mode.

The input signal selected in [Input type] will be converted to the output selected in [Output 1 type] and [Output 2 type].

8.2.1 Input Indication Range

The measured value is indicated within the following range:

[Output 0% value – (Output 100% value – Output 0% value) × 10%] to

[Output 100% value + (Output 100% value – Output 0% value) × 10%]

For a value lower than (and including) -2000, the input value and the minus (-) sign will be indicated alternately. For a value higher than (and including) 10000, the lower 4 digits will flash. (The placement of the decimal point follows the selection.)

If the measured value exceeds the indication range:  will flash.

If the measured value drops below the indication range:  will flash.

8.2.2 Indication Range of Output 1 and Output 2

The output value is indicated within the following range:

[Indication value at output 0% – (Indication value at output 100% – Indication value at output 0%) × 10%] to

[Indication value at output 100% + (Indication value at output 100% – Indication value at output 0%) × 10%]

However, the high limit value is 9999, and the low limit value is -1999.

(The placement of the decimal point follows the selection.)

8.2.3 Input Disconnection

If input is disconnected, the input status will become as follows.

Input Range	Input Status
4 to 20 mA Built-in 50 Ω shunt resistor	Equals 0 mA input.
4 to 20 mA Externally mounted 250 Ω shunt resistor	Equals 0 mA input.
4 to 20 mA Externally mounted 50 Ω shunt resistor	Overscale *
0 to 20 mA	Equals 0 mA input.
0 to 16 mA	Equals 0 mA input.

Input Range	Input Status
2 to 10 mA	Equals 0 mA input.
0 to 10 mA	Equals 0 mA input.
1 to 5 mA	Equals 0 mA input.
0 to 1 mA	Equals 0 mA input.
10 to 50 mA	Equals 0 mA input.
0 to 10 mV	Overscale *
0 to 50 mV	Overscale *
0 to 60 mV	Overscale *
0 to 100 mV	Overscale *
0 to 1 V	Overscale *
0 to 5 V	Equals 0 V input.
1 to 5 V	Equals 0 V input.
-5 to 5 V	Equals 0 V input.
0 to 10 V	Equals 0 V input.
-10 to 10 V	Equals 0 V input.

* For the overscale status, the Alarm indicator lights up, and  flashes as an input value.

8.2.4 Indication Time Setting

After preset indication time has elapsed, Multi-Display A, Multi-Display B and each action indicator are turned OFF. They will light up again if any key is pressed. They remain lit during setting mode, or in the event of an input error or input disconnection.

If the indication time is set to 00:00, they will remain lit.

8.2.5 Ratio and Bias Settings

● Ratio setting

If 'Ratio setting' is selected in [Ratio setting method], ratio and bias value for the output corresponding to the input value can be set.

• Output 1 ratio setting

Sets the ratio for Output 1 output value.

The output will be produced by $[(\text{Input} \times \text{Ratio}) + \text{Bias value}]$ (for normal output) based on the slope set in [Output 0% value] and [Output 100% value].

• Output 2 ratio setting

Sets the ratio for Output 2 output value.

The output will be produced by $[(\text{Input} \times \text{Ratio}) + \text{Bias value}]$ (for normal output) based on the slope set in [Output 0% value] and [Output 100% value].

• Output 1 bias setting

Sets the bias value for Output 1 output value

The bias value is added to $[\text{Input} \times \text{Ratio}]$ to produce the output based on the slope set in [Output 0% value] and [Output 100% value].


• Output 2 bias setting

Sets the bias value for Output 2 output value.

The bias value is added to $[\text{Input} \times \text{Ratio}]$ to produce the output based on the slope set in [Output 0% value] and [Output 100% value].

Normal output

Output

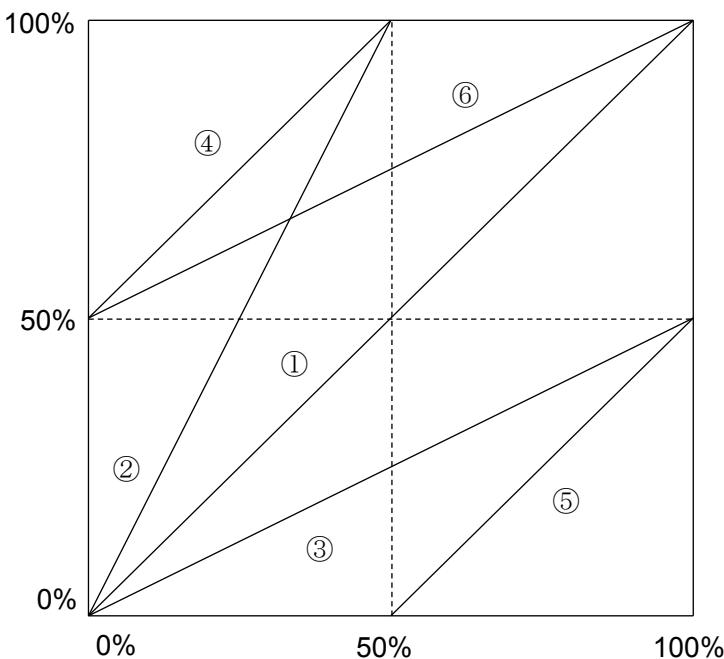

$$O = (RI + B)$$

O: Output (%)

R: Ratio

I: Input

B: Bias

$$\textcircled{1} \quad R=1.0 \quad B=0$$

$$\textcircled{2} \quad R=2.0 \quad B=0$$

$$\textcircled{3} \quad R=0.5 \quad B=0$$

$$\textcircled{4} \quad R=1.0 \quad B=50$$

$$\textcircled{5} \quad R=1.0 \quad B=-50$$


$$\textcircled{6} \quad R=0.5 \quad B=50$$

Input

(Fig. 8.2-1)

Reverse output

Output

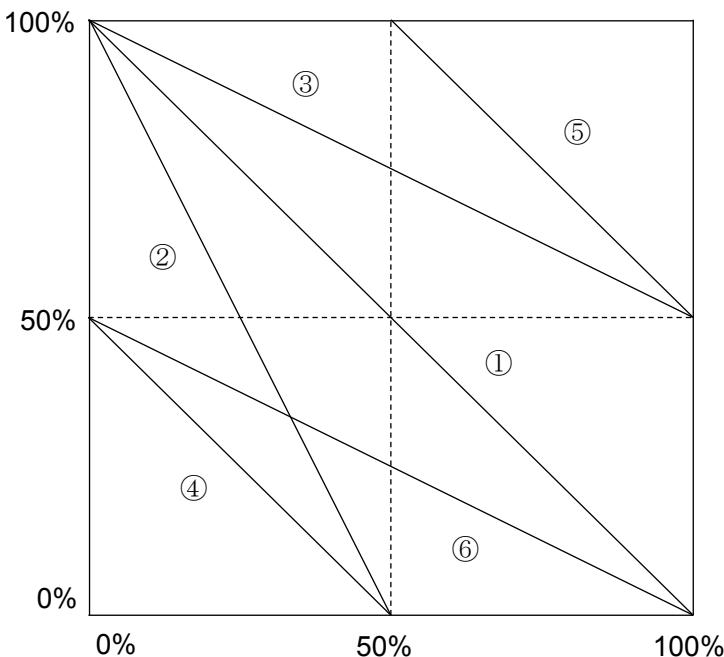

$$O = S - (RI + B)$$

O: Output (%)

R: Ratio

I: Input

B: Bias

S: 100%

$$\textcircled{1} : R=1.0 \quad B=0$$

$$\textcircled{2} : R=2.0 \quad B=0$$

$$\textcircled{3} : R=0.5 \quad B=0$$

$$\textcircled{4} : R=1.0 \quad B=50$$

$$\textcircled{5} : R=1.0 \quad B=-50$$

$$\textcircled{6} : R=0.5 \quad B=50$$


Input

(Fig. 8.2-2)

● Output value setting

If 'Output value setting' is selected in [Ratio setting method], the output value corresponding to the preset input point can be set.

When 'Output 1 output value 1' is smaller than 'Output 1 output value 2'

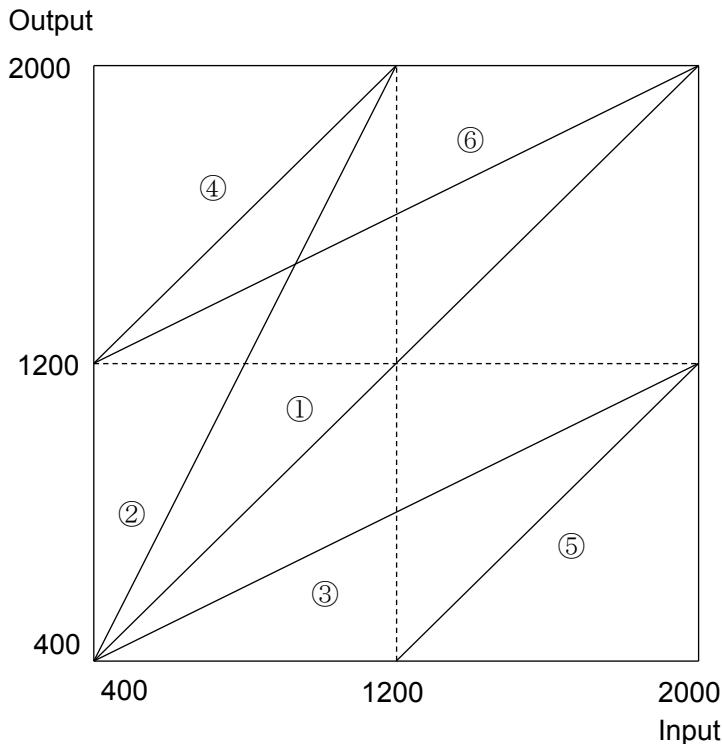

(e.g.) Output 0% value: 400
 Output 100% value: 2000
 Indication value at output 0%: 400
 Indication value at output 100%: 2000

①

Input point 1: 400 Output 1 output value 1: 400
 Input point 2: 2000 Output 1 output value 2: 2000

②

Input point 1: 400 Output 1 output value 1: 400
 Input point 2: 1200 Output 1 output value 2: 2000

③

Input point 1: 400 Output 1 output value 1: 400
 Input point 2: 2000 Output 1 output value 2: 1200

④

Input point 1: 400 Output 1 output value 1: 1200
 Input point 2: 1200 Output 1 output value 2: 2000

⑤


Input point 1: 1200 Output 1 output value 1: 400
 Input point 2: 2000 Output 1 output value 2: 1200

⑥

Input point 1: 400 Output 1 output value 1: 1200
 Input point 2: 2000 Output 1 output value 2: 2000

(Fig. 8.2-3)

When ‘Output 1 output value 1’ is larger than ‘Output 1 output value 2’

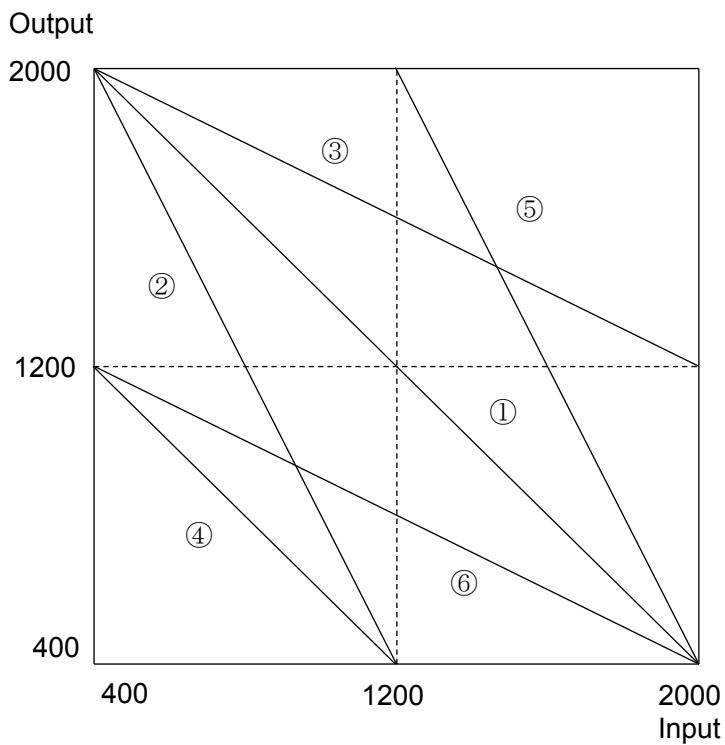

(e.g.) Output 0% value: 400
 Output 100% value: 2000
 Indication value at output 0%: 400
 Indication value at output 100%: 2000

①	Input point 1: 400	Output 1 output value 1: 2000
	Input point 2: 2000	Output 1 output value 2: 400
②	Input point 1: 400	Output 1 output value 1: 2000
	Input point 2: 1200	Output 1 output value 2: 400
③	Input point 1: 400	Output 1 output value 1: 2000
	Input point 2: 2000	Output 1 output value 2: 1200
④	Input point 1: 400	Output 1 output value 1: 1200
	Input point 2: 1200	Output 1 output value 2: 400
⑤	Input point 1: 1200	Output 1 output value 1: 2000
	Input point 2: 2000	Output 1 output value 2: 400
⑥	Input point 1: 400	Output 1 output value 1: 1200
	Input point 2: 2000	Output 1 output value 2: 400

(Fig. 8.2-4)

9. Specifications

Input Specifications

Direct current input	Input Range	Shunt Resistor	Indication Resolution
	4 to 20 mA DC	50 Ω *	1
		250 Ω	1
		50 Ω	1
	0 to 20 mA DC	250 Ω	1
	0 to 16 mA DC	62.5 Ω	1
	2 to 10 mA DC	250 Ω	1
	0 to 10 mA DC	100 Ω	1
	1 to 5 mA DC	100 Ω	1
	0 to 1 mA DC	1000 Ω	1
	10 to 50 mA DC	10 Ω	1

* Built-in shunt resistor

DC voltage input	Input Range	Input Resistance	Indication Resolution
	0 to 10 mV	1 MΩ	1
	0 to 50 mV		1
	0 to 60 mV		1
	0 to 100 mV		1
	0 to 1 V		1
	0 to 5 V		1
	1 to 5 V		1
	-5 to 5 V		1
	0 to 10 V		1
	-10 to 10 V		1

Output 1 Specifications

Direct current	Output Range	Allowable Load Resistance	Zero Adjustment Range	Span Adjustment Range		
	4 to 20 mA	750 Ω max.	-5 to 5%	95 to 105%		
	0 to 20 mA *	750 Ω max.				
	0 to 16 mA *	900 Ω max.				
	2 to 10 mA	1500 Ω max.				
	0 to 10 mA *	1500 Ω max.				
* 0 mA or less: Out of base accuracy						
DC voltage	Output Range	Allowable Load Resistance	Zero Adjustment Range	Span Adjustment Range		
	0 to 10 mV *1	10 kΩ min.	-5 to 5%	95 to 105%		
	0 to 100 mV *1	100 kΩ min.				
	0 to 1 V *1	1000 Ω min.				
	0 to 5 V *1	5000 Ω min.				
	1 to 5 V	5000 Ω min.				
	0 to 10 V *1	10 kΩ min.				
	-5 to 5 V *2	10 kΩ min.				
*1: 0 V or less: Out of base accuracy						
*2: Not available for the SGBW.						

Output 2 Specifications

Direct current	Output Range	Allowable Load Resistance	Zero Adjustment Range	Span Adjustment Range
	4 to 20 mA	750 Ω max.		
	0 to 20 mA *	750 Ω max.		
	0 to 16 mA *	900 Ω max.		
	2 to 10 mA	1500 Ω max.		
	0 to 10 mA *	1500 Ω max.		
* 0 mA or less: Out of base accuracy				
DC voltage	Output Range	Allowable Load Resistance	Zero Adjustment Range	Span Adjustment Range
	0 to 10 mV *	10 kΩ min.		
	0 to 100 mV *	100 kΩ min.		
	0 to 1 V *	1000 Ω min.		
	0 to 5 V *	5000 Ω min.		
	1 to 5 V	5000 Ω min.		
	0 to 10 V *	10 kΩ min.		
* 0 V or less: Out of base accuracy.				

Performance

Base accuracy (at 25°C)	±0.1% of each input span
Cold junction compensation accuracy	±0.5°C (1.0°F) at 20±10°C
Temperature coefficient	±0.015 %/°C 0 to 10 mV output: 0.02 %/°C
Response time	500 ms max. (0→90%)
Indication update cycle	125 ms
Insulation resistance	100 MΩ minimum, at 500 V DC
Dielectric strength	2.0 kV AC for 1 minute

General Structure

Dimensions	22.5 x 89 x 70 mm (W x H x D)
Weight	Approx. 77 g
Mounting method	DIN rail
Case	Flame-resistant resin, Color: Black
Front panel	Polycarbonate

Installation Specifications

Power supply	100 to 240 V AC 50/60 Hz 24 V AC/DC 50/60 Hz
Allowable voltage range	100 to 240 V AC: 85 to 264 V AC 24 V AC/DC: 20 to 28 V AC/DC
Power consumption	100 to 240 V AC: Approx. 9 VA max. (SGBL: Approx. 10 VA max.) 24 V AC: Approx. 6 VA max. 24 V DC: Approx. 3 W max.
Ambient temperature	-10 to 55°C (Non-condensing, no icing)
Ambient humidity	35 to 85 %RH (Non-condensing)

Serial Communication (for SGBL)

Operation from an external computer	Reading and setting of various set values Reading of the input value and action status Function change
Communication line	EIA RS-485
Communication method	Half-duplex communication
Communication speed	9600, 19200, 38400 bps (Selectable by keypad) (Factory default: 38400 bps)
Synchronization method	Start-stop synchronization
Communication protocol	Modbus RTU
Start bit	1 bit
Data bit	8 bits
Parity	Even/Odd/No parity (Selectable by keypad) (Factory default: Odd)
Stop bit	1 bit or 2 bits (Selectable by keypad) (Factory default: 1 bit)
Response delay time	Response from the instrument can be delayed after receiving command from the host computer. 0 to 1000 ms (Factory default: 10 ms)

Standard Function

Power failure countermeasure	The setting data is backed up in the non-volatile IC memory.
Self-diagnosis	The CPU is monitored by a watchdog timer, and if an abnormal status occurs, the instrument is switched to warm-up status, turning all outputs OFF.

10. Troubleshooting

10.1 Indication

Problem	Possible Cause	Solution
Multi-Display A or B flashes  or  when it indicates an input value.	The sensor may be disconnected.	Replace with a new sensor.
	Check whether the sensor is securely mounted to the input terminals of this instrument.	Connect the sensor terminals to the instrument input terminals securely.
	Check the input signal source.	Ensure that the input signal source works normally.
Multi-Display A or B is irregular or unstable when it indicates an input value.	Check whether sensor input is correct.	Select the same sensor type as that of currently used sensor.
	Sensor correction value is unsuitable.	Set it to a suitable value.
	AC leaks into the sensor circuit.	Use an ungrounded type sensor.
	There may be equipment that interferes with or makes noise near the instrument.	Keep the instrument clear of any potentially disruptive equipment.
Displays and indicators are unlit. If any key is pressed, they will light up.	The Indication Time (p.26) is set to any value other than 00 : 00. (Factory default is 30 : 00.)	To indicate continuously, set the Indication Time (p.26) to "00 : 00".

10.2 Key Operation

Problem	Possible Cause	Solution
If the DISP key is pressed, Multi-Display A shows  , and the display mode cannot be switched.	The DISP key is in locked status.	Press the DISP key for approx. 3 seconds to release the key lock.

10.3 Operation

Problem	Possible Cause	Solution
When Multi-Display A or B indicates an input value, the input value does not change.	The sensor may be out of order.	Replace with the new sensor.
	Check whether input and output wires are securely connected to the I/O terminals of the instrument.	Ensure that input and output wires are securely connected to the I/O terminals of the instrument.
	Check whether the wiring of input and output are correct.	Wire them correctly.
No output	Selections in [Output 1 type (p.20)], [Output 1 Normal/Reverse (p.21)], [Output 2 type (p.23)] or [Output 2 Normal/Reverse (p.24)] may be incorrect.	Make a correct selection in [Output 1 type (p.20)], [Output 1 Normal/Reverse (p.21)], [Output 2 type (p.23)] or [Output 2 Normal/Reverse (p.24)].

11. Character Table

Please use the following factory default values for your reference.

Display mode

Setting Item	Multi-Display A	Multi-Display B	Data
Default display mode	Follows currently indicated display mode.		
RUN display mode 1	Input value	Output 1 output value	
RUN display mode 2 *	Input value	Output 2 output value	
RUN display mode 3	Input value	Unlit	
RUN display mode 4 *	Output 1 output value	Output 2 output value	
RUN display mode 5	Unlit	Output 1 output value	
RUN display mode 6 *	Unlit	Output 2 output value	
Custom display mode 1	RRRR	RRRR	
Custom display mode 2	Input value	RRRR	
Custom display mode 3	Output 1 output value	RRRR	
Custom display mode 4 *	Output 2 output value	RRRR	
Model display mode	Model	Input, Output codes	

* Available only for the SGBW.

Setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Input setting mode	KNOW	Unlit	
Output 1 setting mode	BUEM	Unlit	
Output 2 setting mode *	BUBB	Unlit	
Instrument setting mode	RNCX	Unlit	
Communication setting mode	CBMM	Unlit	
Custom display setting mode	BUSE	Unlit	

* Available only for the SGBW.

Input setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Input type	SENS	HOUR	
Decimal point place	BRMM	XXXX	
Output 0% value	SEEN	XHII	
Output 100% value	SELH	2000	
Indication unit	UNKE	NONE	
Save settings	SAVE	YESX	

Output 1 setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Output 1 type	OUT1	OUT1	
Output 1 decimal point place	DRAM	X400	
Indication value at output 0%	00ZM	X400	
Indication value at output 100%	00SM	2000	
Output 1 low limit	BLIM	X400	
Output 1 high limit	BHIM	X400	
Output 1 Normal/Reverse	FRUN	NORM	
Output 1 ratio	RARE	X400	
Output 1 bias	BRAZ	X400	
Input point 1	INP1	X400	
Output 1 output value 1	SL01	X400	
Input point 2	INP2	2000	
Output 1 output value 2	SL02	2000	
Save settings	SAVE	YES	

Output 2 setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Output 2 type	OUT2	OUT2	
Output 2 decimal point place	DRAM	X400	
Indication value at output 0%	00Z2	X400	
Indication value at output 100%	00S2	2000	
Output 2 low limit	BLI2	X400	
Output 2 high limit	BHI2	X400	
Output 2 Normal/Reverse	FRU2	NORM	
Output 2 ratio	RARE	X400	
Output 2 bias	BRAZ	X400	
Input point 1	INP1	X400	
Output 2 output value 1	SL01	X400	
Input point 2	INP2	2000	
Output 2 output value 2	SL02	2000	
Save settings	SAVE	YES	

Instrument setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Filter time constant	FLTE	X400	
Sensor correction	SERS	X400	
Indication time	INME	2000	
Auto/Manual	MARS	MANU	
Ratio setting method	RASE	RARE	
Manual mode auto return time	MARL	X400	
Save settings	SAVE	YES	

Communication setting mode (for SGBL)

Setting Item	Multi-Display A	Multi-Display B	Data
Instrument number	0MNG	XXXXX	
Communication speed	0MSP	XXXXH	
Data bit/Parity	0MR&	BBBBB	
Stop bit	0MSE	XXXXX	
Response delay time	0MSH	XXXXD	
Save settings	SAVE	YESX	

Custom display setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Multi-Display A	VERA	RRRR	
Multi-Display B	BBAB	RRRR	
Save settings	SAVE	YESX	

***** Inquiries *****

For any inquiries about this unit, please contact our agency or the vendor where you purchased the unit after checking the following.

[Example]

- Model ----- SGB-A01-0-0
- Serial number ----- 154F05000

In addition to the above, please let us know the details of the malfunction, or discrepancy, and the operating conditions.

**SHINKO TECHNO'S CO., LTD.
OVERSEAS DIVISION**

Head Office: 2-5-1, Senbahigashi, Minoo, Osaka, Japan

URL: <http://www.shinko-technos.co.jp/e/> Tel : +81-72-727-6100

E-mail: overseas@shinko-technos.co.jp Fax: +81-72-727-7006