



Let us explain how to distinguish installation of normal USB driver from driver for ARM.
The setting screen will be shown.

- (1) Left-click the [Start] in the lower left hand side of the screen. → Left-click the [Setting].
The setting screen will be shown. [1]

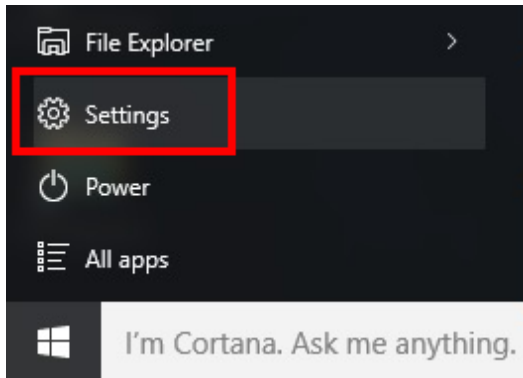

[1]

- (2) In the Settings screen, left-click on System.
The system screen will be shown. [2]

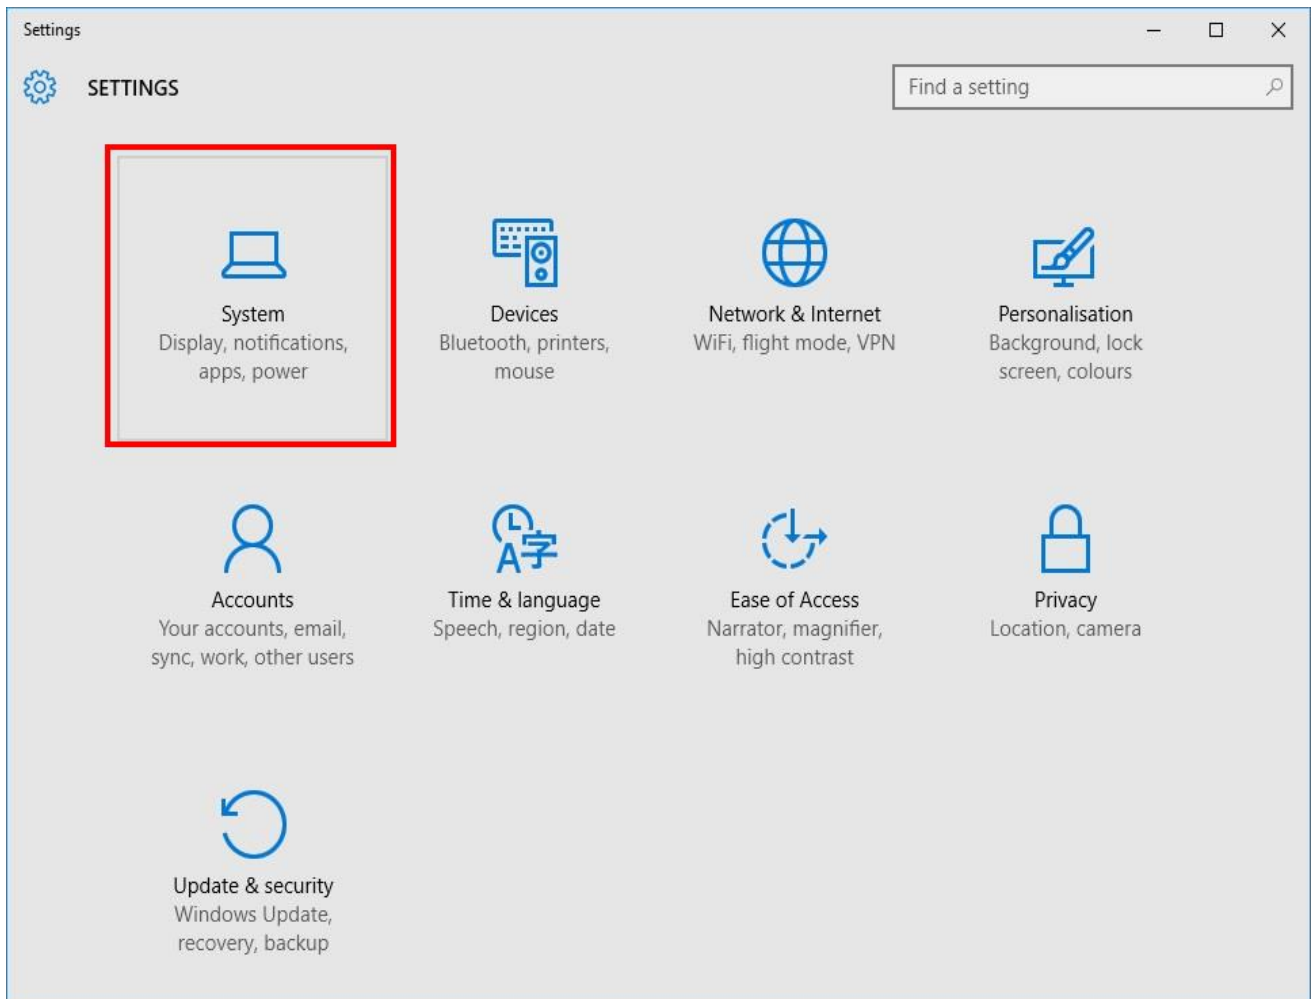


[2]

(3) Left-click the [More information] in the Setting screen.

The More information screen will be shown. [3]

If [ARM base processor] is stated in System type, it needs to install a USB driver for ARM.

For any other cases, you can use a normal USB driver.

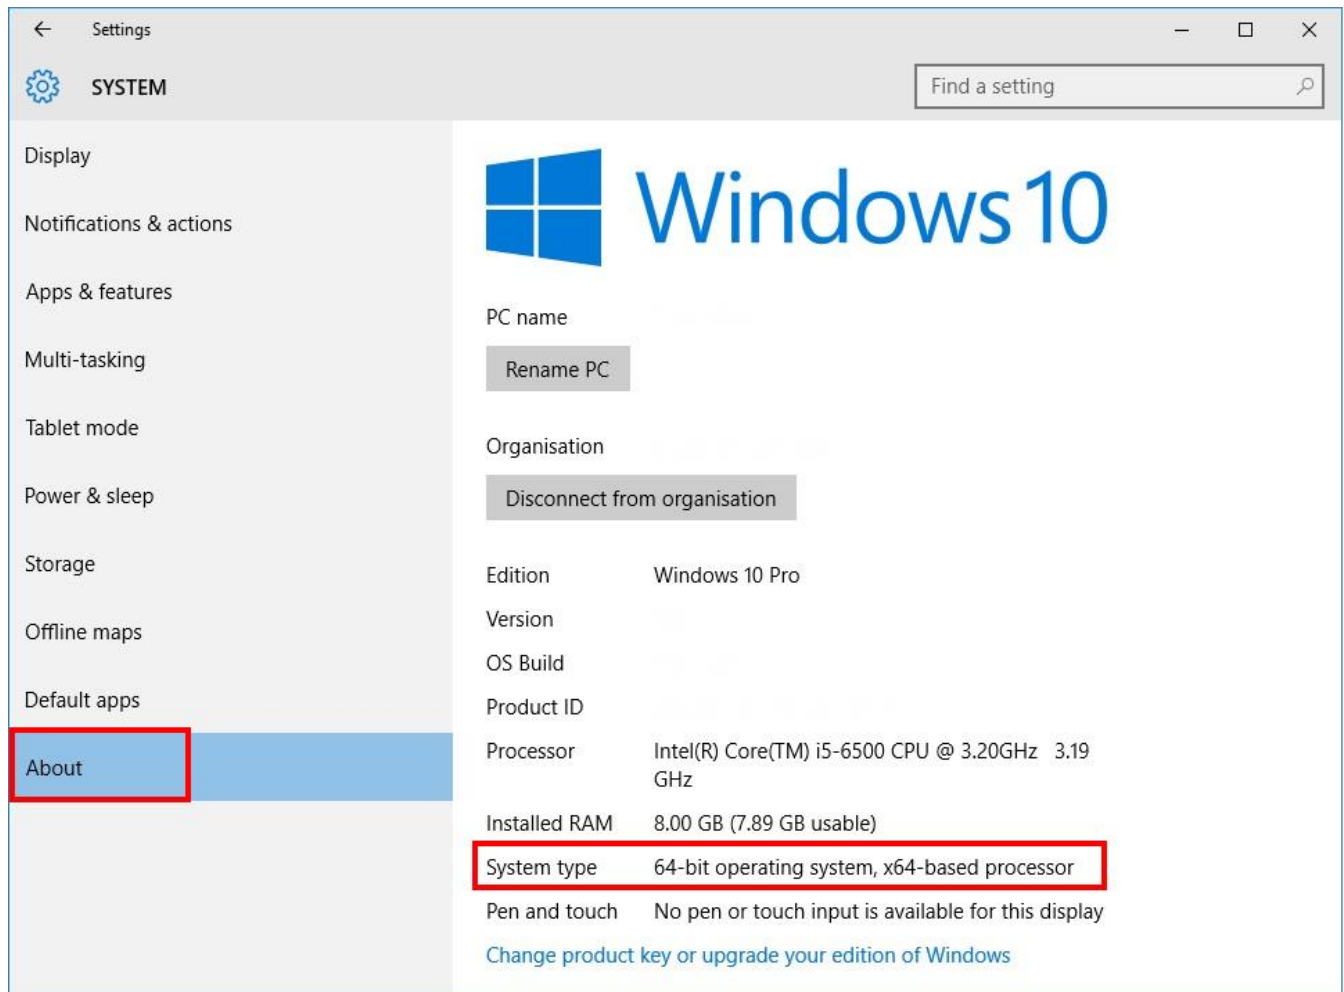

[3]