


# PULSE-ANALOG TRANSMITTER

## SGJ

## SGJW

## SGJL

### INSTRUCTION MANUAL

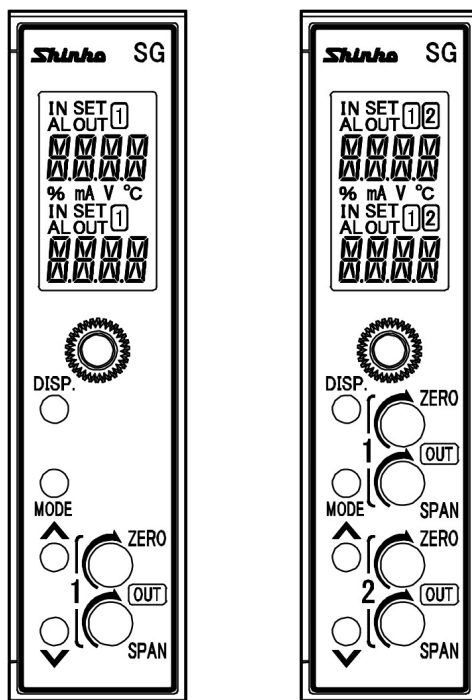

**Shinho**

# Preface


Thank you for purchasing our SGJ, SGJW or SGJL, Pulse-Analog Transmitter. This manual contains instructions for the mounting, functions, operations and notes when operating the SGJ, SGJW or SGJL. To prevent accidents arising from the misuse of this instrument, please ensure the operator receives this manual.

## Notes

- This instrument should be used in accordance with the specifications described in the manual. If it is not used according to the specifications, it may malfunction or cause a fire.
- Be sure to follow the warnings, cautions and notices. If they are not observed, serious injury or malfunction may occur.
- The contents of this instruction manual are subject to change without notice.
- Care has been taken to ensure that the contents of this instruction manual are correct, but if there are any doubts, mistakes or questions, please inform our sales department.
- This instrument is designed to be installed on a DIN rail within a control panel. If it is not, measures must be taken to ensure that the operator does not touch power terminals or other high voltage sections.
- Any unauthorized transfer or copying of this document, in part or in whole, is prohibited.
- Shinko Technos Co., Ltd. is not liable for any damage or secondary damage(s) incurred as a result of using this product, including any indirect damage.

### **SAFETY PRECAUTIONS (Be sure to read these precautions before using our products.)**

The safety precautions are classified into categories: "Warning" and "Caution".

Depending on circumstances, procedures indicated by  Caution may result in serious consequences, so be sure to follow the directions for usage.



### **Warning**

Procedures which may lead to dangerous conditions and cause death or serious injury, if not carried out properly.



### **Caution**

Procedures which may lead to dangerous conditions and cause superficial to medium injury or physical damage or may degrade or damage the product, if not carried out properly.



### **Warning**

- To prevent an electrical shock or fire, only Shinko or qualified service personnel may handle the inner assembly.
- To prevent an electrical shock, fire, or damage to instrument, parts replacement may only be undertaken by Shinko or qualified service personnel.



### **Safety Precautions**

- To ensure safe and correct use, thoroughly read and understand this manual before using this instrument.
- This instrument is intended to be used for industrial machinery, machine tools and measuring equipment. Verify correct usage after purpose-of-use consultation with our agency or main office. (Never use this instrument for medical purposes with which human lives are involved.)
- External protection devices such as protective equipment against excessive temperature rise, etc. must be installed, as malfunction of this product could result in serious damage to the system or injury to personnel. Proper periodic maintenance is also required.
- This instrument must be used under the conditions and environment described in this manual. Shinko Technos Co., Ltd. does not accept liability for any injury, loss of life or damage occurring due to the instrument being used under conditions not otherwise stated in this manual.



### **Caution with Respect to Export Trade Control Ordinance**

To avoid this instrument from being used as a component in, or as being utilized in the manufacture of weapons of mass destruction (i.e. military applications, military equipment, etc.), please investigate the end users and the final use of this instrument. In the case of resale, ensure that this instrument is not illegally exported.

## ■ Installation Precautions



### Caution

This instrument is intended to be used under the following environmental conditions (IEC61010-1): Overvoltage category II, Pollution degree 2

Ensure the mounting location corresponds to the following conditions:

- A minimum of dust, and an absence of corrosive gases
- No flammable, explosive gases
- No mechanical vibrations or shocks
- No exposure to direct sunlight, an ambient temperature of -10 to 55°C (14 to 131°F) that does not change rapidly, and no icing
- An ambient non-condensing humidity of 35 to 85 %RH
- No large capacity electromagnetic switches or cables through which large current is flowing
- No water, oil or chemicals or the vapors of these substances can come into direct contact with the unit.
- When installing this unit within a control panel, please note that ambient temperature of this unit – not the ambient temperature of the control panel – must not exceed 55°C (131°F). Otherwise the life of electronic components (especially electrolytic capacitor) may be shortened.

**Note:** Avoid setting this instrument directly on or near flammable material even though the case of this instrument is made of flame-resistant resin.

## ■ Wiring Precautions



### Caution

- Do not leave bits of wire in the instrument, because they could cause a fire and malfunction.
- When wiring, use a crimping pliers and a solderless terminal with an insulation sleeve in which an M3 screw fits.
- Tighten the terminal screw using the specified torque. If excessive force is applied to the screw when tightening, the screw or case may be damaged.
- This instrument does not have a built-in power switch, circuit breaker and fuse. It is necessary to install a power switch, circuit breaker and fuse near the instrument. (Recommended fuse: Time-lag fuse, rated voltage 250 V AC, rated current 2 A)
- For wiring of the AC power source, be sure to use terminals as described in this manual. If the AC power source is connected to incorrect terminals, the unit will be burnt out.
- Do not apply a commercial power source to the sensor which is connected to the input terminal nor allow the power source to come into contact with the sensor.
- When using DC voltage and current input, do not confuse polarity when wiring.
- Keep the input/output wires and power line separate.

## ■ Operation and Maintenance Precautions



### Caution

- Do not touch live terminals. This may cause an electrical shock or problems in operation.
- Turn the power supply to the instrument OFF when retightening the terminal or cleaning. Working on or touching the terminal with the power switched ON may result in severe injury or death due to electrical shock.
- Use a soft, dry cloth when cleaning the instrument.  
(Alcohol based substances may tarnish or deface the unit.)
- As the display section is vulnerable, be careful not to put pressure on, scratch or strike it with a hard object.

**Characters used in this manual** [☐ : No character is indicated (unlit).]

Indication	4	0	1	2	3	4	5	6	7	8	9	℃	℉
Number, °C/°F	-1	0	1	2	3	4	5	6	7	8	9	°C	°F
Indication	A	b	C	d	E	F	G	H	I	J	K	L	M
Alphabet	A	B	C	D	E	F	G	H	I	J	K	L	M
Indication	N	o	P	Q	R	S	T	U	V	W	X	Y	Z
Alphabet	N	O	P	Q	R	S	T	U	V	W	X	Y	Z


## Contents

	Page
<b>1. Model</b> .....	5
1.1 Model .....	5
1.2 How to Read the Model Label .....	6
<b>2. Name and Functions</b> .....	7
2.1 Front Panel .....	7
2.2 Display Section .....	8
<b>3. Mounting</b> .....	9
3.1 External Dimensions (Scale: mm) .....	9
3.2 Mounting to, and Removal from the DIN Rail .....	10
<b>4. Wiring</b> .....	11
4.1 Lead Wire Solderless Terminal .....	11
4.2 Circuit Configuration .....	11
4.3 Terminal Arrangement .....	12
4.4 Wiring .....	13
<b>5. Display Mode</b> .....	15
<b>6. Setting Mode</b> .....	17
6.1 Display Transition in Setting Mode .....	17
6.2 Input Setting Mode .....	19
6.3 Output 1 Setting Mode .....	21
6.4 Output 2 Setting Mode .....	23
6.5 Instrument Setting Mode .....	25
6.6 Communication Setting Mode .....	26
6.7 Custom Display Setting Mode .....	28
6.8 Manual Mode .....	28
<b>7. Adjustment</b> .....	29
7.1 Basic Operation of Adjustment .....	29
7.2 Adjustment .....	29
7.2.1 Output 1 Adjustment .....	29
7.2.2 Output 2 Adjustment .....	29
<b>8. Operation</b> .....	30
8.1 Indication after Power-on .....	30
8.2 Operation .....	30
8.2.1 Input Indication Range .....	30
8.2.2 Indication Range of Output 1 and Output 2 .....	30
8.2.3 Indication Time .....	30
8.2.4 Detecting Unconnected Sensor .....	30
<b>9. Specifications</b> .....	31
<b>10. Troubleshooting</b> .....	34
10.1 Indication .....	34
10.2 Key Operation .....	34
10.3 Operation .....	35
<b>11. Character Table</b> .....	36


# 1. Model

## 1.1 Model


### SGJ

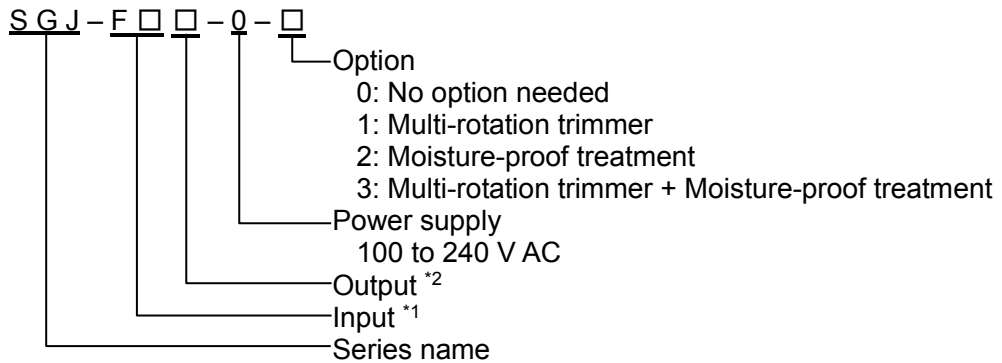

### SGJW

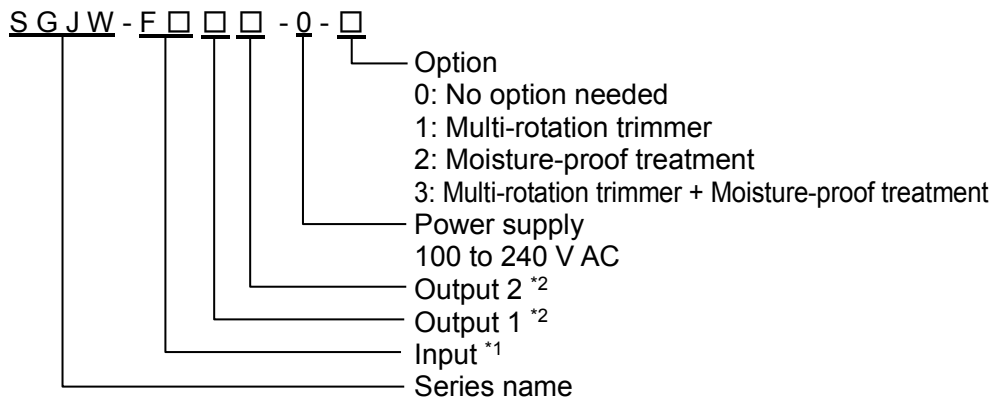

### SGJL

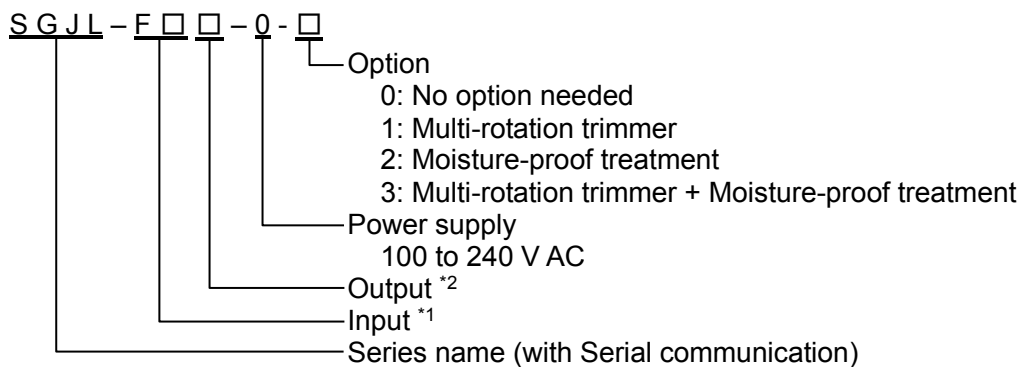

**\*1: Input**

Code	Input Type	
F0	Open collector	0.001 Hz to 100 kHz
F1	Voltage pulse	0.001 Hz to 100 kHz
F2	Mechanical contact	0.001 Hz to 30 Hz
F3	Line driver	0.001 Hz to 100 kHz

**\*2: Output 1, Output 2**


Code	Output Type	Code	Output Type
1	Current output	A	Voltage output
2		B	
3		C	
4		D	
5		E	
	F		
	G		

\*1: 0 V or less: Out of base accuracy

\*2: Not available for the SGJW.

**1.2 How to Read the Model Label**


The model label is attached to the left side of the case.

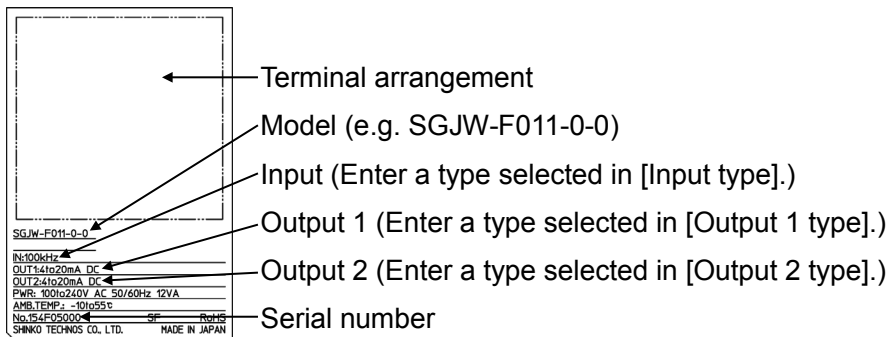

(Fig. 1.2-1)

# 2. Name and Functions

## 2.1 Front Panel

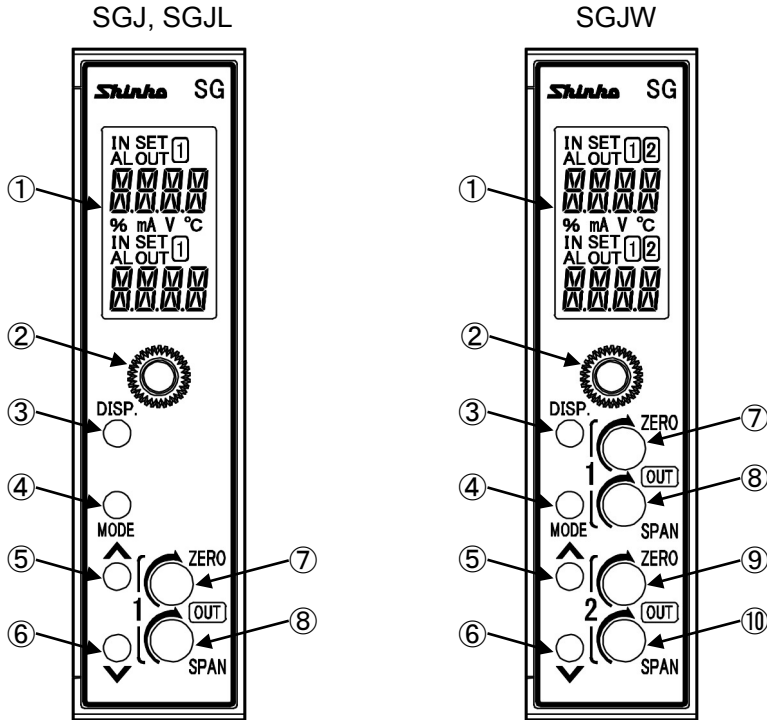


(Fig. 2.1-1)

①	<b>Display section</b>	Indicates setting contents, input value, output value, etc.
②	<b>Mounting screw</b>	Used for fixing the instrument to the socket or removal from it.
③	<b>DISP key</b>	Switches the displays, and moves to the next setting item. In Manual mode, Output 1 and Output 2 setting can be switched. Releases the lock status of the DISP key by pressing for 3 seconds.
④	<b>MODE key</b>	Selects either a setting mode or a display mode. Shifts the digit for the Custom Display. Enters the setting mode by pressing and holding for 5 seconds.
⑤	<b>Up key</b>	Increases the numerical value. Contents of Multi-Display A and B can be changed alternately when Default Display is RUN display mode 1, 2*, 3, 4*, 5 and 6*.
⑥	<b>DOWN key</b>	Decreases the numerical value. Enters Manual mode by pressing for 3 seconds.
⑦	<b>Output 1 Zero</b>	Adjusts the value of Output 1 Zero.
⑧	<b>Output 1 Span</b>	Adjusts the value of Output 1 Span.
⑨	<b>Output 2 Zero*</b>	Adjusts the value of Output 2 Zero.
⑩	<b>Output 2 Span*</b>	Adjusts the value of Output 2 Span.

\* For the SGJW only

## 2.2 Display Section

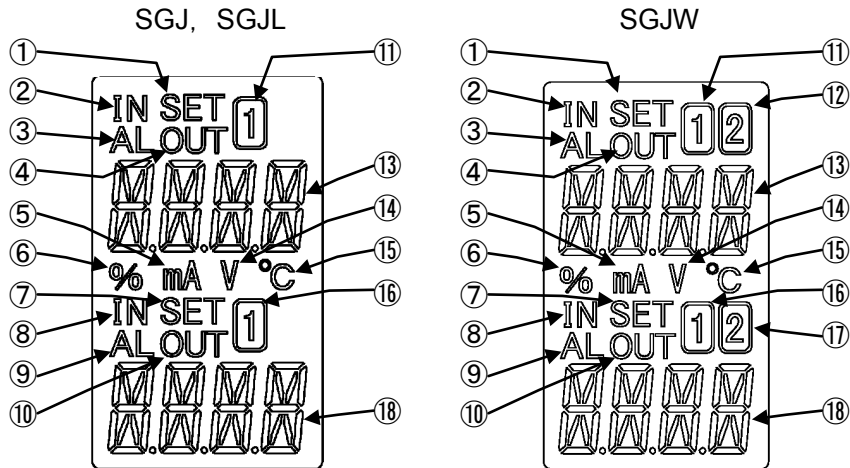

(Fig. 2.2-1)

①	<b>Setting display indicator A</b>	Lights up in Manual mode.
②	<b>Input indicator A</b>	Lights up when Multi-Display A indicates an input value.
③	<b>Alarm indicator A</b>	Lights up if an input error or input disconnection occurs in a display mode except All unlit display mode.
④	<b>Output indicator A</b>	Lights up when Multi-Display A indicates an output value.
⑤	<b>mA indicator</b>	Lights up when mA is selected in [Indication unit].
⑥	<b>% indicator</b>	Lights up in Manual mode or when % is selected in [Indication unit].
⑦	<b>Setting display indicator B</b>	Lights up for the setting display. For the SGJW, lights up for the setting display or in Manual mode.
⑧	<b>Input indicator B</b>	Lights up when Multi-Display B indicates an input value.
⑨	<b>Alarm indicator B</b>	Lights up if an input error or input disconnection occurs while Multi-Display B indicates an input value.
⑩	<b>Output indicator B</b>	Lights up when Multi-Display B indicates an output value.
⑪	<b>1 indicator A</b>	Lights up in Manual mode or when Multi-Display A indicates Output 1 value.
⑫	<b>2 indicator A</b>	Lights up when Multi-Display A indicates Output 2 value.
⑬	<b>Multi-Display A</b>	Indicates the following in accordance with the display indication: Input value, output value, custom characters, setting item
⑭	<b>V indicator</b>	Lights up when V is selected in [Indication unit].
⑮	<b>°C indicator</b>	Lights up when °C is selected in [Indication unit].
⑯	<b>1 indicator B</b>	Lights up when Multi-Display B indicates Output 1 value.
⑰	<b>2 indicator B</b>	Lights up when Multi-Display B indicates Output 2 value.
⑱	<b>Multi-Display B</b>	Indicates the following in accordance with the display indication: Input value, output value, setting value


**Output indicators A and B, Alarm indicators A and B: Red**

**Other indicators: White**




# 3. Mounting

## 3.1 External Dimensions (Scale: mm)

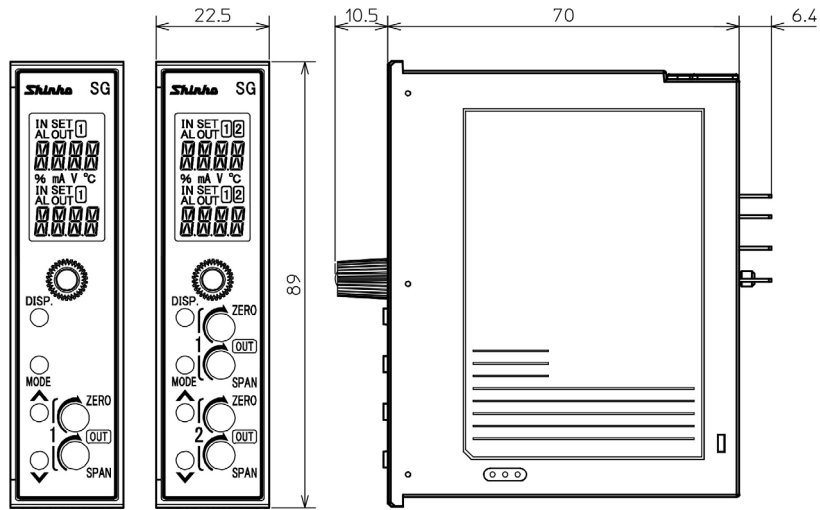

**8P socket (SGJ, SGJL)**

**11P socket (SGJW)**

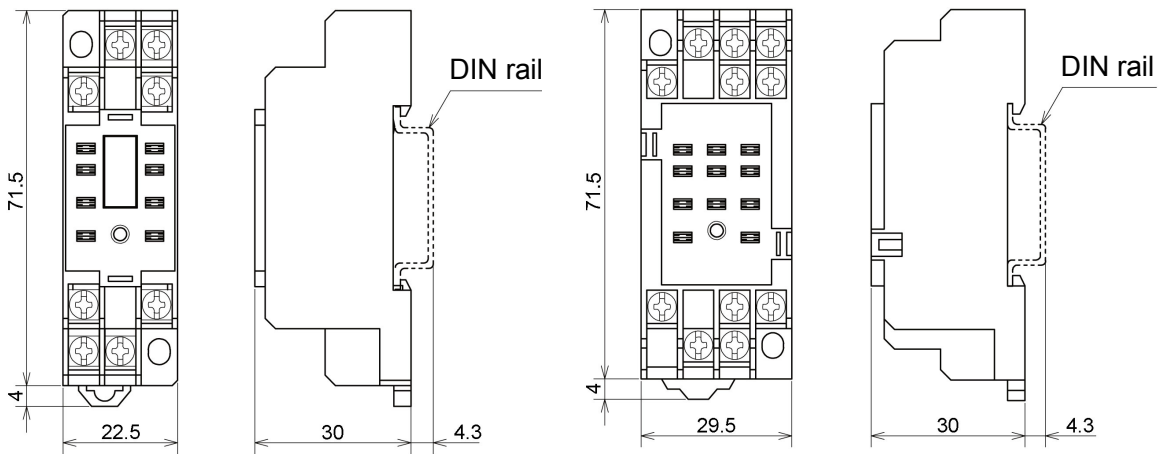

(Fig. 3.1-1)

### 3.2 Mounting to, and Removal from the DIN Rail



## Caution

- Mount the DIN rail horizontally.
- To remove the socket, a flat blade screwdriver is required.  
Never turn the screwdriver when inserting it into the Lock lever. If excessive power is applied to the lever, it may break.
- If the instrument is mounted in a position susceptible to vibration or shock, mount commercially available fastening plates at both ends of the instrument.

#### Recommended Fastening Plate

Manufacturer	Model	
Omron Corporation	End plate	PFP-M
IDEC Corporation	Fastening plate	BNL6
Panasonic Electric Works Co., Ltd.	Fastening plate	ATA4806

#### Mounting to the DIN rail (Fig. 3.2-1)

- ① Separate the instrument from the socket by loosening the mounting screw on the front panel.
- ② Make sure the lock lever of the socket is located in the lower part of the socket.  
Hook the upper side of the socket onto the DIN rail, then fit the lower part of the socket onto the DIN rail (A clicking sound should be heard when done properly).




## Caution

- Before inserting the instrument to the socket, make sure the cable is wired properly. (Refer to “4. Wiring”.)
- When inserting or removing the socket, make sure the socket is oriented vertically. If force is applied in any other direction than vertically, a malfunction may occur.
- If the mounting screw is fastened too tightly, a malfunction may occur.


- ③ Insert the SGJ into the socket.
- ④ Fasten the mounting screw by turning it clockwise, to secure the SGJ onto the socket. Tighten the screw lightly.

#### Removal from the DIN rail (Fig. 3.2-2)

- ① Turn the power to the instrument OFF.
- ② Separate the instrument from the socket by loosening the mounting screw on the front panel.
- ③ Insert a flat blade screwdriver into the Lock lever (lower part of the socket), and remove the socket from the DIN rail while pulling the lever down.

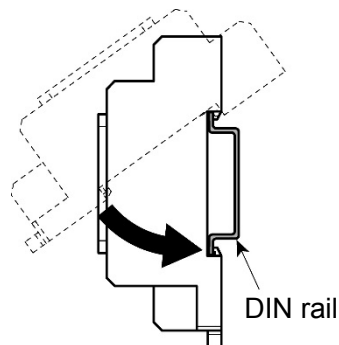

(Fig. 3.2-1)

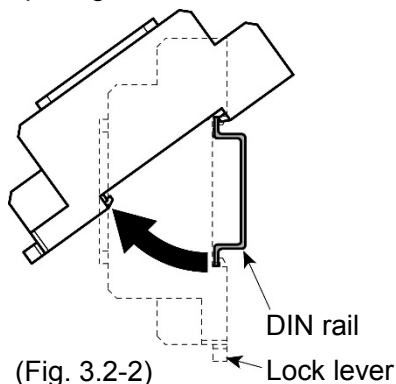

(Fig. 3.2-2)

# 4. Wiring



## Warning


Turn the power supply to the instrument off before wiring or checking. Working on or touching the terminal with the power switched on may result in severe injury or death due to electrical shock.

### 4.1 Lead Wire Solderless Terminal

Use a solderless terminal with an insulation sleeve in which an M3 screw fits as shown below. The torque should be 0.63 N·m.


Solderless Terminal	Manufacturer	Model
Y-type	Nichifu Terminal Industries Co., Ltd.	TMEV1.25Y-3
	Japan Solderless Terminal MFG Co., Ltd.	VD1.25-B3A
Ring-type	Nichifu Terminal Industries Co., Ltd.	TMEV1.25-3
	Japan Solderless Terminal MFG Co., Ltd.	V1.25-3

Y-type(Scale: mm)

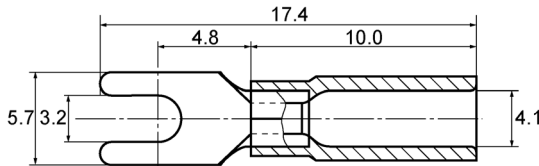

(Fig. 4.1-1)


Ring-type(Scale: mm)

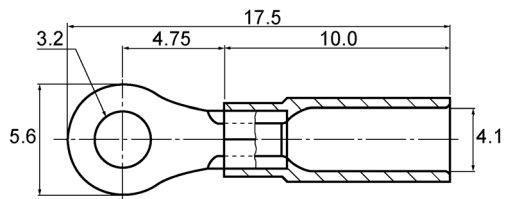

(Fig. 4.1-2)


### 4.2 Circuit Configuration

#### SGJ, SGJL

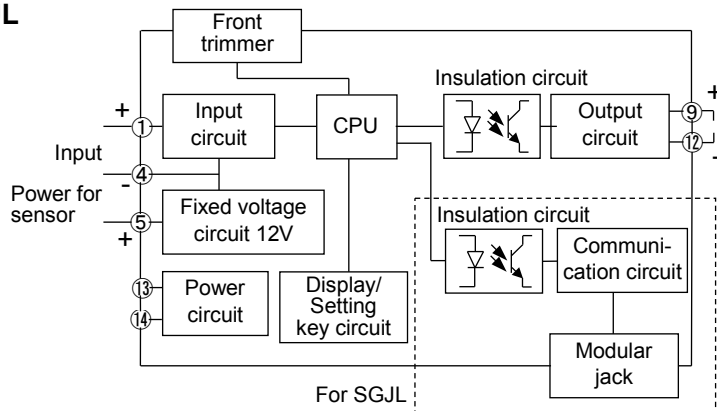

(Fig. 4.2-1)


#### SGJW

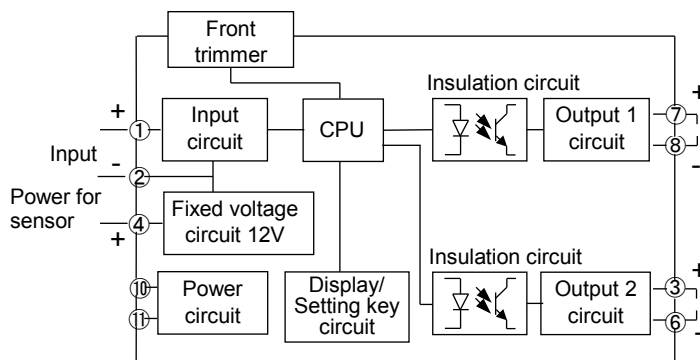

(Fig. 4.2-2)


### 4.3 Terminal Arrangement

SGJ

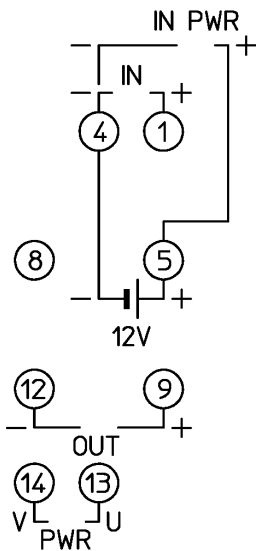


(Fig. 4.3-1)

SGJL

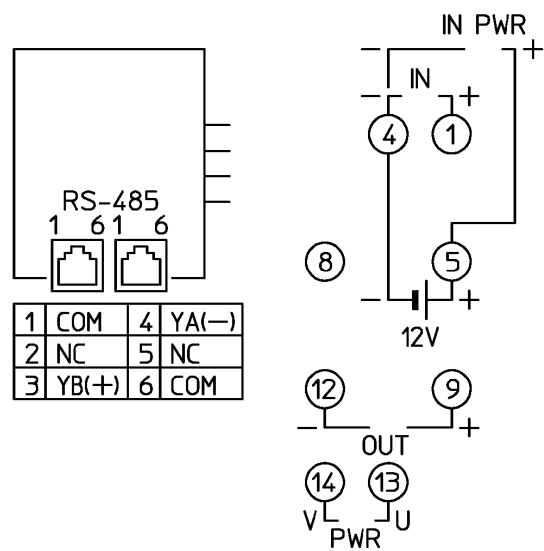

(Fig. 4.3-2)

SGJW

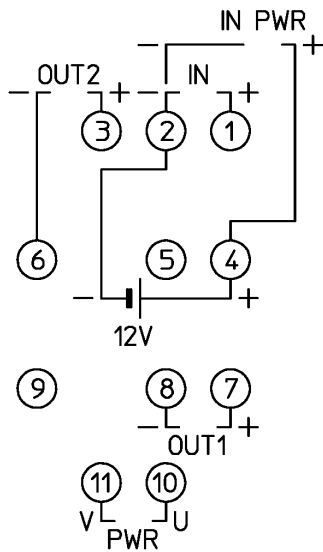

(Fig. 4.3-3)

PWR	Power supply 100 to 240 V AC
OUT(OUT1)	Output or Output 1 (for SGJW)
OUT2	Output 2 (for SGJW)
IN	Input
IN PWR	Power for sensor 12 V DC
RS-485	Serial communication (for SGJL)

## 4.4 Wiring



### Warning

- For 100 to 240 V AC, if the AC power source is connected to incorrect terminals, the instrument will be burnt out.

#### (1) Power Source Wiring

SGJ, SGJL: Use terminals ⑬, ⑭ for the power supply to the instrument.

SGJW: Use terminals ⑩, ⑪ for the power supply to the instrument.

#### (2) Output Wiring

SGJ, SGJL: Use terminals ⑨(+), ⑫(-) for the output wiring.

SGJW: Output 1: Use terminals ⑦(+), ⑧(-) for Output 1 wiring.


Output 2: Use terminals ③(+), ⑥(-) for Output 2 wiring.

#### (3) Input Wiring

SGJ, SGJL: Use terminals ①, ④, ⑤ for the input wiring.


SGJW: Use terminals ①, ②, ④ for the input wiring.

Open collector  
SGF, SGFL

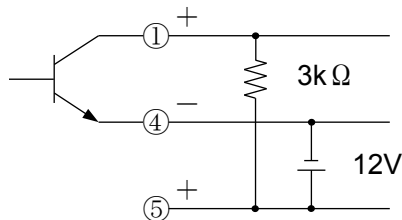


(Fig. 4.4-1)

SGFW

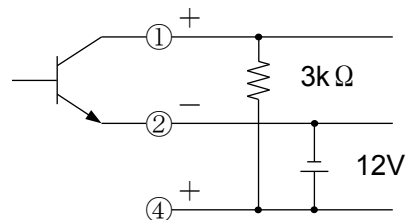


(Fig. 4.4-2)

Voltage pulse  
SGF, SGFL

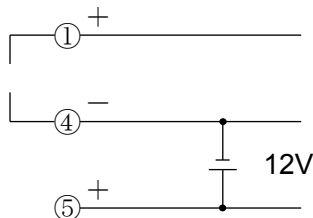


(Fig. 4.4-3)

SGFW

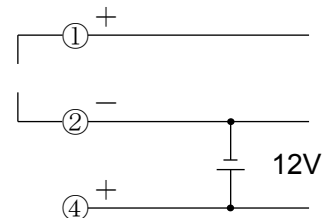


(Fig. 4.4-4)

Mechanical contact  
SGF, SGFL

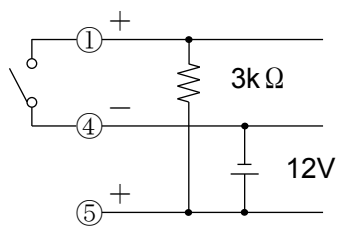


(Fig. 4.4-5)

SGFW

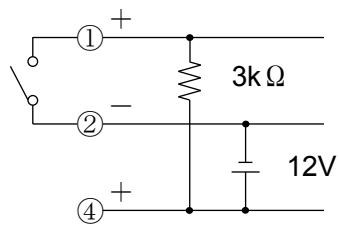


(Fig. 4.4-6)

Line driver  
SGF, SGFL

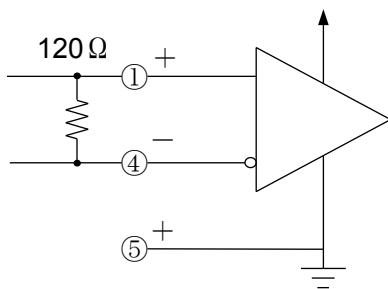

(Fig. 4.4-7)


SGFW

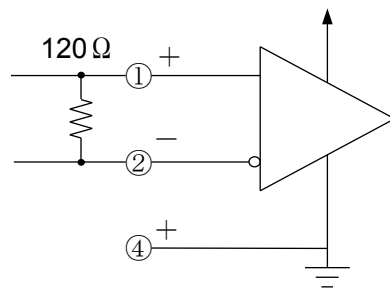

(Fig. 4.4-8)


(4) Communication Wiring

For the SGJL, connect the SGJL to SGJL using the provided cable.

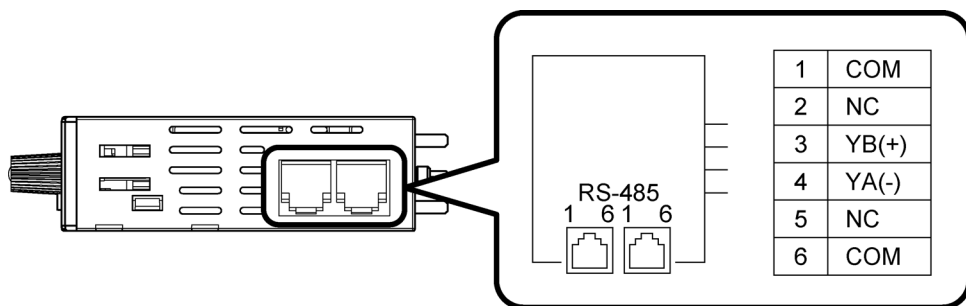

(Fig. 4.4-9)

# 5. Display Mode

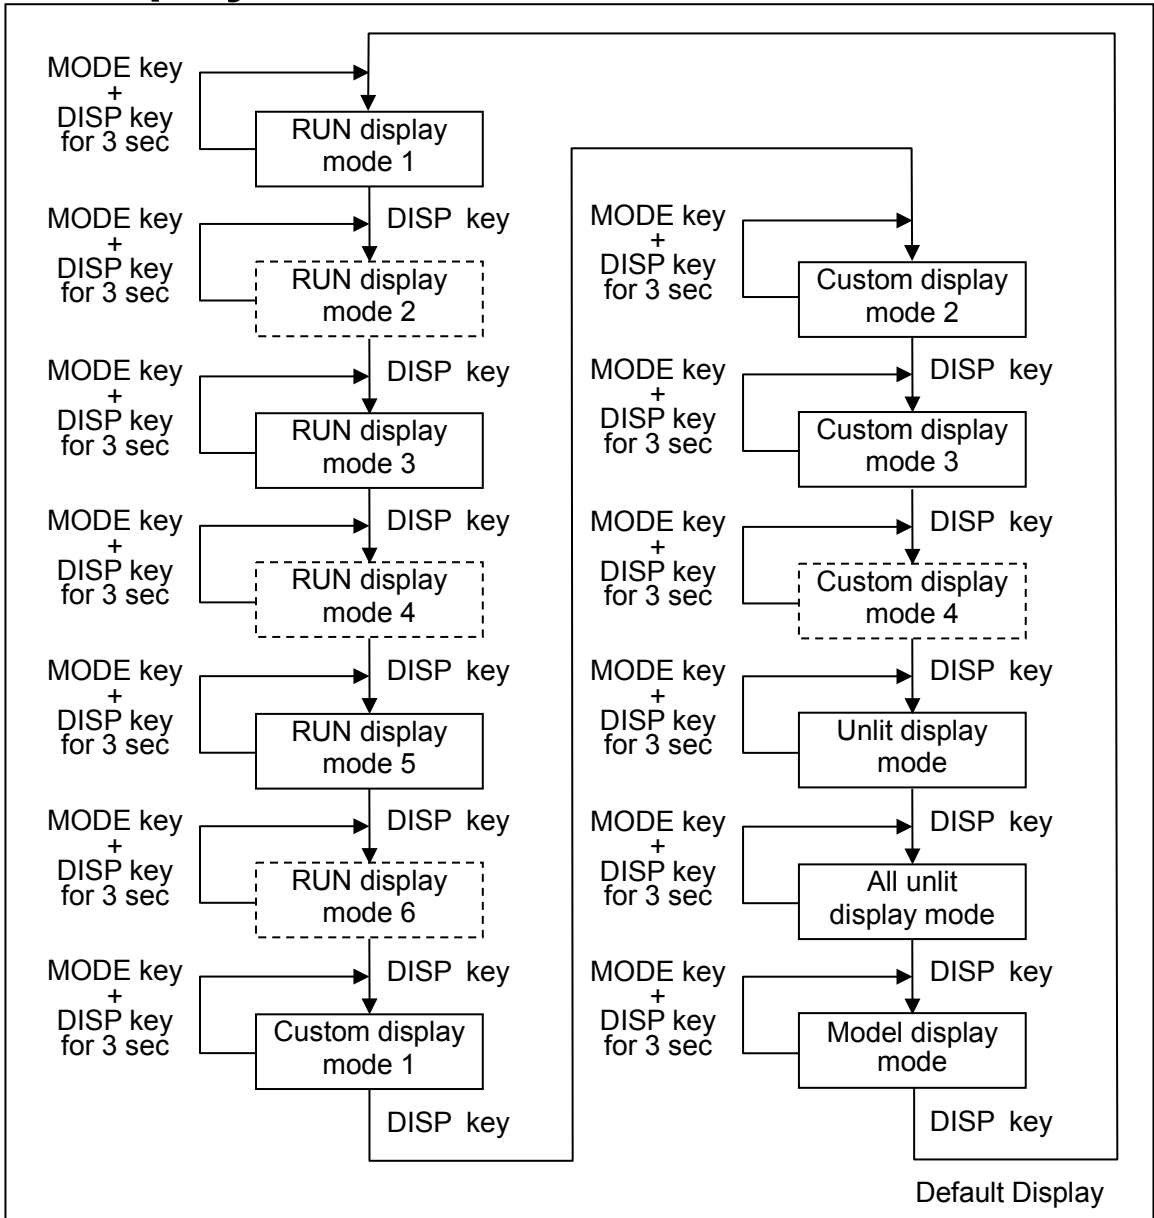

- [Dashed Box] : Available only for the SGJW.

## Default Display:

If the MODE and DISP keys (in that order) are pressed together for approx. 3 seconds in any display mode, the display mode will become the Default Display.

Once the Default Display is set, the DISP key will be in lock status.

If the DISP key is pressed for approx. 3 seconds on the Default Display, the key lock status will be cancelled.

If the DISP key is pressed while the DISP key is in lock status, Multi-Display A indicates **LOCK**.


<b>RUN display mode 1:</b>	Multi-Display A indicates an input value, and Multi-Display B indicates Output 1 value.
<b>RUN display mode 2:</b>	Multi-Display A indicates an input value, and Multi-Display B indicates Output 2 value.
<b>RUN display mode 3:</b>	Multi-Display A indicates an input value, and Multi-Display B is unlit.
<b>RUN display mode 4:</b>	Multi-Display A indicates Output 1 value, and Multi-Display B indicates Output 2 value.
<b>RUN display mode 5:</b>	Multi-Display A is unlit, and Multi-Display B indicates Output 1 value.
<b>RUN display mode 6:</b>	Multi-Display A is unlit, and Multi-Display B indicates Output 2 value.
<b>Custom display mode 1:</b>	Multi-Display A indicates characters set in [Multi-Display A]. Multi-Display B indicates characters set in [Multi-Display B].
<b>Custom display mode 2:</b>	Multi-Display A indicates an input value. Multi-Display B indicates characters set in [Multi-Display B].
<b>Custom display mode 3:</b>	Multi-Display A indicates an Output 1 value. Multi-Display B indicates characters set in [Multi-Display B].
<b>Custom display mode 4:</b>	Multi-Display A indicates an Output 2 value. Multi-Display B indicates characters set in [Multi-Display B].
<b>Unlit display mode:</b>	Multi-Display A and B are unlit, and the Input indicator A lights up. Alarm indicator A lights up if they are under the conditions of lighting.
<b>All unlit display mode:</b>	All displays and indicators are unlit. Alarm indicator A and B do not light up even if they are under the conditions of lighting.
<b>Model display mode:</b>	Multi-Display A indicates a model name, and Multi-Display B indicates an input code and output code.




# 6. Setting Mode

## 6.1 Display Transition in Setting Mode

- : Available only for the SGJW.
- : Available only for the SGJL.
- If the MODE key is pressed and held down for approx. 5 seconds in each setting mode, the unit will move to the Default Display.

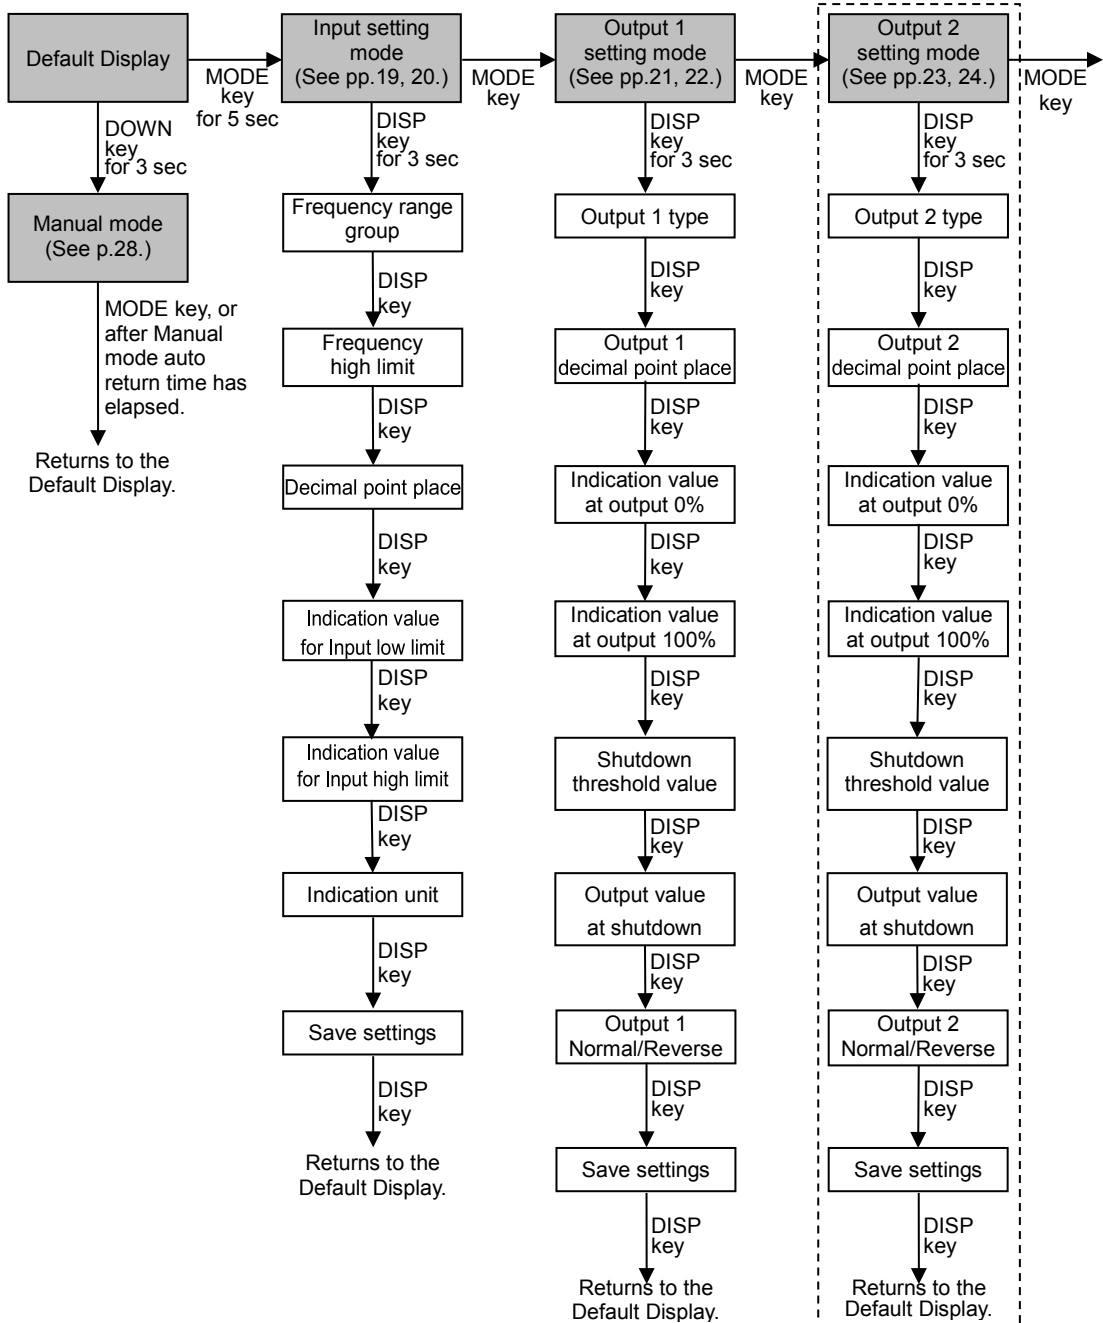

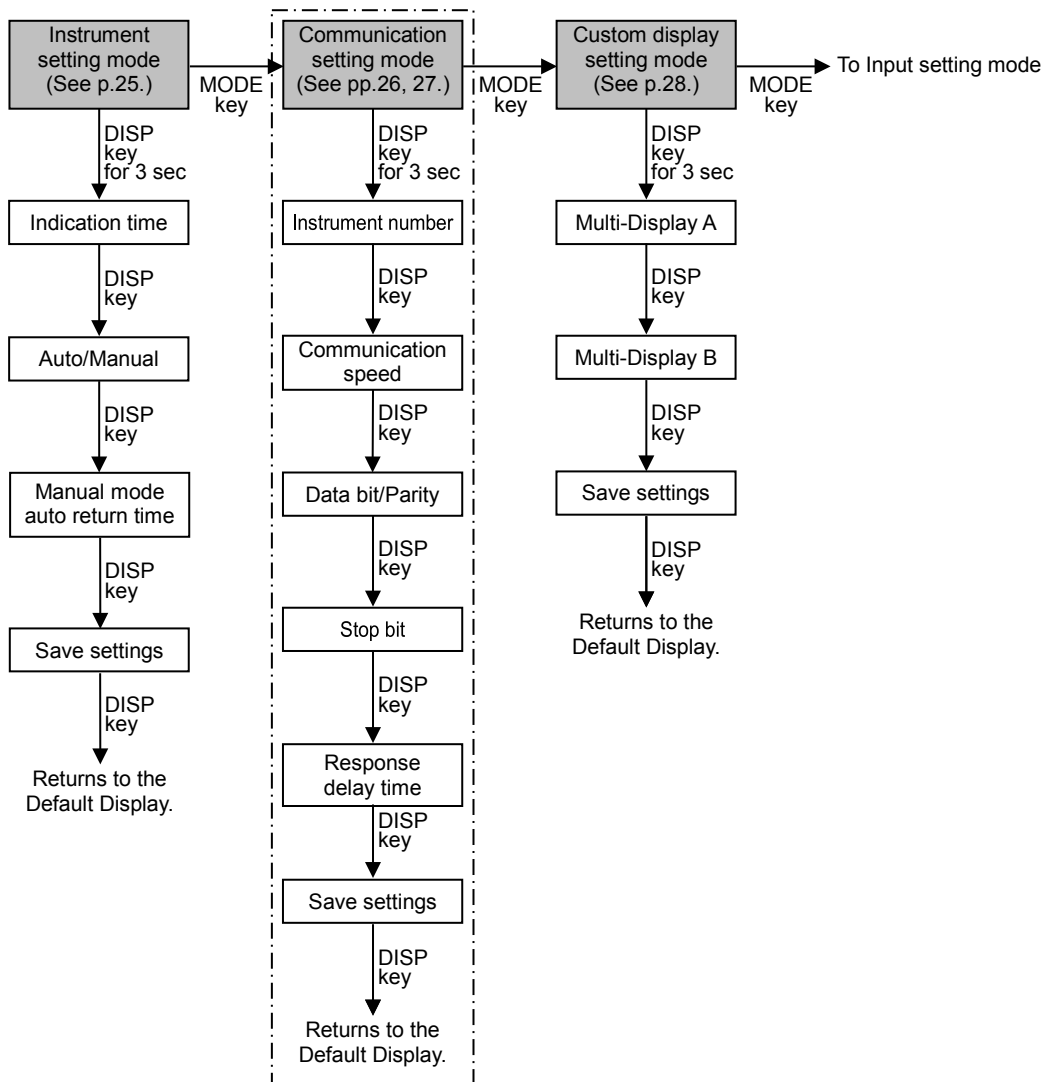

## 6.2 Input Setting Mode

### Frequency Range group

Selects the frequency range group.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Ultra-low frequency	HZSE	MHZ	Low frequency HZSE
Low frequency		HZ	
Frequency		KHZ	

### Frequency High Limit

Sets the frequency high limit.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Ultra-low frequency 10 to 9999 mHz	HZSE	Set value	9999 Hz 9999 9999
Low frequency 1 to 9999 Hz			
Frequency 1 to 100 kHz			

### Decimal Point Place

Selects the decimal point place.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No decimal point	9999	9999	No decimal point 9999 9999
1 digit after decimal point		9999.	
2 digits after decimal point		9999.00	
3 digits after decimal point		9999.000	

### Indication Value for Input Low Limit

Sets the indication value for input low limit.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1999 to Indication value for input high limit	9999	Set value	0 9999 9999

### Indication Value for Input High Limit

Sets the indication value for input high limit.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Indication value for input low limit to 9999	9999	Set value	Frequency high limit 9999 9999

### Indication Unit

Selects the unit for indication.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No unit	NONE	NONE	No unit NONE NONE
%		PER	
mA		MA	
V		V	
°C		C	

### Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save	SAVE	YES	Save SAVE YES
Not save		NO	

### 6.3 Output 1 Setting Mode

#### Output 1 Type

Selects Output 1 type.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
4 to 20 mA	0000	4000	4 to 20 mA 0000 4200
0 to 20 mA		0000	
0 to 16 mA		0160	
2 to 10 mA		2100	
0 to 10 mA		0100	
0 to 10 mV		0100	
0 to 100 mV		00100	
0 to 1 V		0001	
0 to 5 V		0050	
1 to 5 V		1050	
0 to 10 V		0010	
-5 to 5 V *		5550	

\* Not available for the SGJW.

#### Output 1 Decimal Point Place

Selects a decimal point place for Output 1.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No decimal point	0000	0000	2 digits after decimal point 00.00 00.00
1 digit after decimal point		00.00	
2 digits after decimal point		00.00	
3 digits after decimal point		000.0	

#### Indication Value at Output 0%

Sets an indication value at the time of output 0%. [See (Table 6.3-1) on p.20.]

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1999 to Indication value at output 100%	0000	Set value	4.00 00.00 00.00

#### Indication Value at Output 100%

Sets an indication value at the time of output 100%.  
[See (Table 6.3-1) on p.20.]

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Indication value at output 0% to 9999	0000	Set value	20.00 00.00 00.00

(Table 6.3-1)

Output Range	Indication value at output 0%	Indication value at output 100%
4 to 20 mA	4.00	20.00
0 to 20 mA	0.00	20.00
0 to 16 mA	0.00	16.00
2 to 10 mA	2.00	10.00
0 to 10 mA	0.00	10.00
0 to 10 mV	0.0	10.0
0 to 100 mV	0.0	100.0
0 to 1 V	0.00	1.00
0 to 5 V	0.00	5.00
1 to 5 V	1.00	5.00
0 to 10 V	0.00	10.00
-5 to 5 V	-5.0	5.0

### Shutdown Threshold Value

Sets the input value for the shutdown threshold.

If an input value is lower than this point, the value set in [Output value at shutdown] will be output.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0 to 10% FS		Set value	0 

### Output Value at Shutdown

If any inputs lower than the [Shutdown Threshold Value] are received, the value set here will be output.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-5 to 105%		Set value	0% 

### Output 1 Normal/Reverse

Selects either Normal mode or Reverse mode for Output 1 status.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Normal			Normal 
Reverse			

### Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save			Save 
Not save			

## 6.4 Output 2 Setting Mode

Available only for the SGJW.

### Output 2 Type

Selects Output 2 type.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
4 to 20 mA			4 to 20 mA          
0 to 20 mA			
0 to 16 mA			
2 to 10 mA			
0 to 10 mA			
0 to 10 mV			
0 to 100 mV			
0 to 1 V			
0 to 5 V			
1 to 5 V			
0 to 10 V			

### Output 2 Decimal Point Place

Selects the decimal point place for Output 2.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No decimal point			2 digits after decimal point    
1 digit after decimal point			
2 digits after decimal point			
3 digits after decimal point			

### Indication Value at Output 0%

Sets an indication value at the time of output 0%.

[See (Table 6.4-1) on p.22.]

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1999 to Indication value at output 100%		Set value	4.00  

### Indication Value at Output 100%

Sets an indication value at the time of output 100%.

[See (Table 6.4-1) on p.22.]

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Indication value at output 0% to 9999		Set value	20.00  

(Table 6.4-1)

Output Range	Indication value at output 0%	Indication value at output 100%
4 to 20 mA	4.00	20.00
0 to 20 mA	0.00	20.00
0 to 16 mA	0.00	16.00
2 to 10 mA	2.00	10.00
0 to 10 mA	0.00	10.00
0 to 10 mV	0.0	10.0
0 to 100 mV	0.0	100.0
0 to 1 V	0.00	1.00
0 to 5 V	0.00	5.00
1 to 5 V	1.00	5.00
0 to 10 V	0.00	10.00

### Shutdown Threshold Value

Sets the input value for the shutdown threshold.

If an input value is lower than this point, the value set in [Output value at shutdown] will be output.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0 to 10% FS		Set value	0 

### Output Value at Shutdown

When any inputs lower than the [Shutdown Threshold Value] are received, the value set here will be output.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-5 to 105%		Set value	0% 

### Output 2 Normal/Reverse

Selects either Normal mode or Reverse mode for Output 2 status.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Normal			Normal 
Reverse			

### Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save			Save 
Not save			



## 6.5 Instrument Setting Mode

### Indication Time

Sets duration from no operation until indication (of Multi-Display A, Multi-Display B, and each action indicator) turns off.

They remain lit during setting mode or in the event of an input error.

When set to 00.00, they remain lit.

After indication time has elapsed, and if any key is pressed while they are unlit, they will light up again.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
00 : 00 to 60 : 00 (Minutes : Seconds) 00 : 00 ..... Continuous 00 : 01 to 60 : 00..Indication time		Set value	30 : 00 (Minutes : Seconds)  

### Auto/Manual

If AUTO is selected, the output value will be output corresponding to the input value.

When MANUAL is selected, the unit can enter Manual mode. The output value set in Manual mode will be output.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Auto			Manual  
Manual			

### Manual Mode Auto Return Time

Sets duration from manual mode until the unit automatically returns to the Default Display.

If set to 0 (zero), auto return will not occur.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0 to 60 minutes		Set value	30 minutes  

### Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save			Save  
Not save			

## 6.6 Communication Setting Mode

Available only for the SGJL.

### Instrument Number

Sets an instrument number.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
1 to 247		Set value	1 

### Communication Speed

Selects the communication speed.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
9600 bps			38400 bps 
19200 bps			
38400 bps			

### Data bit/Parity

Selects data bit and parity.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
8 bits/No parity			8 bits/Odd 
8 bits/Even			
8 bits/Odd			

### Stop Bit

Selects stop bit.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
1 bit			1 bit 
2 bits			





### Response Delay Time

Response from the instrument can be delayed after receiving command from the host computer.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0 to 1000 ms		Set value	10 ms 

## Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save			Save 
Not save			

## 6.7 Custom Display Setting Mode

Customizes characters to be indicated on the Multi-Display A and B (\*).  
Use alphanumeric characters and symbols.

(e.g.) FLOW, TEMP, No.1, No.2

(\*) Number of characters which can be indicated differs depending on the display mode.

Refer to Section '5. Display Mode' (pp.13, 14).

- If Custom display mode 1 is selected:  
Up to 8 characters can be displayed in total for both Multi-Display A and B.
- If any of Custom display mode 2 to 4 is selected:  
Up to 4 characters can be displayed on the Multi-Display B.

Can be set from the thousands digit of the display.

Digits can be selected with the MODE key.

### Multi-Display A

Characters for the Multi-Display A can be customized.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
A to Z, 0 to 9, /, -, ., (Blank)		Set value	AAAA 

### Multi-Display B

Characters for the Multi-Display B can be customized.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
A to Z, 0 to 9, /, -, ., (Blank)		Set value	AAAA 

### Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save			Save 
Not save			

## 6.8 Manual Mode

If MANUAL is selected in [Auto/Manual] in Instrument setting mode, press the DOWN key for 3 seconds. The unit can enter Manual mode.

At this time, Multi-Display A indicates Output 1 value, and Multi-Display B indicates Output 2 value.

The output value can be set by the UP or DOWN key.

The output value will be lit while setting.

By pressing the DISP key, the desired output can be selected. and the desired output flashes.

By pressing the MODE key in Manual mode, or after Manual mode auto return time has elapsed, the unit returns to the Default Display, and outputs the output value corresponding to the input value.

# 7. Adjustment

Performs the output zero and span adjustments.

For this instrument, the output adjustment has already been completed when shipped.

If the instrument is used with the ordered Input/Output spec, the adjustment is not required.

However, for calibration, or for the fine adjustment of the SGJ to which any equipment is connected, perform the adjustment.

Connect a pulse generator to the input terminals of this instrument.

Connect a digital multimeter to the output terminals.

## 7.1 Basic Operation of Adjustment

Use the following trimmers on the front panel for adjustment.

Output 1 Zero: Adjusts the value of Output 1 Zero.

Output 1 Span: Adjusts the value of Output 1 Span.

Output 2 Zero: Adjusts the value of Output 2 Zero. (for SGJW)

Output 2 Span: Adjusts the value of Output 2 Span. (for SGJW)

## 7.2 Adjustment

### 7.2.1 Output 1 Adjustment

The following outlines the procedure for Output 1 adjustment.

- ① Enter the value corresponding to output 0%, and adjust the value using the 'Output 1 Zero' trimmer while viewing the output value (on the digital multimeter).
- ② Enter the value corresponding to output 100%, and adjust the value using the 'Output 1 Span' trimmer while viewing the output value (on the digital multimeter).
- ③ Enter the value corresponding to output 0% again, and confirm the output value (on the digital multimeter).
- ④ If the value corresponding to output 0% is not at 0%, repeat steps ① to ③ again.

### 7.2.2 Output 2 Adjustment

The procedure for Output 2 adjustment is the same as that of Output 1 adjustment.


Use Output 2 Zero and Span trimmers for adjustment.


# 8. Operation

## 8.1 Indication after Power-on

After the power is turned on, the instrument is switched to warm-up status for 3 seconds. Multi-Display A indicates a model name, and Multi-Display B indicates the input code (for the thousands and hundreds digits), output 1 code (for the tens digit) and output 2 code (for the ones digit).

(e.g.) SGJW-F011-0-0

Multi-Display A: 

Multi-Display B: 

A value corresponding to input 0% will be output for Output 1 and Output 2.

## 8.2 Operation

After warm-up status, the unit enters display mode.

The input signal selected in [Input type] will be converted to the output selected in [Output 1 type] and [Output 2 type].

### 8.2.1 Input Indication Range

The measured value is indicated within the following range:

[Indication value for Input low limit] to  
[Indication value for Input high limit + (Indication value for Input high limit –  
Indication value for Input low limit) x 10%]

For a value higher than 10000, the lower 4 digits will flash.

When exceeding the indication range,  will flash.

If pulse is absent, 0 (zero) will flash.

The placement of the decimal point follows the selection.

### 8.2.2 Indication Range of Output 1 and Output 2

The output value is indicated within the following range:

[Indication value at output 0% – (Indication value at output 100% – Indication  
value at output 0%) x 10%] to  
[Indication value at output 100% + (Indication value at output 100% – Indication  
value at output 0%) x 10%]

However, for a value higher than (and including) 10000, the lower 4 digits will flash.  
(The placement of the decimal point follows the selection.)

### 8.2.3 Indication Time

After the preset indication time has elapsed, Multi-Display A, Multi-Display B and each action indicator are turned OFF. They light up again if any key is pressed.

They remain lit in setting mode or in the event of an input error.

If the indication time is set to 00:00, they will remain lit.

### 8.2.4 Detecting Unconnected Sensor

If pulses are not detected during the detection time-out below, the input will default to the initial status (0 Hz).

Multi-Display A or B will flash 0 (zero) when it indicates an input value.

Detection time-out: Ultra-low frequency: 1000 seconds

Low frequency: 100 seconds

Frequency: 1 second

# 9. Specifications

## Input Specifications

<b>Open collector</b>	Frequency range: 0.001 Hz to 100 kHz Minimum pulse width: 4 $\mu$ s min. (for both ON and OFF) Detecting voltage/current: Approx. 12 V/4 mA Detecting level: At ON: 200 $\Omega$ max./0.8 V max. At OFF: 100 k $\Omega$ min./11 V min.
<b>Voltage pulse</b>	Frequency range: 0.001 Hz to 100 kHz Minimum pulse width: 4 $\mu$ s min. (for both ON and OFF) Waveform: Square, sine waveform or similar Detecting level: Low level 1 V DC max. High level 2 V DC min. Input impedance: 100 k $\Omega$ min. Input amplitude: 2 V to 50 Vp-p At OFF: 100 k $\Omega$ min.
<b>Mechanical contact</b>	Frequency range: 0.001 Hz to 30 Hz Minimum pulse width: 10 ms min. (for both ON and OFF) Action input condition: At ON: 200 $\Omega$ max. At OFF: 100 k $\Omega$ min.
<b>Line driver</b>	Frequency range: 0.001 Hz to 100 kHz Receiver: RS-422 compliant Minimum pulse width: 5 $\mu$ s min. (for both ON and OFF) Waveform: Square

## Output 1 Specifications

<b>Direct current</b>	<b>Output Range</b>	<b>Allowable load resistance</b>	<b>Zero adjustment range</b>	<b>Span adjustment range</b>
	4 to 20 mA	750 $\Omega$ max.	-5 to 5%	95 to 105%
	0 to 20 mA*	750 $\Omega$ max.		
	0 to 16 mA*	900 $\Omega$ max.		
	2 to 10 mA	1500 $\Omega$ max.		
	0 to 10 mA*	1500 $\Omega$ max.		
* 0 mA or less: Out of base accuracy				
<b>DC voltage</b>	<b>Output Range</b>	<b>Allowable load resistance</b>	<b>Zero adjustment range</b>	<b>Span adjustment range</b>
	0 to 10 mV <sup>*1</sup>	10 k $\Omega$ min.	-5 to 5%	95 to 105%
	0 to 100 mV <sup>*1</sup>	100 k $\Omega$ min.		
	0 to 1 V <sup>*1</sup>	1000 $\Omega$ min.		
	0 to 5 V <sup>*1</sup>	5000 $\Omega$ min.		
	1 to 5 V	5000 $\Omega$ min.		
	0 to 10 V <sup>*1</sup>	10 k $\Omega$ min.		
	-5 to 5 V <sup>*2</sup>	10 k $\Omega$ min.		
<sup>*1</sup> : 0 V or less: Out of base accuracy <sup>*2</sup> : Not available for the SGJW.				

## Output 2 Specifications

<b>Direct current</b>	<b>Output Range</b>	<b>Allowable load resistance</b>	<b>Zero adjustment range</b>	<b>Span adjustment range</b>
	4 to 20 mA	750 $\Omega$ max.	-5 to 5%	95 to 105%
	0 to 20 mA*	750 $\Omega$ max.		
	0 to 16 mA*	900 $\Omega$ max.		
	2 to 10 mA	1500 $\Omega$ max.		
	0 to 10 mA*	1500 $\Omega$ max.		
* 0 mA or less: Out of base accuracy				
<b>DC voltage</b>	<b>Output Range</b>	<b>Allowable load resistance</b>	<b>Zero adjustment range</b>	<b>Span adjustment range</b>
	0 to 10 mV *	10 k $\Omega$ min.	-5 to 5%	95 to 105%
	0 to 100 mV *	100 k $\Omega$ min.		
	0 to 1 V *	1000 $\Omega$ min.		
	0 to 5 V *	5000 $\Omega$ min.		
	1 to 5 V	5000 $\Omega$ min.		
0 to 10 V *	10 k $\Omega$ min.			
* 0 V or less: Out of base accuracy				

## Performance

<b>Base accuracy (at 25°C)</b>	$\pm 0.1\%$ of each input span
<b>Temperature coefficient</b>	$\pm 0.015\%$ /°C
<b>Response time</b>	(250 ms + Pulse cycle + Output value update cycle + Frequency sampling period) max.
<b>Output value update cycle</b>	125 ms
<b>Indication accuracy</b>	Base accuracy $\pm 1$ digit

## General Structure

<b>Dimensions</b>	22.5 x 89 x 70 mm (W x H x D)
<b>Weight</b>	1 output: Approx. 80 g (excluding socket) 2 outputs: Approx. 90 g (excluding socket)
<b>Mounting</b>	DIN rail
<b>Case</b>	Flame-resistant resin, Color: Black
<b>Front panel</b>	Polycarbonate

## Installation Specifications

<b>Power supply</b>	100 to 240 V AC 50/60 Hz
<b>Allowable voltage range</b>	85 to 264 V AC
<b>Power consumption</b>	SGJ: Approx. 9 VA SGJW: Approx. 12 VA SGJL: Approx. 10 VA
<b>Ambient temperature</b>	-10 to 55°C (Non-condensing, no icing)
<b>Ambient humidity</b>	35 to 85 %RH (Non-condensing)



### Serial Communication (for SGJL)




<b>Operation from an external computer</b>	Reading and setting of various set values Reading of the input value and action status Function change
<b>Communication line</b>	EIA RS-485
<b>Communication method</b>	Half-duplex communication
<b>Communication speed</b>	9600, 19200, 38400 bps (Selectable by keypad) (Factory default: 38400 bps)
<b>Synchronization method</b>	Start-stop synchronization
<b>Communication protocol</b>	Modbus RTU
<b>Start bit</b>	1 bit
<b>Data bit</b>	8 bits
<b>Parity</b>	Even/Odd/No parity (Selectable by keypad) (Factory default: Odd)
<b>Stop bit</b>	1 bit or 2 bits (Selectable by keypad) (Factory default: 1 bit)
<b>Response delay time</b>	Response from the instrument can be delayed after receiving command from the host computer. 0 to 1000 ms (Factory default: 10 ms)

### Standard Function


<b>Power failure countermeasure</b>	The setting data is backed up in the non-volatile IC memory.
<b>Self-diagnosis</b>	The CPU is monitored by a watchdog timer, and if an abnormal status occurs, the instrument is switched to warm-up status, turning all outputs OFF.

# 10. Troubleshooting

## 10.1 Indication

Problem	Possible Cause	Solution
 flashes when Multi-Display A or B indicates an input value.	Input signal source may be disconnected.	Check the input signal source.
Multi-Display A or B flashes  when Multi-Display A or B indicates an input value.	The sensor may be disconnected.	Replace with a new sensor.
	Check whether the sensor is securely mounted to the input terminals of this instrument.	Connect the sensor terminals to the instrument input terminals securely.
	If pulses are not detected for a fixed time,  will flash. Input signal source may be disconnected.	Check the input signal source.
4-digits are flashing.	If a value higher than (and including) 10000 is entered, the lower 4 digits will flash.	Check the input signal source.
Multi-Display A or B is irregular or unstable when it indicates an input value.	There may be equipment that interferes with or makes noise near the instrument.	Keep the instrument clear of any potentially disruptive equipment.
Displays and indicators are unlit. If any key is pressed, they will light up.	The Indication Time (p.25) is set to any value other than 00 : 00. (Factory default is 30 : 00.)	To indicate continuously, set the Indication Time (p.25) to "00 : 00".

## 10.2 Key Operation

Problem	Possible Cause	Solution
If the DISP key is pressed, Multi-Display A indicates  , and the display mode cannot be switched.	The DISP key is in locked status.	Press the DISP key for approx. 3 seconds to release the key lock.

### 10.3 Operation

Problem	Possible Cause	Solution
When Multi-Display A or B indicates an input value, the input value does not change.	The sensor may be out of order.	Replace with the new sensor.
	Check whether input and output wires are securely connected to the I/O terminals of the instrument.	Ensure that input and output wires are securely connected to the I/O terminals of the instrument.
	Check whether the wiring of input and output are correct.	Wire them correctly.
No output	Selections in [Output 1 type (p.21)], [Output 1 Normal/Reverse (p.22)], [Output 2 type (p.23)] or [Output 2 Normal/Reverse (p.24)] may be incorrect.	Make a correct selection in [Output 1 type (p.21)], [Output 1 Normal/Reverse (p.22)], [Output 2 type (p.23)] or [Output 2 Normal/Reverse (p.24)].

# 11. Character Table

Please use the following factory default values for your reference.

## Display mode

Setting Item	Multi-Display A	Multi-Display B	Data
Default Display mode	Follows currently indicated display mode.		
RUN display mode 1	Input value	Output 1 value	
RUN display mode 2 *	Input value	Output 2 value	
RUN display mode 3	Input value	Unlit	
RUN display mode 4 *	Output 1 value	Output 2 value	
RUN display mode 5	Unlit	Output 1 value	
RUN display mode 6 *	Unlit	Output 2 value	
Custom display mode 1	AAAA	AAAA	
Custom display mode 2	Input value	AAAA	
Custom display mode 3	Output 1 value	AAAA	
Custom display mode 4 *	Output 2 value	AAAA	
Unlit display mode	Unlit	Unlit	
All unlit display mode	Unlit	Unlit	
Model display mode	Model	Input, Output codes	

\* Available only for the SGJW.

## Setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Input setting mode	ANNA	Unlit	
Output 1 setting mode	ANNA	Unlit	
Output 2 setting mode *	ANNA	Unlit	
Instrument setting mode	ANNA	Unlit	
Communication setting mode	ANNA	Unlit	
Custom display setting mode	ANNA	Unlit	

\* Available only for the SGJW.

## Input setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Frequency range group	HZS	HZ	
Frequency high limit	HZS	SSSS	
Decimal point place	SP	SSSS	
Indication value for Input low limit	SSS	SSSS	
Indication value for Input high limit	SSS	SSSS	
Indication unit	ANNA	NONE	
Save settings	SP	SSS	

### Output 1 setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Output 1 type	0000	4000	
Output 1 decimal point place	0000	0000	
Indication value at output 0%	0000	4000	
Indication value at output 100%	0000	2000	
Shutdown threshold value	5000	0000	
Output value at shutdown	5000	0000	
Output 1 Normal/Reverse	0000	NORM	
Save settings	SAVE	YES	

### Output 2 setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Output 2 type	0000	4000	
Output 2 decimal point place	0000	0000	
Indication value at output 0%	0000	4000	
Indication value at output 100%	0000	2000	
Shutdown threshold value	5000	0000	
Output value at shutdown	5000	0000	
Output 2 Normal/Reverse	0000	NORM	
Save settings	SAVE	YES	

### Instrument setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Indication time	0000	0000	
Auto/Manual	MANU	MANU	
Manual mode auto return time	0000	0000	
Save settings	SAVE	YES	

### Communication setting mode (SGJL)

Setting Item	Multi-Display A	Multi-Display B	Data
Instrument number	0000	0000	
Communication speed	0000	0000	
Data bit/Parity	0000	0000	
Stop bit	0000	0000	
Response delay time	0000	0000	
Save settings	SAVE	YES	

### Custom display setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Multi-Display A	0000	0000	
Multi-Display B	0000	0000	
Save settings	SAVE	YES	





\*\*\*\*\* Inquiries \*\*\*\*\*

For any inquiries about this unit, please contact our agency or the vendor where you purchased the unit after checking the following.

[Example]

- Model ----- SGJW-F011-0-0
- Serial number ----- 154F05000

In addition to the above, please let us know the details of the malfunction, or discrepancy, and the operating conditions.

**SHINKO TECHNOS CO., LTD.**  
**OVERSEAS DIVISION**

Head Office: 2-5-1, Senbahigashi, Minoo, Osaka, Japan

URL: <http://www.shinko-technos.co.jp/e/> Tel : +81-72-727-6100

E-mail: [overseas@shinko-technos.co.jp](mailto:overseas@shinko-technos.co.jp) Fax: +81-72-727-7006