


Standard indication with Control Panel Convenience





More space saved through compact design

Multi-input function enables process variety

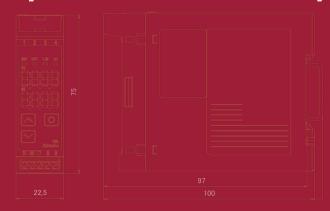

Expandable in accordance with your needs

Easily mountable

■ Model

| DCL-3 | 3 | A- | - 🗆 | ′□ | | , 🗆 🗆 🗆 | Series name: DCL-300 (W22.5 x H75 x D100 mm) | | |
|------------------|------------------|------|--------|--|--|-------------------------------------|--|--|--|
| Control action | Control action 3 | | | | | | PID | | |
| Alarm | | Α | | | | | Alarm type can be selected by keypad. (*1) | | |
| | | | R | | | | Relay contact:1a | | |
| Control output (| OU. | T) S | | | | | Non-contact voltage (for SSR drive): 12 V DC 15% | | |
| | | | Α | | | | Direct current: 4 to 20 mA DC | | |
| Input | | | | М | | | Multi-range (*2) | | |
| Dawar aunnb | | | | | | | 100 to 240 V AC (Standard) | | |
| Power supply | | | | | 1 | | 24V AC/DC(*3) | | |
| | | | | | | W(5A) | Heater burnout alarm output (5A) (*4) | | |
| | | | | | | W(10A) | Heater burnout alarm output (10A) (*4) | | |
| | | | | W(20A) | Heater burnout alarm output (20A) (*4) | | | | |
| Option | | | W(50A) | Heater burnout alarm output (50A) (*4) | | | | | |
| Option | | | ption | | DC | Heating/Cooling control output OUT2 | | | |
| | | | | C5 | Serial communication EIA RS-485 | | | | |
| | | | | | EA | External setting input | | | |
| | | | | | | El | Set value memory external selection | | |

- (*1) Alarm type (12 types and No alarm action) and status Energized/De-energized can be selected by keypad.
- (*2) Thermocouple, RTD, direct current and DC voltage can be selected by keypad.
- $(^*3) \ Standard \ supply \ voltage \ is \ 100 \ to \ 240 \ V \ AC. \ Enter \ "1" \ after \ the \ input \ code \ only \ when \ ordering \ 24 \ V \ AC/DC.$
- $(^\star\!4)$ For direct current output type, Heater burnout alarm output cannot be ordered.

Option Combination (O : Can be used together.)

| Option Code | W | DC | C5 | EA | El |
|-------------|---|----|----|----|----|
| W | | 0 | 0 | _ | _ |
| DC | 0 | | 0 | 0 | 0 |
| C5 | 0 | 0 | | 0 | 0 |
| EA | _ | 0 | 0 | | _ |
| El | _ | 0 | 0 | _ | |

■ Rated Scale

| | nput Type | Input Range | | |
|----------------|--|----------------------|----------------|--|
| | | -200∼1370 °C | -320~2500 °F | |
| | K | -199.9~400.0°C | -199.9~750.0°F | |
| | J | -200∼1000 °C | -320~1800 °F | |
| | R | 0~1760 °C | 0~3200 °F | |
| | S | 0~1760 °C | 0~3200 °F | |
| Thermocouple | В | 0~1820 °C | 0~3300 °F | |
| | E | -200∼800 °C | -320~1500 °F | |
| | Т | -199.9~400.0°C | -199.9~750.0°F | |
| | N | -200∼1300 °C | -320~2300 °F | |
| | PL-II | 0~1390 °C | 0~2500 °F | |
| | C(W/Re5-26) | 0~2315 °C | 0~4200 °F | |
| | D+100 | -199.9~850.0°C | -199.9~999.9°F | |
| RTD | Pt100 | -200∼850 °C | -300~1500 °F | |
| KID | JPt100 | -199.9~500.0°C | -199.9~900.0°F | |
| | JPI100 | -200∼500 °C | -300∼900 °F | |
| | 4~20mA DC [Externally mounted 50Ω shuntresistor] | -1999~9999 (*1) (*2) | | |
| Direct current | 0~20mA DC [Externally mounted 50Ω shuntresistor] | -1999~9999 (*1)(*2) | | |
| | 4~20mA DC [Built-in 50Ω shuntresistor] | -1999~9999 (*1) (*3) | | |
| | 0~20mA DC [Built-in 50Ω shuntresistor] | -1999~9999 (*1) (*3) | | |
| DC walta a | 0~1V DC | -1999~9999 (*1) | | |
| | 0~5V DC | -1999~9999 (*1) | | |
| DC voltage | 1~5V DC | -1999~9999 (*1) | | |
| | 0~10V DC | -1999~9999 (*1) | | |

- (*1) Scaling and decimal point place change are possible.
- (*2) Connect a 50Ω shunt resistor (sold separately) between input terminals.
- (*3) This input type has a built-in shunt resistor (50 Ω).


■ Standard Specifications


| Display | PV: Red 4-digits, character size; 7.4 x 4.0 mm (H x W) SV: Green 4-digits, character size; 7.4 x 4.0 mm (H x W) | | | | | | |
|-----------------------------------|--|--|--|--|--|--|--|
| Input | Thermocouple: K, J, R, S, B, E, T, N, PL-, C (W/Re5-26) External resistance: 100 Ω max. (For B input: 40 Ω max.) RTD : Pt100, JPt100 3-wire type (Allowable input lead wire resistance, 10 Ω max. per wire) Direct current : 0 to 20 mA DC, 4 to 20 mA DC 50 Ω shunt resistor (50 Ω shunt resistor must be connected between input terminals.) Allowable input current: 100 mA max. DC voltage : 0 to 1 V DC: | | | | | | |
| Accuracy (Setting, Indication) | Thermocouple : Within $\pm 0.2\%$ of each input span ± 1 digit, or within $\pm 2^{\circ}\mathbb{C}$ (4F), whichever is greater However, R or S input, 0 to $200^{\circ}\mathbb{C}$ (32 to $392^{\circ}\mathbb{F}$): Within $\pm 6^{\circ}\mathbb{C}$ (12F) B input, 0 to $300^{\circ}\mathbb{C}$ (32 to $572^{\circ}\mathbb{F}$): Accuracy is not guaranteed. K, J, E, T, N input, less than 0 (32F): Within $\pm 0.4\%$ of input span ± 1 digit, or $4^{\circ}\mathbb{C}$ (8F), whichever is greater Within $\pm 0.1\%$ of each input span 1 digit, or within $\pm 1^{\circ}\mathbb{C}$ (2F), whichever is greater Direct current, voltage: Within $\pm 0.2\%$ of each input span 1 digit | | | | | | |
| Input sampling period | 125ms | | | | | | |
| Control output (OUT) | Relay contact 1a : Control capacity: 3 A 250 V AC (resistive load), 1 A 250 V AC (inductive load cosø=0.4), Electrical life: 100,000 cycles Non-contact voltage (for SSR drive) : 12 V DC ±15%, Max. 40 mA DC (short circuit protected) Direct current : 4 to 20 mA DC, Load resistance: Max. 550 Ω Output accuracy : Within ±0.3% of output span, Resolution: 12000 | | | | | | |
| | Alarm output Alarm, Loop break alarm and Heater burnout alarm (W option) utilize common output terminals. Output: Open collector, Control capacity: 0.1 A 24 V DC | | | | | | |
| Event output (EVT) | Detects heater burnout, sensor burnout and actuator trouble. Loop break alarm time: 0 to 200 minutes Loop break alarm span: Thermocouple, RTD input: 0 to 150°C (*F) or 0.0 to 150.0°C (*F) Direct current, voltage input: 0 to 1500 (The placement of the decimal point follows the selection.) Output: Open collector, Control capacity: 0.1 A 24 V DC | | | | | | |
| Safety standards | UL: Power input rating 100 – 240 V AC, 24 V AC/DC File No. E159038 | | | | | | |
| Environment spec | RoHS directive compliant | | | | | | |
| Accessories included | Instruction manual excerpt When Heater burnout alarm output (W option) is ordered When Heater burnout alarm output (W option) is ordered When Heater burnout alarm output (W option) is ordered For rated current 5 A, 10 A, 20 A; CT (CTL-6-S-H): 1 piece For rated current 50 A; CT (CTL-12-S36-10L1U): 1 piece When Set value memory external selection (El option) is ordered: Connector harness AOJ 3 m: 1 length When External setting input (EA option) is ordered Connector harness AOJ 3 m: 1 length | | | | | | |
| Accessories sold separately | 50Ω shunt resistor for direct current input | | | | | | |
| Altitude | 2,000m or less | | | | | | |

Options


| ■ Options | | | | | | | |
|---|---|--|--|------------------------------------|-----------------------------------|--|--|
| Heater burnout alarm (W option) | Monitors heater current with current transformer (CT), and detects burnout. Rated current: 5A [W (5A)], 10A [W (10A)], 20A [W (20A)], 50A [W (50A)] (Please specify one.) Output: Open collector, Control capacity: 0.1 A 24 V DC | | | | | | |
| Serial communication (C5 option) | Communication line: Communication metho Synchronization metho Communication speed Data bit: Parity: Stop bit: Data format: Communication protocol Start bit Data bit | d: Start-stop synchror 2400/4800/9600/19 7, 8 (Factory defau Even/Odd/No parity | | . , , | d) | | |
| | Parity Stop bit | Even 1 | Even (No parity, Odd) 1 or 2 | No parity (Even, Odd) 1 or 2 | | | |
| Heating/Cooling control output (DC option) | | acteristics), Oil cooling | g (1.5th power of the linear charac A 24 V DC | teristics), Water cooling (2nd pow | ver of the linearcharacteristics) | | |
| Set value memory external selection (El option) | SV1 or SV2 can be selected by the external contact. Circuit current when closed: Approx. 2 mA | | | | | | |
| External setting input (EA option) | Setting signal: Allowable input: Input impedance: Input sampling period | Direct current 4 to 20 50 mA DC max. 50 max. 125 ms |) mA | | | | |


■ External Dimensions (Scale: mm)

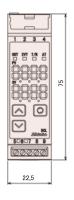

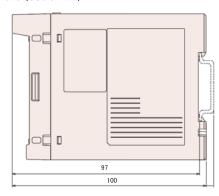


■ CT Dimensions (Scale: mm)

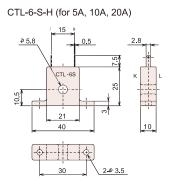


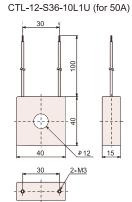

■ Terminal Arrangement

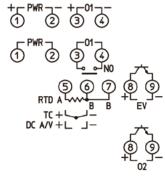

| 1 COM | 4 | YA(—) | l | ᇒ |
|---------|---|-------|--------|---------|
| 2 NC | 5 | NC | RS-485 | الكاالك |
| 3 YB(+) | 6 | COM |] ; | 1 6 1 6 |
| | | | СТ | 0 0 |
| | | | FΔ | +00- |
| | | | | |
| | | | EI | o o |

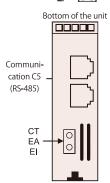


| PWR | Power supply: 100 to 240 V AC or 24 V AC/DC |
|--------|--|
| | For 24 V DC, ensure polarity is correct. |
| 01 | Control output OUT1 |
| TC | Thermocouple input |
| RTD | Resistance temperature detector input |
| DC | Direct current input, DC voltage input (*) |
| EV | Event output Outputs when Alarm, Loop break alarm or Heater burnout alarm output (W option) is ON. |
| O2 | Control output OUT2 [Heating/Cooling control output (DC option)] |
| RS-485 | Serial communication (C5 option) |
| СТ | Current transformer input [Heater burnout alarm output (W option)] |
| EA | External setting input (EA option) |
| El | Event input DI [Set value memory external selection (El option)] |
| | |

(*): If direct current input (Externally mounted 50 shunt resistor) is designated, connect a 50 shunt resistor (sold separately) between input terminals.

■ Recommended Ferrules and Tightening Torque

| Terminal number | Terminal screw | Ferrules with insulation sleeve | Conductor cross sections | Tightening torque | Crimping pliers |
|-----------------|---------------------------------------|------------------------------------|---------------------------|-------------------|--------------------------------|
| | AI 0.25-8 YE 0.2~0.25 mm ² | | | | |
| | | AI 0.34-8 TQ | 0.25~0.34 mm ² | | CRIMPFOX ZA 3 CRIMPFOX UD 6 |
| 1 to 4 M | M2.6 | AI 0.5-8 WH | 0.34~0.5 mm ² | 0.5~0.6N·m | |
| | IVIZ.0 | AI 0.75-8 GY | 0.5~0.75 mm ² | 0.5~0.614.111 | |
| | | AI 1.0-8 RD | 0.75~1.0 mm ² | | |
| | | AI 1.5-8 BK | 1.0~1.5 mm ² | | |
| | | AI 0.25-8 YE | 0.2~0.25 mm ² | | |
| 5 to 9 | M2.0 | AI 0.34-8 TQ | 0.25~0.34 mm ² | 0.22~0.25N·m | |
| | | AI 0.5-8 WH | 0.34~0.5 mm ² | | |

The ferrules and crimping pliers made by Phoenix Contact GMBH &CO are recommended.

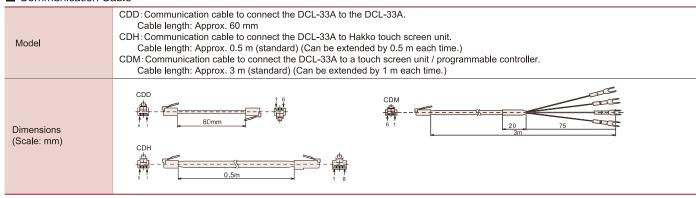

Configuration Example

■ When a PC monitors multiple DCL-33A units


By connecting to the PC, up to 31 points of temperature control can be monitored using a Shinko communication converter. (If PC's communication specification is RS-485, it is not necessary to use a communication converter.) SWM-JC001M is available as monitoring software

■ When a touch screen unit monitors multiple DCL-33A units

A maximum of 31 points of temperature control and monitoring can be carried out by connecting DCL-33A to the touch screen unit. The following touch screen units are available. Schneider Electric Japan Holdings Ltd.: SP series, GP series, LT series Hakko Electronics Co., Ltd.: V9 series, V8 series, TS series (For the communication cable, Shinko's specific cable is used.)


■ When using DCL-33A units as a programmable controller

By using Shinko programmable controller PCA1 or PCB1 (with C5 option) as a program setter in combination with DCL-33A (with C5 option), DCL-33A can also be used as a programmable controller for a maximum of 31 positions. (Set value digital transmission is possible.)

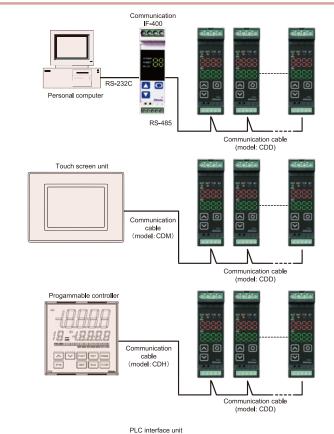

■ When using max. 95 DCL-33A units with the PLC

By connecting to the PLC via PLC interface unit SIF-600, a maximum of 95 DCL-33A units can be connected. Please make inquiries concerning the PLC compatible with SIF-600 to us or our agency.

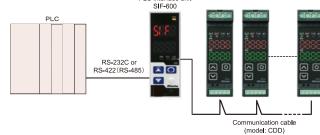



- To ensure safe and correct use, thoroughly read and understand the manual before using this instrument. This instrument is intended to be used for industrial machinery, machine tools and measuring equipment. Verify
- correct usage after purpose-of-use consultation with our agency or main office.

 (Never use this instrument for medical purposes with which human lives are involved.)

 External protection devices such as protection equipment against excessive temperature rise, etc. must be installed,
- as malfunction of this product could result in serious damage to the system or injury to personnel. Also proper periodic maintenance is required.

 This instrument must be used under the conditions and environment described in the manual. Shinko Technos Co.,
- Ltd. does not accept liability for any injury, loss of life or damage occurring due to the instrument being used under conditions not otherwise stated in this manual.
- · This catalog is as of July 2024 and its contents are subject to change without notice
- Photos used in this catalog do not show unit in operating status.
 If you have any inquiries, please consult us or our agency.

SHINKO TECHNOS CO., LTD. **OVERSEAS DIVISION**

Head Office: 2-5-1, Senbahigashi, Minoo, Osaka, 562-0035, Japan

Tel : +81-72-727-6100 Fax : +81-72-727-7006

URL : https://shinko-technos.co.jp/e/ : overseas@shinko-technos.co.jp E-mail

Caution with respect to Export Trade Control Ordinance

To avoid this instrument from being used as a component in, or as being utilized in the manufacture of weapons of mass destruction (i.e. military applications, military equipment, etc.), please investigate the end users and the final use of this instrument.

In the case of resale, ensure that this instrument is not illegally exported.